


PIONEER®

WYT-20U Inverter Series

For 9,000-36,000 BTU/hr Systems

Diamante Essenza (R-32) - WT Indoor and YN Outdoor

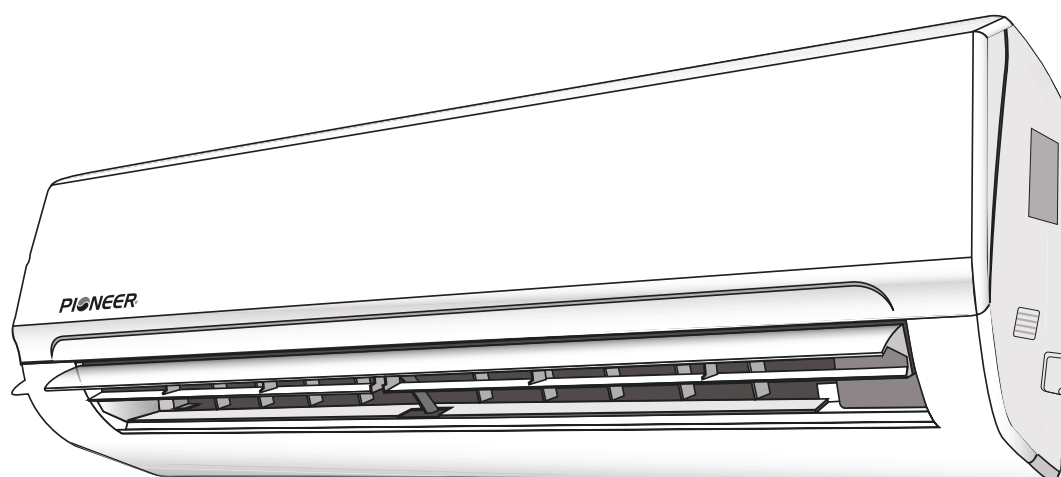

Service Manual

IMPORTANT NOTICE:

Be sure to save this manual for future reference.

CONTENTS

1. Important Notice	3
2. Maintenance Notes	4
3. R-32 Refrigerant Notes	7
4. Product Overview	13
5. Refrigerant Piping Specifications	18
6. Maintenance	19
7. Troubleshooting	21
8. Remote Control	58
9. Emergency Manual Button	61
10. Wiring Diagrams	62

Important Notice



This service manual is intended for individuals with adequate electrical, electronic, and mechanical experience. Any attempt to repair the appliance may result in personal injury and property damage. The manufacturer or seller is not responsible for the interpretation of this information, nor does it assume any liability in connection with its use.

Information, specifications, and parameters are subject to change without prior notice due to technical modifications or improvements. Actual specifications are provided on the product nameplate label.

How to Order Spare Parts

To ensure your order is accurate, provide the following information:

1. Model numbers of the indoor and outdoor units.
2. Item number in the exploded diagram.
3. Part number.
4. Required quantity.

Maintenance Notes

2

Carefully read all safety precautions before maintenance. The following information is essential for safe and proper execution.

- Follow all instructions and correct procedures during maintenance to eliminate risks of electrical shock, injury, and equipment accidents.
- Ensure all electrical work is performed by a licensed technician in compliance with national and local electrical codes.
- Ensure an authorized distributor or qualified professional perform all maintenance.
- Observe all warnings and cautions throughout this manual.
- Test the area with a flammable gas detector before unloading and opening the container.
- Keep the area free of open flames and smoking materials.

A. Electrical Safety Precautions

Electrical & Power Supply Requirements

- Connect the air conditioner to a dedicated circuit; do not share the circuit with other appliances.
- Install an appropriate circuit breaker (such as a GFCI/RCD) if the indoor unit is located in a humid or damp environment.
- For hardwired systems (without a plug), install a circuit breaker that features all-pole disconnection and a minimum contact separation of 0.1 inches (3 mm).

Wiring Safeguards

- Ensure all wiring terminals are securely connected during maintenance.
- Properly match the live, neutral, and grounding wires from the power supply to the corresponding air conditioner terminals.
- Adequately ground the unit; the grounding wire must not be used for any other purpose.
- Ensure the power cord and connection wires are not crushed, pinched, or compressed by surrounding components or hard objects.
- Install protective accessories, including protective boards, cable routing loops, and clips to safeguard the wiring.

Maintenance Notes

2

Maintenance & Component Replacement

- Turn off the air conditioner's power supply prior to checking the unit or performing maintenance.
- Use only the supplied or specified components during installation to ensure proper system performance.
- If the power cord or connection wire is damaged, it must be replaced by a qualified technician.
- If the power cord length is insufficient, obtain an approved replacement from the manufacturer or distributor; do not splice or extend the wire yourself.
- If a fuse is blown, replace it with a new fuse of the exact same specification; do not use copper wires or jumper wires as a substitute.
- Handle the unit with care during transport; a team lift is required if the unit weighs more than 44 lbs (20 kg).
- Wear a safety harness at all times if the working height exceeds 7 feet (2 m).
- Ensure no foreign objects remain inside the unit upon completion of installation; debris can cause electrical shock, fire, explosion, or personal injury.

Pre-Start & Commissioning Checks

- Confirm all wiring and piping connections are secure and all valves are open prior to energizing the system.
- Test the unit body for electrical leakage; resolve any faults before allowing the system to operate.

B. Fire Safety Precautions

Warning: Risk of fire due to the flammable refrigerant used

- Review all safety precautions in this manual before attempting any product service or repair.
- Handle the equipment carefully in strict compliance with all national regulations.
- Ensure only trained service personnel perform system repairs.
- Avoid puncturing the refrigerant tubing during maintenance.
- Dispose of all materials properly in accordance with national, state, and local regulations.

Maintenance Notes

2

C. Relocation Safety Precautions

- Avoid relocation areas where corrosive or flammable gases may leak, as accumulated gas can lead to explosions or other accidents.
- Do not use extension cords or multi-outlet adapters; if the power cord is of insufficient length, contact an authorized service center for an approved replacement to prevent electrical shock or fire hazards.
- Securely clamp all interconnecting wiring between indoor and outdoor units to eliminate external stress on the terminals. Using non-specified wires or insecure connections poses a severe electrical shock or fire hazard.
- Securely attach the connecting pipe before operating the compressor; running the compressor with open valves and disconnected piping will draw in air, causing dangerous pressure spikes, compressor overheating, or gas leaks.
- Charge the unit only with the specific refrigerant listed on the nameplate during installation or relocation; using unapproved or non-specified refrigerants can cause operational failures, mechanical malfunctions, or severe safety hazards.
- When recovering refrigerant (pump down) during relocation or repair:
 - Confirm the indoor unit is running in Cooling mode.
 - Fully close the liquid-side valve (2-way valve).
 - Wait 30 to 40 seconds, then fully close the gas-side valve (3-way valve).
 - Immediately stop the unit and disconnect the power supply.
 - CAUTION: The entire refrigerant recovery process must not exceed 1 minute. Running the process too long will cause the compressor to overheat, risking equipment failure or personal injury.
- Purge the refrigerant circuit during relocation to ensure it is completely free of air and moisture; foreign substances will cause abnormal pressure spikes or compressor failure, resulting in personal injury.
- Ensure both the liquid-side and gas-side valves are fully closed and the power is disconnected before detaching the connecting pipe; disconnecting the pipe while valves are open allows the compressor to suck in air, causing abnormal pressure, compressor overheating, or gas leaks.

R-32 Refrigerant Notes

3

A. Introduction

This air conditioner uses R-32, an environmentally friendly hydrofluorocarbon (HFC) refrigerant. Compared to conventional refrigerants, R-32 does not deplete the ozone layer and has a lower global warming potential (GWP). Note that R-32 is odorless and mildly flammable, and may pose a risk of fire or explosion under certain conditions.

B. Precautions

General Compliance & Servicing

- Ensure all maintenance is performed exclusively by authorized professionals in strict compliance with the manufacturer's operating manual.
- Contact the nearest authorized service center to arrange professional servicing.
- Comply with all national gas safety laws and regulations.

Flammable Refrigerant Handling & Worksite Safety

- Conduct a safety inspection prior to servicing any system using combustible refrigerants to minimize fire risks.
- Recover all refrigerant from the system prior to performing maintenance or decommissioning the air conditioner.
- Handle flammable refrigerants with extreme care to eliminate the risk of severe injuries and equipment damage.
- Eliminate all ignition sources and high-temperature hazards from the work area.
- Keep surrounding surfaces and equipment below 1,018°F (548°C) when handling R-32 refrigerant.
- Wear appropriate anti-static clothing and gloves when installing systems with R-32 refrigerant.

R-32 Refrigerant Notes

3

C. Special Tools

Tool Name	Requirement(s) for Use
Mini Vacuum Pump	An explosion-proof vacuum pump that ensures high precision. Its vacuum degree must be below 10 Pa.
Filling Device	A special explosion-proof filling device that ensures precision. Its filling deviation must be below 5g.
Leak Detector	A detector that it is calibrated regularly. Its annual leak rate should not exceed 10g.
Concentration Detector	• Equip the maintenance site with a fixed combustible refrigerant concentration detector. Connect this detector to a safeguard alarm system. Its error must not exceed $\pm 5\%$. • Equip the installation site with a portable combustible refrigerant concentration detector that features a two-level audible and visual alarm. Its error must not exceed $\pm 10\%$. • Ensure that the concentration detectors are calibrated regularly. Check and confirm their functionality before each use.
Pressure Gauge	Ensure that the pressure gauges are calibrated regularly. Confirm that the pressure gauges are compatible with R-32 refrigerant.
Fire Extinguisher	Carry fire extinguishers during installation and maintenance. Ensure that the maintenance site is equipped with two or more types of fire extinguishers (dry powder, carbon dioxide, or foam). These extinguishers must have highly visible labels and be placed in designated locations.

R-32 Refrigerant Notes

3

D. Maintenance

Inspections for the Maintenance Environment

- Verify the room is free of refrigerant leaks prior to operation.
- Only operate the system in rooms that meet the area requirements specified on the nameplate.
- Ensure that the room is continuously ventilated.
- Do not permit open flames, welding, smoking, drying ovens, or any other ignition sources with temperatures exceeding 1,018°F (548°C) in the room.
- Ensure that mobile phones and all other electronic devices are turned off while in the room.
- Equip the maintenance area with a functional dry powder or carbon dioxide (CO₂) fire extinguisher.

Inspections for the Maintenance Equipment

- Confirm that the maintenance equipment is compatible with the refrigerant. Use only the professional equipment recommended by the air conditioner manufacturer.
- Verify that the refrigerant leak detector has been calibrated. Ensure its maximum alarm concentration does not exceed 25% of the lower explosion limit (LEL). The leak detector must remain operational during all maintenance procedures.

Inspections for the Air Conditioner

- Before performing maintenance, ensure the air conditioner is reliably grounded.
- Turn off the power and completely discharge the capacitor before beginning maintenance. If power is required during maintenance, continuously perform leak detection at the highest-risk locations to prevent hazards.
- Verify that all warning labels on the air conditioner are legible and in good condition; immediately replace any that are damaged or obscured.

Leak Inspection Before Maintenance

- Before starting maintenance, use a manufacturer-recommended leak detector or pump-type concentration detector to ensure there are no active leaks.
- If a leak is suspected:
 - Extinguish or remove all open flames and ignition sources from the area.
 - Turn off the air conditioner immediately.
 - Ensure the workspace is thoroughly ventilated.

R-32 Refrigerant Notes

3

Safety Principles During Maintenance

- Ensure the workspace is well-ventilated throughout the maintenance process.
- Do not smoke, weld, use open flames, or operate mobile phones in the work area.
- Wear anti-static clothing and gloves if the relative humidity falls below 40%.
- Immediately initiate forced ventilation and seal the leak source if a combustible refrigerant leak is detected.
- Transport the product back to the service station if the refrigerant system must be opened for maintenance; welding refrigerant pipes or performing similar operations at the customer's site is strictly prohibited.
- Restore the air conditioner to its original state and verify that the refrigerant system is reliably grounded if a follow-up service visit is necessary due to missing spare parts.
- Secure the cylinder vertically when storing it in a vehicle or at the maintenance site, keeping it away from electrical equipment, heat, radiation, and ignition sources.

Requirements for the Maintenance Location

- Ensure the maintenance location is well-ventilated, located at ground level, and not in a basement.
- Divide and label the maintenance location into separate welding and non-welding areas, ensuring a safe distance between them.
- Equip the maintenance location with proper ventilation and air exhaust systems to prevent refrigerant gas accumulation.
- Install the main power switch outside the maintenance area, and ensure it is equipped with explosion-proof protective devices.
- Maintain an instrument management system for all combustible refrigerant leak detectors, and verify that the detectors are functioning normally prior to maintenance.
- Equip the maintenance area with functional fire extinguishers suitable for electrical fires, such as dry chemical or carbon dioxide (CO₂) extinguishers.
- Prohibit the use of temporary wiring or extension sockets within the maintenance location.

R-32 Refrigerant Notes

3

Requirements for Filling the Refrigerants

- Purge and vacuum the system for at least 30 minutes using nitrogen before operating the refrigerant system.
- Avoid cross-contamination among different refrigerants when using the charging device.
- Keep the total pipeline length as short as possible to minimize residual refrigerant inside the lines.
- Store and maintain all refrigerant storage tanks in an upright position.
- Ground the refrigeration system securely prior to charging it with refrigerant.
- Charge the system using only the specific refrigerant type and volume indicated on the product nameplate.
- Prohibit overcharging under any circumstances.
- Seal the refrigeration system properly upon completing all maintenance work.
- Verify that no maintenance procedures alter, damage, or reduce the original safety protection grade of the system.

In-Maintenance Welding

- Ensure the workspace is well-ventilated throughout the maintenance process.
- Confirm the refrigeration system is completely drained and cleaned, ensuring no residual refrigerant remains in the outdoor unit before beginning any welding.
- Close the outdoor unit stop valve before performing any torch-welding or brazing maintenance.

Maintenance of Electrical Components

- Ensure the workspace is well-ventilated throughout the maintenance process.
- Store refrigerant tanks vertically in a separate, well-ventilated location at a temperature range of 14°F to 122°F (-10°C to 50°C).
- Affix clear hazard warning labels to all refrigerant storage tanks.
- Confirm the refrigeration system is completely drained and cleaned, ensuring no residual refrigerant remains in the outdoor unit before beginning any welding.
- Close the outdoor unit stop valve before performing any torch-welding or brazing maintenance.
- Disconnect the unit's power before removing sealing covers. If power is required during maintenance, perform continuous leak detection at the most critical points to prevent potential hazards.
- Ensure all replacement parts and materials strictly meet the specifications recommended by the manufacturer.

R-32 Refrigerant Notes

3

- Verify that sealing materials have not degraded due to aging, ensuring they retain their full ability to prevent combustible gas leaks.
- Ensure that the sealing function is not compromised or damaged after performing maintenance.
- Ensure that the maintenance of electrical components does not interfere with the proper reinstallation of the protective cover.
- Inspect the area around the serviced electrical parts using a specialized leak detector to ensure there are no refrigerant leaks.
- Do not modify, remove, or bypass any safety protection components after completing maintenance.
- Verify that the unit has a reliable ground connection and is completely free of refrigerant leaks before performing a trial operation.

Maintenance of Electrical Components

- Establish an emergency response plan for the maintenance location.
- Implement appropriate safety precautions during all work activities.
- Prohibit ignition sources (such as matches or lighters) and static-producing clothing or footwear within the work area.
- In the event of a large combustible refrigerant leak, follow these emergency procedures:
 - Activate ventilation systems immediately while isolating all other power sources.
 - Evacuate all affected personnel from the area urgently.
 - Inform nearby residents to evacuate to a distance of at least 66 feet (20 m) from the site.
 - Place an immediate emergency alarm call.
 - Set up an emergency boundary and prohibit unauthorized personnel and vehicles from approaching.
 - Ensure responding professional firefighters wear anti-static clothing while handling the emergency on-site.
 - Direct firefighters to locate and cut off the source of the refrigerant leak as soon as possible.
 - Blow nitrogen across the site, focusing specifically on low-lying areas, to clear away any residual combustible refrigerant gas.
 - Use a handheld detector to thoroughly scan the area surrounding the leak source.
 - Do not clear or turn off the emergency alarm until the refrigerant concentration reads exactly zero.

Product Overview

4

Model Numbers

Note

Serial numbers are typically located behind the electronic control box cover cap of each unit.

Model	Full System	Indoor Unit	Outdoor Unit
9K 110~120V	WYT009ALUI20RL	WT009ALUI20HLE	YN009ALUI20RPE
9K 208~230V	WYT009GLUI20RL	WT009GLUI20HLE	YN009GLUI20RPE
12K 110~120V	WYT012ALUI20RL	WT012ALUI20HLE	YN012ALUI20RPE
12K 208~230V	WYT012GLUI20RL	WT012GLUI20HLE	YN012GLUI20RPE
18K	WYT018GLUI20RL	WT018GLUI20HLE	YN018GLUI20RPE
24K	WYT024GLUI20RL	WT024GLUI20HLE	YN024GLUI20RPE
32K	WYT030GLUI20RL	WT030GLUI20HLE	YN030GLUI20RPE
36K	WYT036GLUI20RL	WT036GLUI20HLE	YN036GLUI20RPE

Product Overview


4

Part Names

Note

Illustrations in this manual are for explanatory purposes. The actual shape of the indoor unit may be slightly different. The actual shape shall prevail.

The system consists of two units connected by insulated copper pipes and an electrical communication cable. Mount the indoor unit on a wall inside the room selected for air conditioning. Install the outdoor unit on the ground or on the wall using suitable mounting brackets.

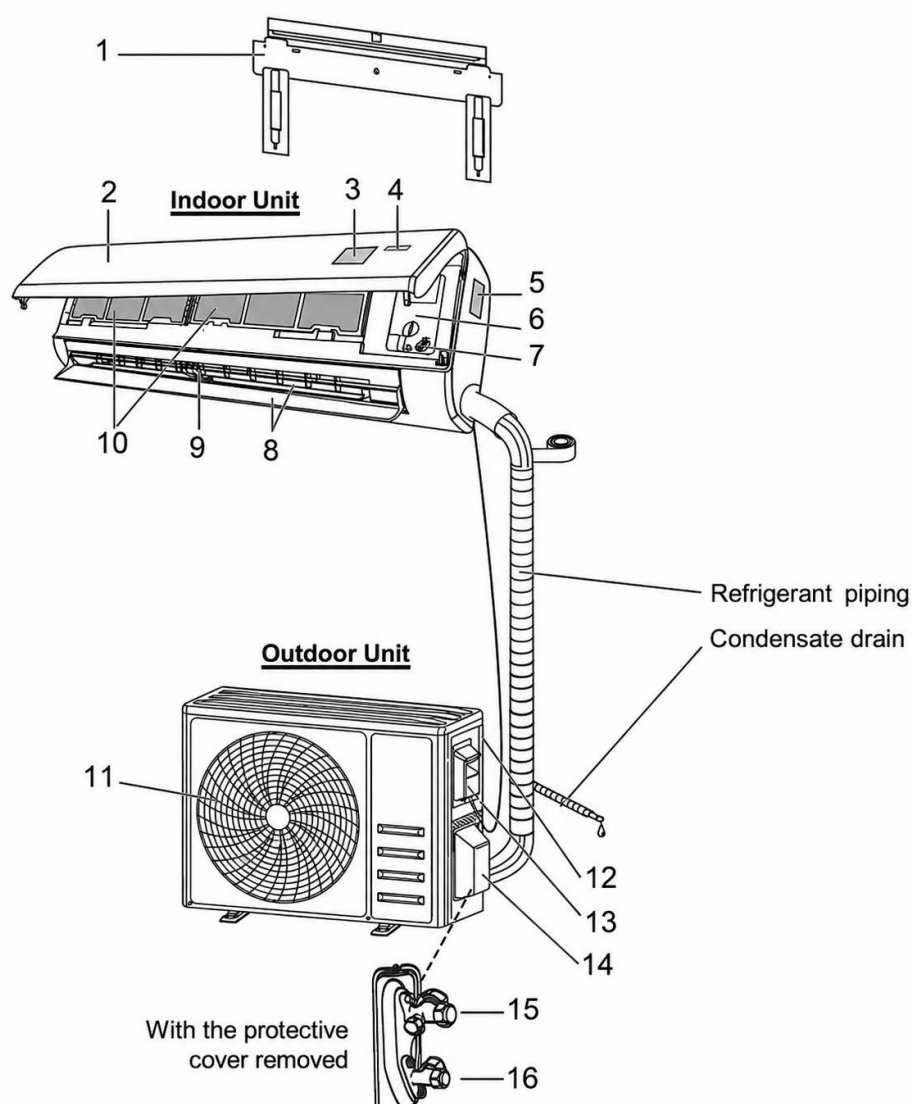




No.	Description
1	Wall mounting plate
2	Front panel
3	LED display
4	Controller signal receiver
5	Indoor unit rating label
6	Terminal block cover
7	Emergency (Manual) button
8	Air deflector & flap
9	Air outlet
10	Air filter
11	Air outlet grille
12	Outdoor unit nameplate
13	Terminal block cover
14	Valve protection cover
15	Gas (Suction) line valve
16	Liquid line valve

Product Overview

4

Dimensions & Weight

Indoor Unit:

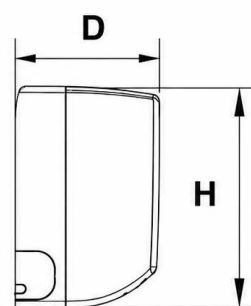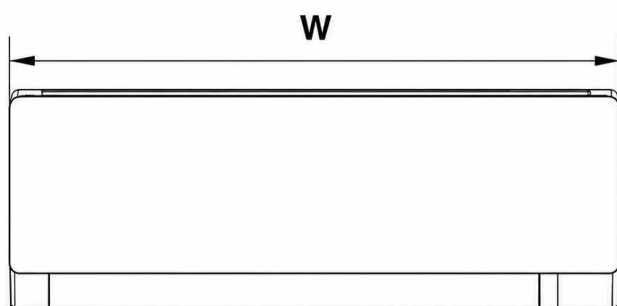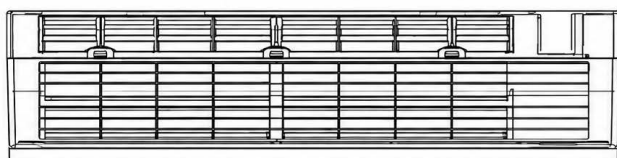


Indoor Unit	Dimensions		
	W	D	H
WT009ALUI20HLE	31-7/8 in	8 in	11-1/2 in
	810 mm	203 mm	292 mm
WT009GLUI20HLE	31-7/8 in	8 in	11-1/2 in
	810 mm	203 mm	292 mm
WT012ALUI20HLE	31-7/8 in	7-3/4 in	11-1/2 in
	810 mm	197 mm	292 mm
WT012GLUI20HLE	31-7/8 in	7-3/4 in	11-1/2 in
	810 mm	197 mm	292 mm
WT018GLUI20HLE	35-7/8 in	8-1/8 in	11-5/8 in
	911 mm	206 mm	295 mm
WT024GLUI20HLE	39-3/4 in	9 in	12-3/8 in
	1,010 mm	229 mm	314 mm
WT030GLUI20HLE	46-7/8 in	10-1/4 in	14-1/4 in
	1,191 mm	260 mm	362 mm
WT036GLUI20HLE	46-7/8 in	10-1/4 in	14-1/4 in
	1,191 mm	260 mm	362 mm

Indoor Unit	Net Unit Weight
WT009ALUI20HLE	18.7 lbs
	8.5 kgs
WT009GLUI20HLE	18.7 lbs
	8.5 kgs
WT012ALUI20HLE	18.7 lbs
	8.5 kgs
WT012GLUI20HLE	18.7 lbs
	8.5 kgs
WT018GLUI20HLE	21.4 lbs
	9.7 kgs
WT024GLUI20HLE	26.5 lbs
	12.0 kgs
WT030GLUI20HLE	39.7 lbs
	18.0 kgs
WT036GLUI20HLE	39.7 lbs
	18.0 kgs


Product Overview

4

Outdoor Unit:

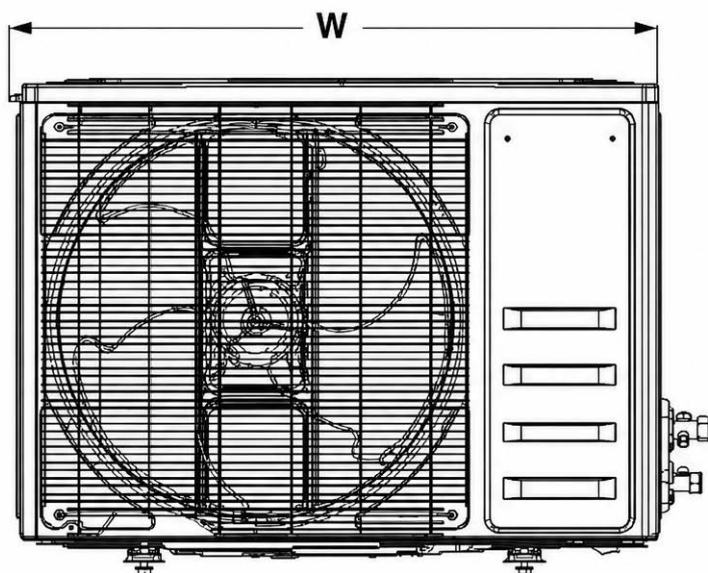

Front view

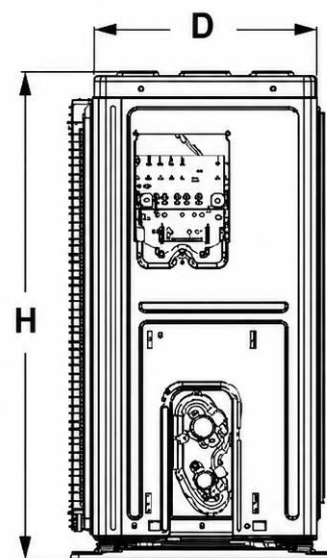

Side view

Outdoor Unit	Dimensions		
	W	D	H
YN009ALUI20RPE	31 in	11-1/2 in	19-5/8 in
	787 mm	292 mm	498 mm
YN009GLUI20RPE	31 in	11-1/2 in	19-5/8 in
	787 mm	292 mm	498 mm
YN012ALUI20RPE	31-1/2 in	12 in	21-3/4 in
	800 mm	305 mm	552 mm
YN012GLUI20RPE	31-1/2 in	12 in	21-3/4 in
	800 mm	305 mm	552 mm
YN018GLUI20RPE	33-5/8 in	13-3/4 in	23-3/4 in
	854 mm	349 mm	603 mm
YN024GLUI20RPE	36-1/2 in	14-7/8 in	27-1/2 in
	927 mm	378 mm	698.5 mm
YN030GLUI20RPE	38-1/2 in	16-1/2 in	31-5/8 in
	978 mm	419 mm	803 mm
YN036GLUI20RPE	38-1/2 in	16-1/2 in	31-5/8 in
	978 mm	419 mm	803 mm

Outdoor Unit	Net Unit Weight
YN009ALUI20RPE	50.7 lbs
	23 kgs
YN009GLUI20RPE	50.7 lbs
	23 kgs
YN012ALUI20RPE	52.9 lbs
	24.0 kgs
YN012GLUI20RPE	51.8 lbs
	23.5 kgs
YN018GLUI20RPE	66.8 lbs
	30.3 kgs
YN024GLUI20RPE	88.2 lbs
	40.0 kgs
YN030GLUI20RPE	105.8 lbs
	48.0 kgs
YN036GLUI20RPE	105.8 lbs
	48.0 kgs

Product Overview

4

Operating Temperatures

The system is designed to run within a certain range of temperatures, which are listed below. The system has built-in protections that may stop the appliance when the ambient temperatures goes outside of these ranges.

Operating Temperatures	°F / °C
Temperature Setting Range	61~88°F
	16~31°C
Ambient Temperature Range for Cooling	5~127°F
	-15~53°C
Ambient Temperature Range for Heating	-4~75°F
	-20~24°C

Testing and rating agencies develop standard rating conditions to obtain full system-rated capacity and efficiency. Within certain limitations, variable speed compressors compensate the deviations from the rating conditions, especially the atmospheric conditions.

Heat pump systems function by exchanging energy between the indoor air and outdoor ambient air (atmospheric) in the form of heat. The system's net cooling or heating capacities and efficiencies change by atmospheric conditions, as well as the indoor air conditions, such as temperatures and humidity levels.

Professional individuals use detailed calculations to determine the capacity of the system required for a specific area or application, which are based on several internal and external factors.

To further optimize the performance of the unit, complete the following:

- Keep doors and windows closed.
- Use Timer On and Timer Off functions to limit energy usage.
- Do not block air inlets or outlets.
- Regularly inspect and clean air filters.


Refrigerant Piping Specifications

5

Refer to these tables for refrigerant piping specifications, such as maximum length and drop height.

WYT-20U	9K/12K BTU	18K BTU	24K BTU	30K/36K BTU
Liquid Pipe Diameter	Φ 1/4 in (6.35 mm)	Φ 1/4 in (6.35 mm)	Φ 1/4 in (6.35 mm)	Φ 1/4 in (6.35 mm)
Gas Pipe Diameter	Φ 3/8 in (9.5 mm)	Φ 3/8 in (9.5 mm)	Φ 1/2 in (12 mm)	Φ 5/8 in (5.88 mm)
Max. Length of Pipe with Standard Charge	25 ft / 7.6 m			
Max. Length Between Indoor and Outdoor Unit	50 ft / 15.2 m	65 ft / 19.8 m	65 ft / 19.8 m	100 ft / 30 m
Adjustment Refrigerant Charge (For each additional foot after 25 ft.)	0.11oz/ft			
Max. Drop Height Between Indoor and Outdoor Unit	33 ft / 10 m	50 ft / 15 m	50 ft / 15 m	65 ft / 20 m
Type of Refrigerant	R-32			

Consider the following height and length restrictions:

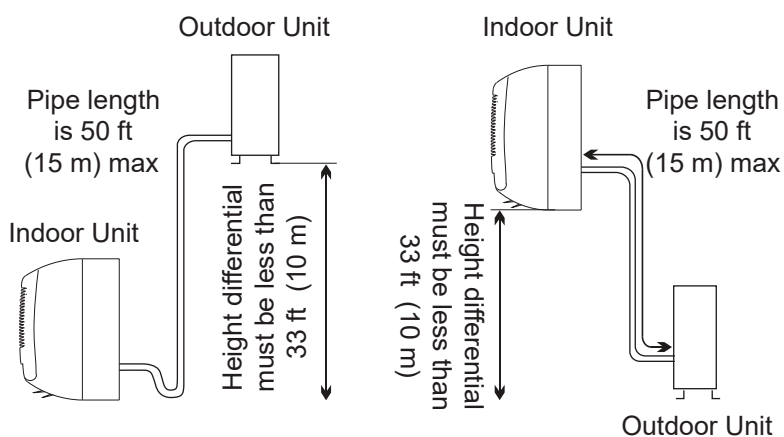

For 9K & 12K BTU Systems

Follow the given constraints in the figures to the left.

For 18K, 24K, 30K, & 36K BTU Systems:

- The allowable height differential increases to 50 feet / 15 m (18K/24K) and 65 feet / 20 m (30K/36K)
- The allowable pipe length is 65 feet / 20 m (18K/24K) and 100 feet / 30.5 m (30K/36K)

Maintenance

6

Performing periodic maintenance, such as cleaning the anti-dust filters and the indoor air handler's interior, will ensure the system remains efficient.



! CAUTION

- Before performing any maintenance, ensure the system's power supply is turned off for more than 5 minutes.
- Wear safety gloves when working on the equipment, due to the coil's sharp aluminum fin edges.
- Do not spray water directly into the indoor unit, as it can damage the insulation and electrical components.


A. Anti-Dust Filters

Inspect the anti-dust filter once every 2 weeks.

1. Open the front panel by pulling outward and upward at the indication locations.
2. Keep the front panel raised with one hand, then remove the air filter with the other.
3. The filters are washable and should be cleaned with warm water (under 104°F/40°C).
4. Leave the filter to dry in a cool, dry place.
5. Keep the front panel raised with one hand, then insert the air filter with the other.
6. Close the front panel.

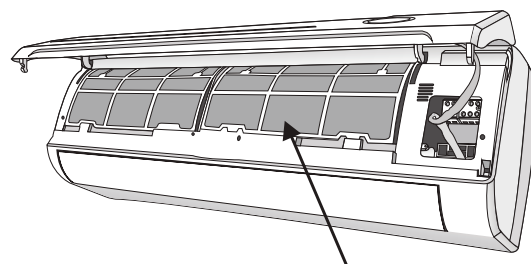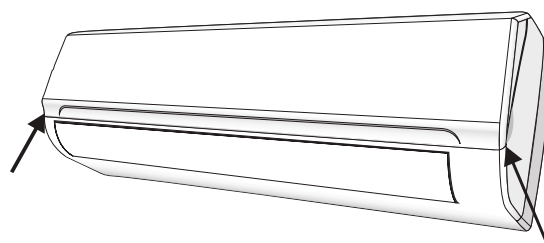

Anti-dust filter

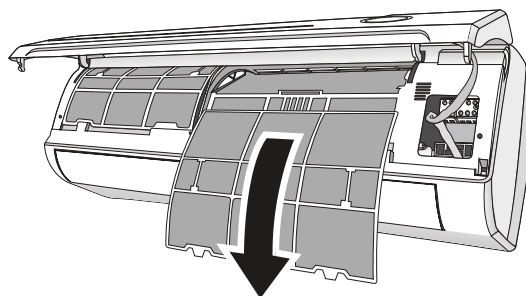

● Note

Accessory electrostatic or deodorizing filters are not washable and should be replaced every 6 months.

Maintenance

6

B. Interior of the Indoor Air Handler

Inspect the indoor unit's interior as well as the inner coil every season.

1. Disconnect the front panel and remove the top hinge where the pegs connect. This offers easier inspection of the interior and behind the air filters.
2. Clean the interior with a damp, soft cloth and neutral soaps. Do not use any types of aggressive solvents or detergents.

Maintenance - Long Periods of Non-Use

If the air conditioner won't be used for an extended period of time.




Clean all filters



Turn on the Fan function until the unit dries out completely




Turn off the unit and disconnect the power

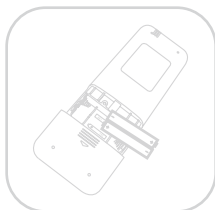


Remove the batteries from the remote control

Maintenance - Pre-Season Inspection

After long periods of non-use or before periods of frequent use, do the following:

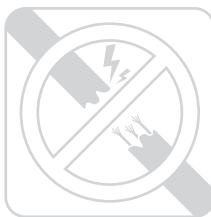


Check for damaged wires

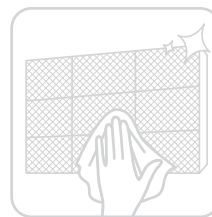



Clean all filters



Check for leaks

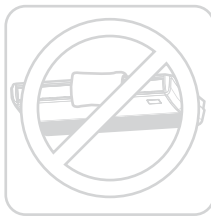

Make sure nothing is blocking the air inlets and outlets

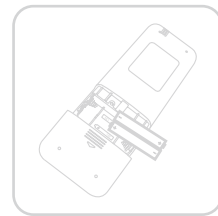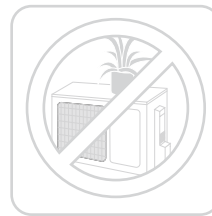

Replace the batteries

Troubleshooting

7

Malfunction	Possible Causes
If the appliance does not operate or respond...	There is a power failure / plug pulled out or tripped / wrong breaker (wrong wiring)
	The indoor / outdoor unit fan motor is damaged
	There is a faulty compressor or thermomagnetic circuit breaker
	There is a faulty protective device or fuses
	The electrical connections are loose
	The system has entered a protection mode
	The system has entered an overvoltage or undervoltage protection
	The Timer-On function is active
	The electronic control board was damaged
If there are strange odors...	The air filter is dirty
If there is running water...	There is a back-flow of condensate water into the system's drain pan.
If a fine mist is coming from the air outlet...	This occurs when the air in the room becomes considerably cold. For example in "Cooling" or "Dehumidification / Dry" modes
If strange noises are being emitted...	This noise is made by the expansion or contraction of the front panel due to variations in temperature. If so, this is normal
If the airflow is insufficient, and the air is not hot or cold enough...	The temperature setting is unsuitable
	The air conditioner intakes and outlets may be obstructed
	The air filter may be dirty
	The fan speed may be set at the minimum
	There may be too many other heat sources in the room
	The system may be getting low on refrigerant. Pressures should be checked
If the appliance does not respond to commands...	The remote control may not be close enough to the indoor unit
	The batteries of the remote control may need to be replaced
	There are obstacles between the remote control and indoor unit signal receiver
If the display is off...	The Display button has been pressed
	There has been a power failure
Switch off the air conditioner immediately and cut off the power supply in the event of...	Strange noises not due to expansion/contraction are heard during operation
	The electronic control board is faulty or malfunctioning
	Any fuses or switches are faulty or malfunctioning
	The sound of spraying water or objects are heard inside the appliance
	The cables or plugs have overheated
	There are very strong odors being emitted from the appliance

Error Signals on the Display

In case of errors, the display on the indoor unit may show the following codes:

Display	Description of the error	Display	Description of the error
E1	Indoor temperature sensor fault	E8	Outdoor discharge temperature sensor fault
E2	Indoor pipe temperature sensor fault	E9	Outdoor IPM module fault
E3	Outdoor pipe temperature sensor fault	ER	Outdoor current detection fault
E4	Refrigerant system leakage or fault	E0	Indoor ↔ Outdoor unit communication fault
E6	Malfunction of the indoor fan motor	F4	Refrigerant leak / Low pressure detected
E7	Outdoor air temperature sensor fault	EH	Outdoor suction temperature sensor fault

Do not attempt to use the system until the error code is diagnosed and resolved. Forcing the system to run can cause irreversible damage.



Troubleshooting

7

Solutions to Common Issues & Scenarios

Issue: The indoor air handler does not turn on

- Solution: Try the manual emergency button on the indoor unit to rule out remote control issues.
- Solution: Verify that the wiring order is identical between the indoor and outdoor units. The color sequence must match exactly. Check for splices or damage along the control cable. To eliminate variables, temporarily disconnect all accessory items, such as UV lights or condensate pumps, until the problem is resolved.
- Solution for 230V systems: Use a multimeter to check the AC voltage across terminals L1 and L2 on the outdoor system. Place one probe on L1 and the other on L2. Do not measure each leg to ground. Verify that the reading is between 208~253 VAC.
 - If the reading is between 208~253 VAC, check whether it is the same across terminals 2 and 3 on both the indoor and outdoor units. All readings must match. The system requires a full 230V reading to function.
 - A reading of 0 VAC indicates that the system is not receiving power from the source. Some common reasons are:
 - A fused disconnect is being used, but the fuses are blown and improperly inserted.
 - The disconnect box bus-bar is turned off.
 - A double-pole breaker is not being used. Single or tandem breakers will not operate.

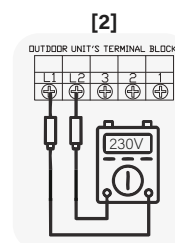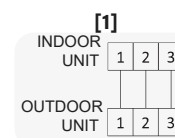

Issue: The pressure reading does not rise when releasing refrigerant during the leak check

- Solution: Verify that the manifold gauge hose pin fully engages the outdoor unit's service port Schrader valve. A pin that is over-extended or under-extended will block access to the refrigerant circuit, preventing pressure measurement and proper vacuuming. The depressor pin inside the hose connector is adjustable to ensure proper engagement.
 - A telltale sign that this is happening is if the gauge reading goes to an instant vacuum when the pump is first turned on, meaning only the gauge is being vacuumed.
 - If so, vacuuming will need to be re-performed, since only the gauge was vacuumed.

Troubleshooting

7

Issue: The system is not holding a vacuum

- Solution: There is likely a leak in the gauge hoses. Repair it and check the vacuum pump.
- Solution: Check the connection points for proper contact and torque, then tighten if necessary.

Issue: The indoor air handler is leaking water

- Solution: Verify that the indoor unit is level both horizontally and vertically.
- Solution: Confirm that the drain tube pitches continuously downward.
 - Pour a cup of water over the indoor unit's coils to ensure it reaches the drain pan.
 - Verify that water drains freely from the tube. If it does not, find the cause and correct it.

Issue: The system indicates that a refrigerant leak is present

- Solution: Cut off the power to the system. Prepare a soapy water spray and apply it to the connection points of the lineset. The point where bubbles form is where the leak is located. Tighten the connection and re-test the system. After the leak is repaired, recharge the system.

Issue: The fan runs in Cooling mode but in Heating mode there is weak or no airflow

- Solution: Fan speed control is typically unavailable in Heating mode. If the coil cannot heat up, the fan will not run at speed. This issue may also indicate low refrigerant.

Troubleshooting

7

Failure Codes

Code	Reason	Remark
bc	PM2.5 sensor failure (indoor unit failure, optional)	Query by pressing the remote control
bE	CO ₂ sensor failure (optional)	/
bf	TVOC sensor failure (indoor unit failure, optional)	Query by pressing the remote control
bj	Humidity sensor failure (indoor unit failure)	Query by pressing the remote control
CL	Filter duty reminder	Clean the air filter
d4	Water full protection	/
d5	Access control protection	/
E0	Indoor and outdoor units communication failure	Is the wiring connection between the units correct?
E1	Indoor unit room temperature sensor failure (IDU RT failure)	Indoor unit sensor and PCB
E2	Indoor unit fan coil temperature sensor failure (IDU IPT failure)	Indoor unit sensor and PCB
E3	Outdoor unit fan coil temperature sensor failure (OPT)	Outdoor unit coil sensor and outdoor unit PCB
E4	Abnormal system malfunction / Lack of refrigerant	Gas leakage / 2-way or 3-way valve blocked / etc.?
E5	Model configuration / Mismatch error (specifically production line test)	/

E6 Indoor unit DC fan fault (IDU failure)

Fan motor, fan blade, and PCB

Troubleshooting

7

Failure Codes

Code	Reason	Remark
E7	Outdoor unit ambient temperature sensor failure	Outdoor unit ambient sensor and outdoor unit PCB
E8	Outdoor unit discharge temperature sensor failure	Outdoor unit discharge sensor and outdoor unit PCB
E9	Outdoor unit IPM / Compressor drive control abnormality	Outdoor unit PCB, compressor, etc.
EA	Outdoor unit current sensor test failure	Outdoor unit PCB broken?
Eb	Main PCB / LED display communication fault (IDU failure)	Display board and main PCB
EC	Outdoor unit module communication fault	/
EE	Outdoor unit EEPROM failure	1. Outdoor unit PCB broken? 2. Try to re-power the unit
EF	Outdoor unit DC fan motor failure	Fan motor and outdoor unit PCB
EH	Outdoor unit suction sensor fault	/
Ej	Outdoor unit central coil temperature sensor fault	/
En	Outdoor unit gas pipe temperature sensor fault	/
EP	Outdoor unit compressor casing top fault	/
EU	Outdoor unit voltage test circuit abnormality	Outdoor unit PCB
Ey	Outdoor unit liquid pipe temperature sensor fault	/

Troubleshooting

7

Code	Reason	Remark
F0	Infrared sensor failure (IDU failure)	Query by pressing the remote control
F1	Power test module failure (IDU failure)	Query by pressing the remote control
F2	Discharge temperature sensor failure protection	Check the troubleshooting for details
F3	Outdoor unit coil temperature sensor failure protection	Check the troubleshooting for details
F4	Cooling system gas flow abnormality protection	Check the troubleshooting for details
F5	PFC protection	Check the troubleshooting for details
F6	Compressor phase loss / Anti-phase protection	Check the troubleshooting for details
F7	IPM module temperature protection	Check the troubleshooting for details
F8	4-way valve reversing abnormality protection	Check the troubleshooting for details
F9	Module test circuit temperature failure	Outdoor unit PCB
FA	Compressor phase-current test circuit failure	Outdoor unit PCB
Fb	Cooling / Heating overload limit frequency protection	Query by pressing the remote control
FC	High power limit / Frequency reduction protection	Query by pressing the remote control
Fd	Refrigerant leak sensor abnormal communication protection	Check the troubleshooting for details

Troubleshooting

7

Code	Reason	Remark
FE	Module / Compressor phase current protection	Query by pressing the remote control
FF	Module temperature frequency reduction protection	Query by pressing the remote control
FH	Drive limit / Frequency reduction protection	Query by pressing the remote control
Fj	Discharge protection limit / Frequency protection	Query by pressing the remote control
Fn	External AC current limit / Frequency protection	Query by pressing the remote control
FP	Anti-condensation frequency reduction protection	Query by pressing the remote control
FU	Anti-freezing frequency reduction protection	Query by pressing the remote control
Fy	Refrigerant deficiency protection	Check the troubleshooting for details
H1	High-pressure switch malfunction	/
H2	Low-pressure switch malfunction	/
Hd	Refrigerant leakage protection	/
P0	IPM module protection	Outdoor unit PCB
P1	Over / Undervoltage protection	1. Outdoor unit PCB broken? 2. Power supply abnormality?
P2	Overcurrent protection	1. Outdoor unit PCB broken? 2. Power supply abnormality?
P3	Other protection	/

Troubleshooting

7

Code	Reason	Remark
P4	Excessive outdoor discharge temperature protection	Check the troubleshooting for details
P5	Cooling / Dry mode subcooling preventative protection	Check the troubleshooting for details
P6	Cooling mode overheating preventative protection	Check the troubleshooting for details
P7	Heating mode overheating preventative protection	Check the troubleshooting for details
P8	Outdoor over-temperature / under-temperature protection	Check the troubleshooting for details
P9	Compressor drive abnormal load protection	Check the troubleshooting for details
PA	Preset mode conflict / Indoor unit top flow communication fault	Check the troubleshooting for details

Note: Remote Controller Failure Code Querying Function


As shown in the table above, some codes (Fb–bj) can only be viewed using the remote control. To view these codes, press the ECO button on the remote control 8 times within 8 seconds. The buzzer beeps twice to confirm the query.

Troubleshooting

7

CL Error Code: Filter Duty Reminder


After the unit has run for a total of 500 hours, the display shows "CL" to remind the user to clean the air filter.

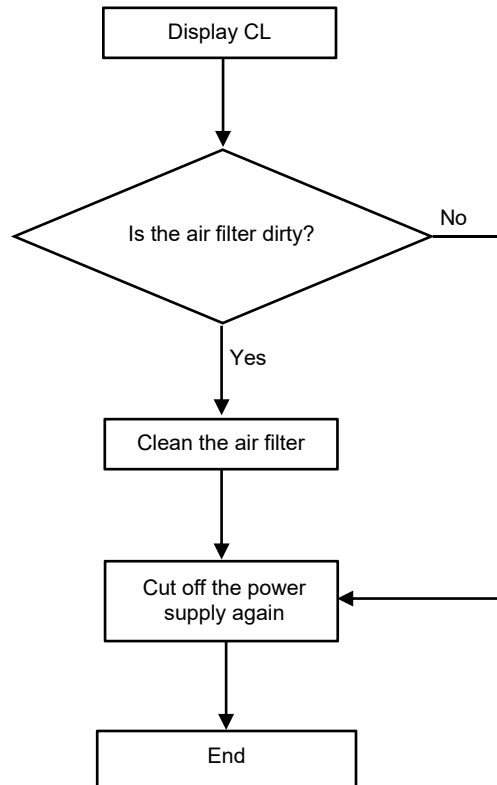

Troubleshooting

7


E0 Error Code: Indoor and Outdoor Units Communication Failure

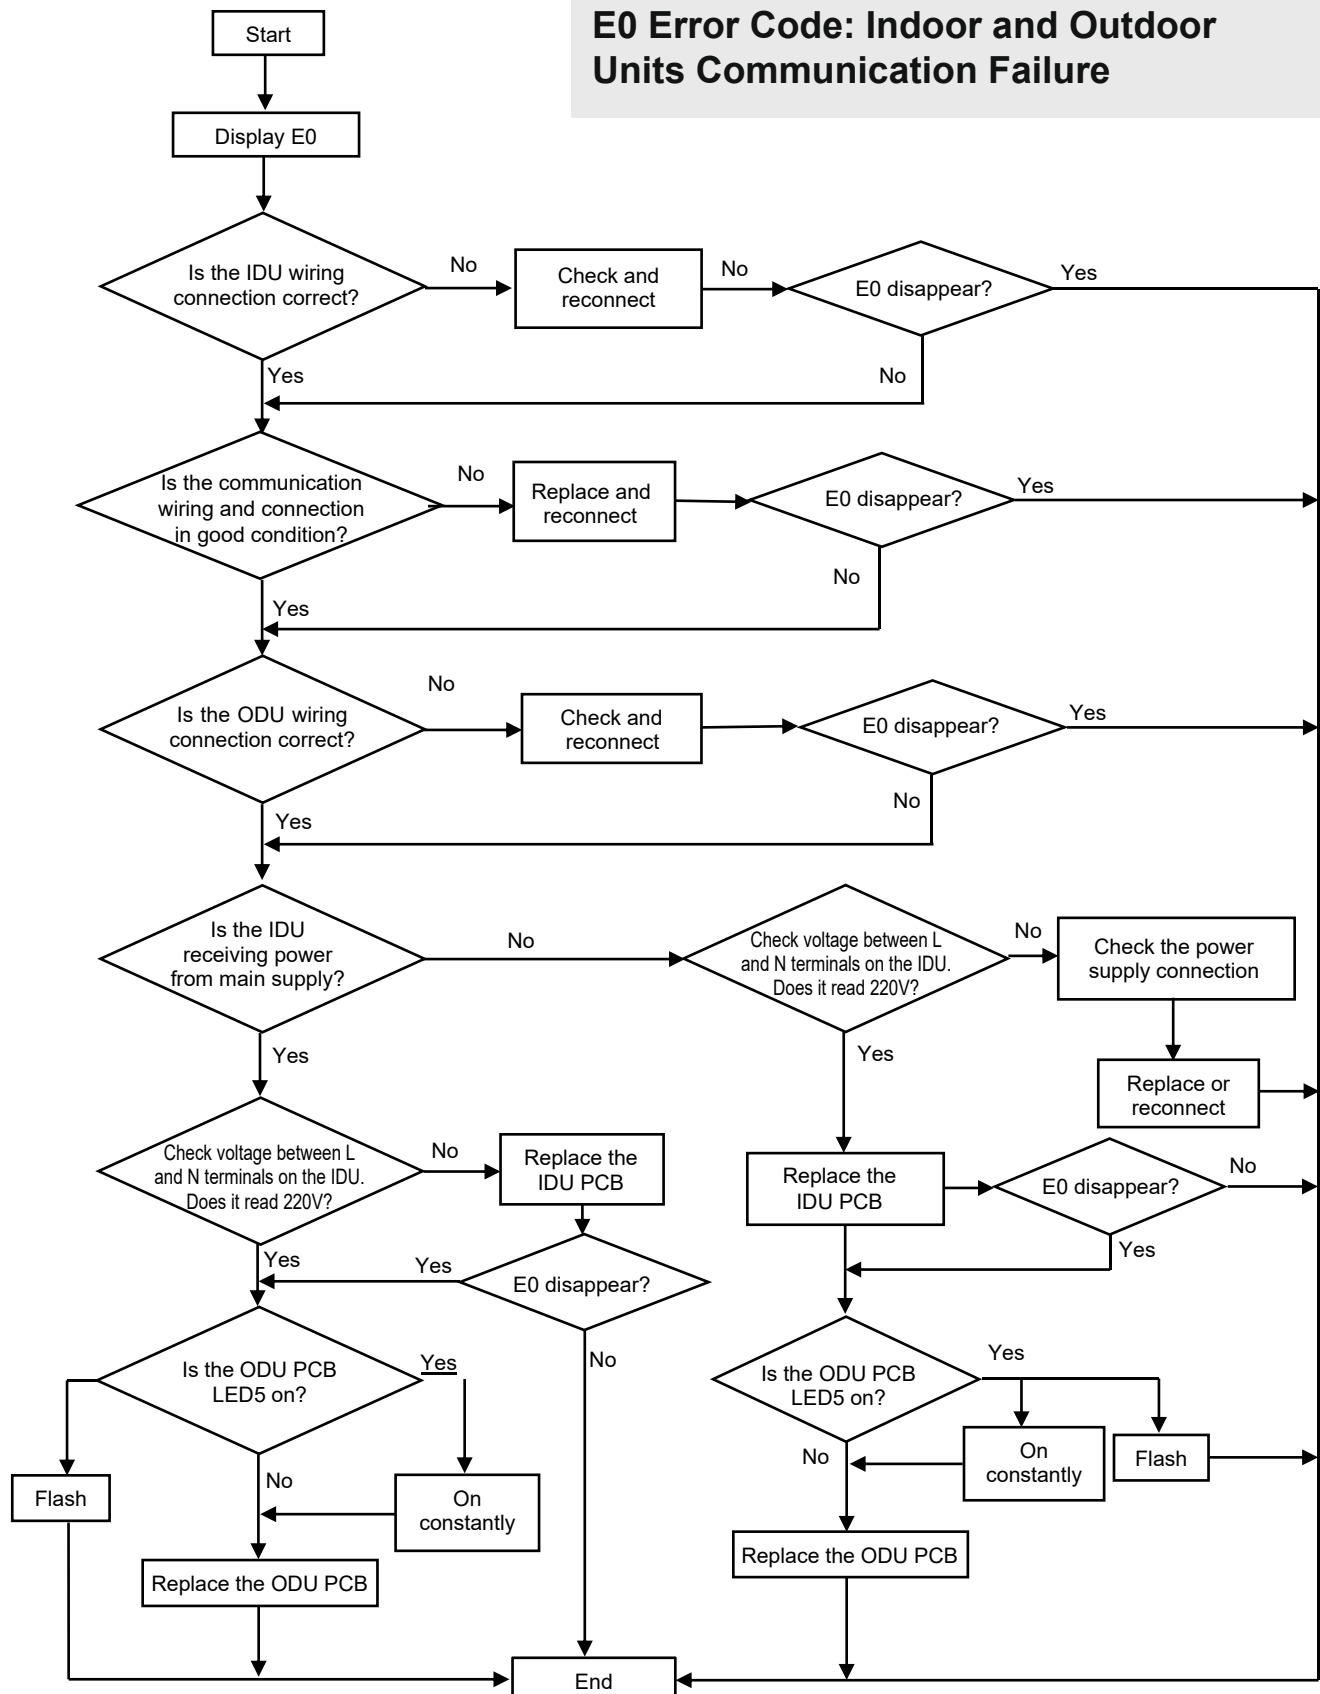

Troubleshooting

7


E1 / E2 Error Codes: Indoor Unit Room Temperature Sensor Failure and/or Indoor Unit Fan Coil Temperature Sensor Failure

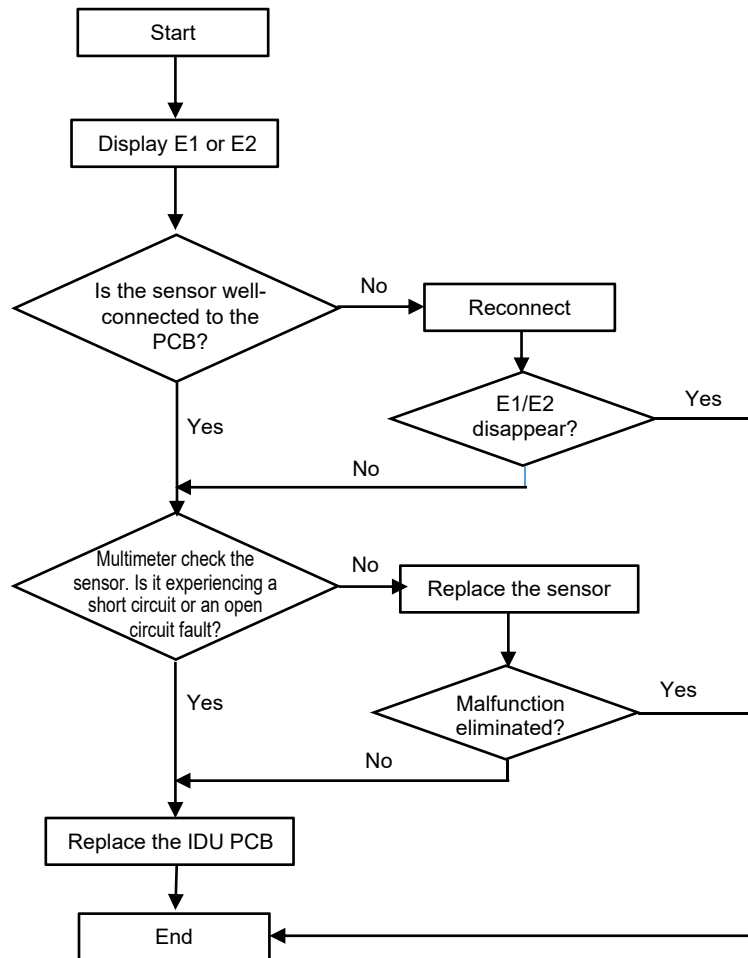

Troubleshooting

7


E4 Error Code: Abnormal System Malfunction / Lack of Refrigerant

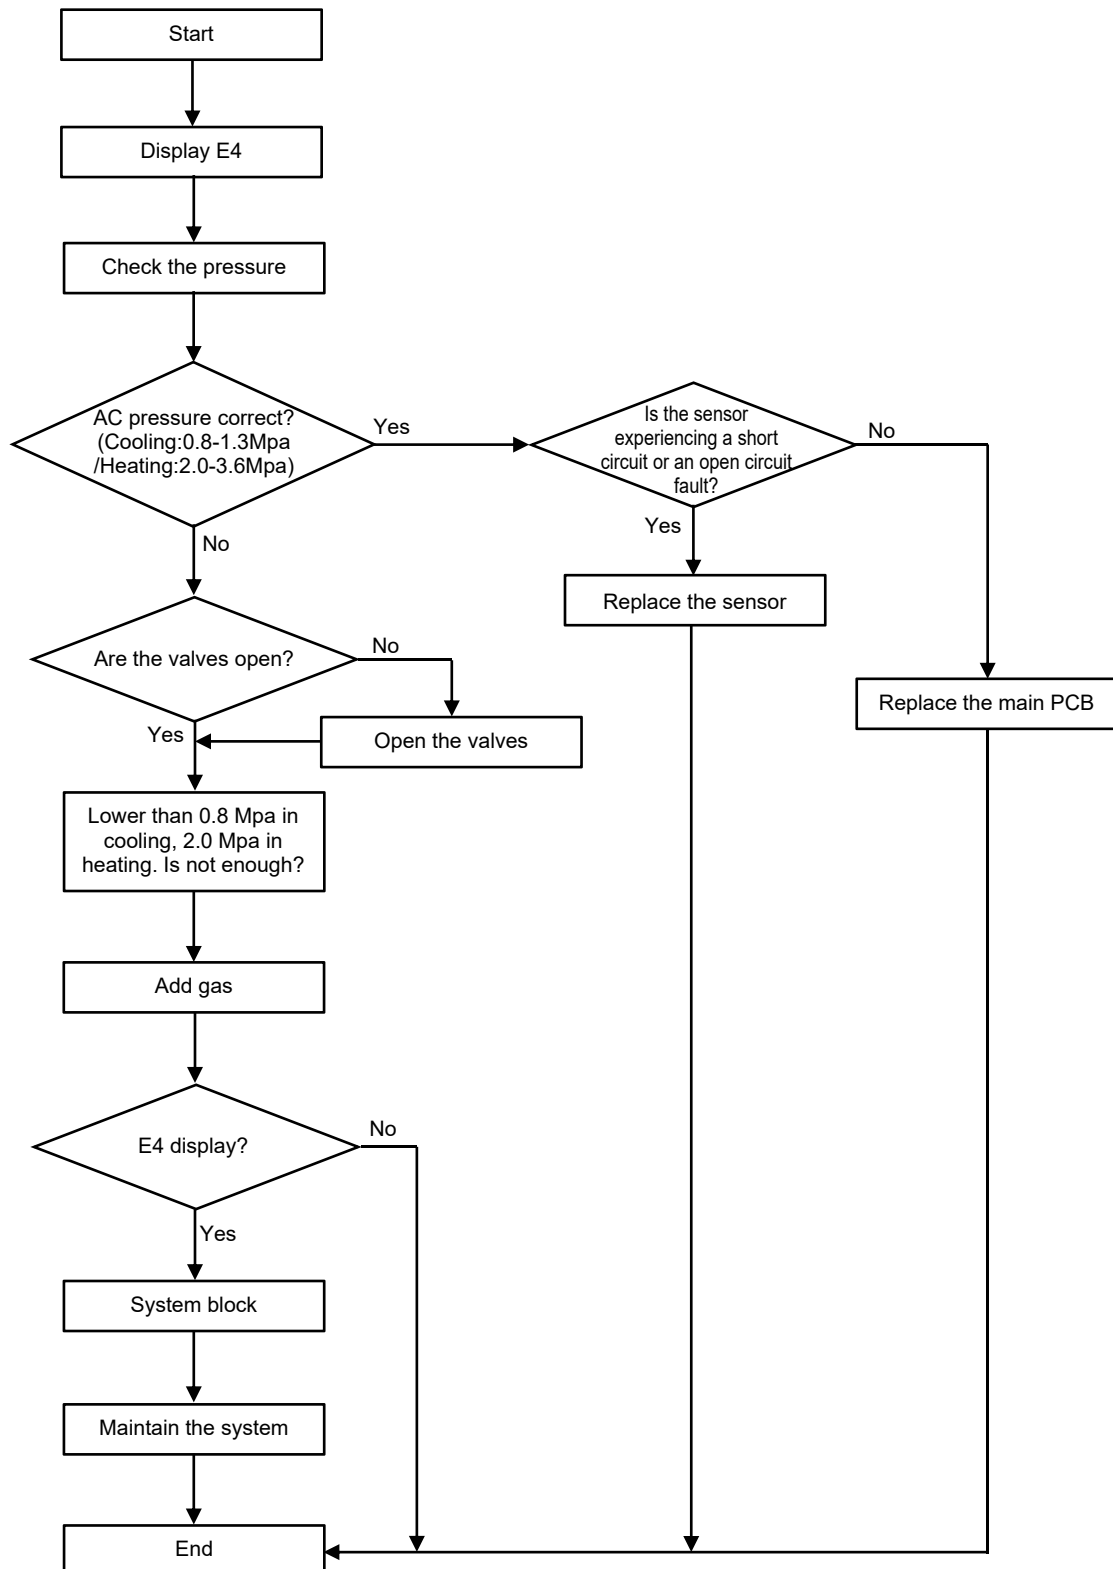

Troubleshooting

7

E6 Error Code: Indoor Unit DC Fan Fault

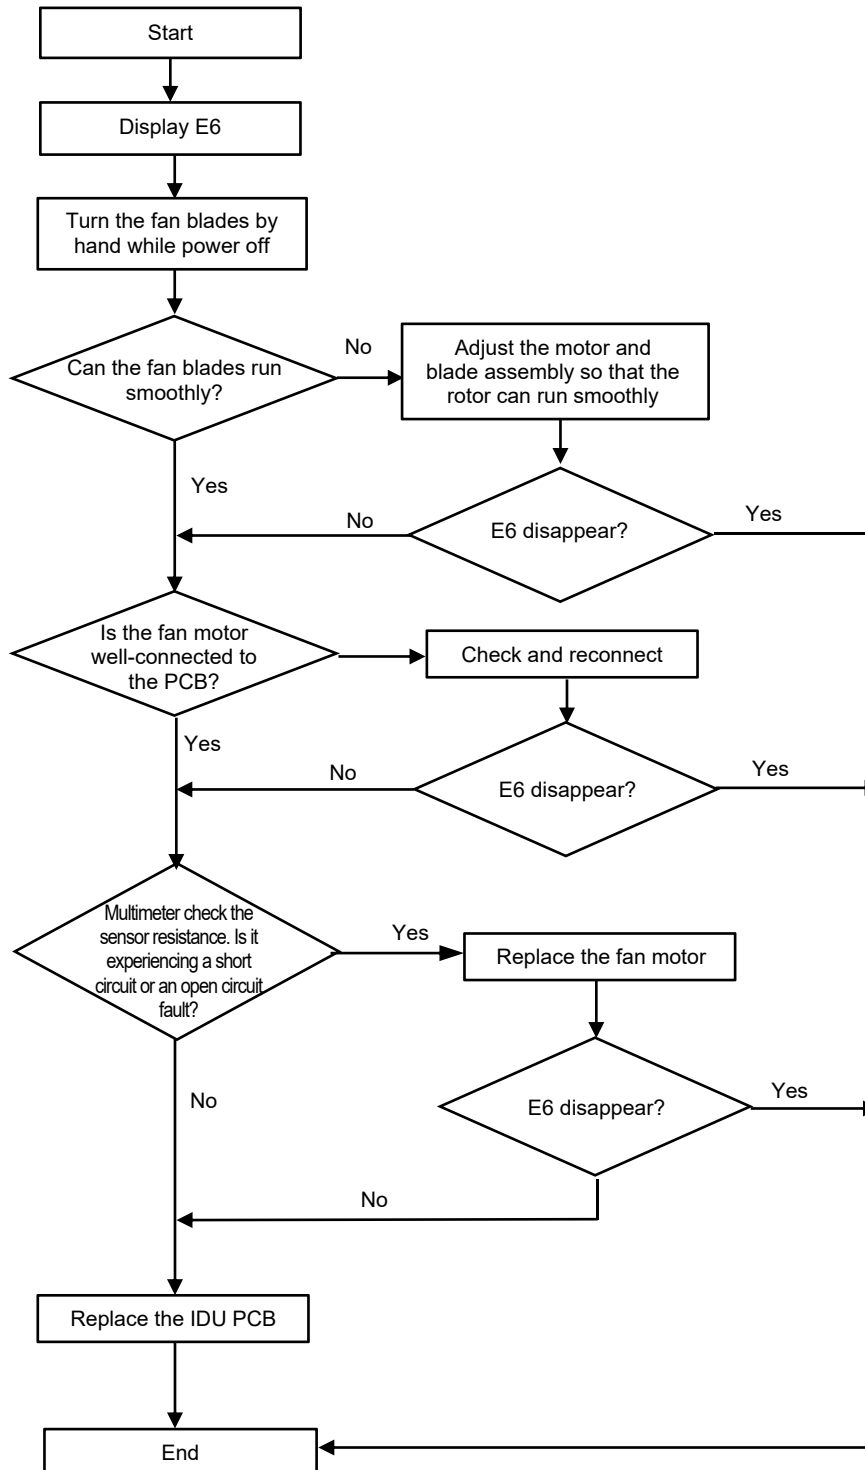

Troubleshooting

7

E3 / E7 / E8 / EH / En / Ey Error Codes:

E3: Outdoor unit fan coil temperature sensor failure (OPT)

E7: Outdoor unit ambient temperature sensor failure


E8: Outdoor unit discharge temperature sensor failure

EH: Outdoor unit suction sensor fault

En: Outdoor unit gas pipe temperature sensor fault

Ey: Outdoor unit liquid pipe temperature sensor fault

If any temperature sensor has a short circuit or open circuit, the unit displays the corresponding error code, and both the indoor and outdoor units turn off. When the sensor returns to normal, the unit goes into standby and can be turned on again as usual..

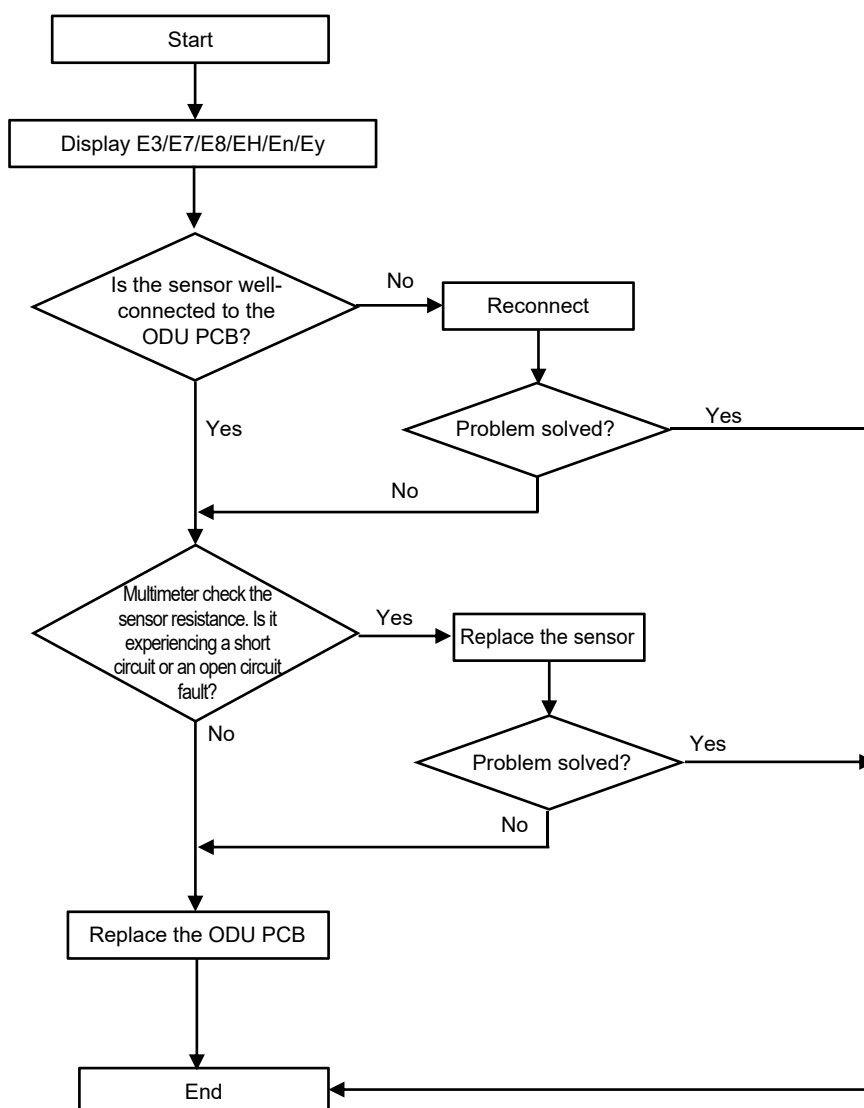


Troubleshooting

7

E9 Error Code: Outdoor Unit IPM / Compressor Drive Control Abnormality

If the IPM protection stops the unit six times in a row, the unit displays error code "E9" and will not restart until the On/Off button is pressed.

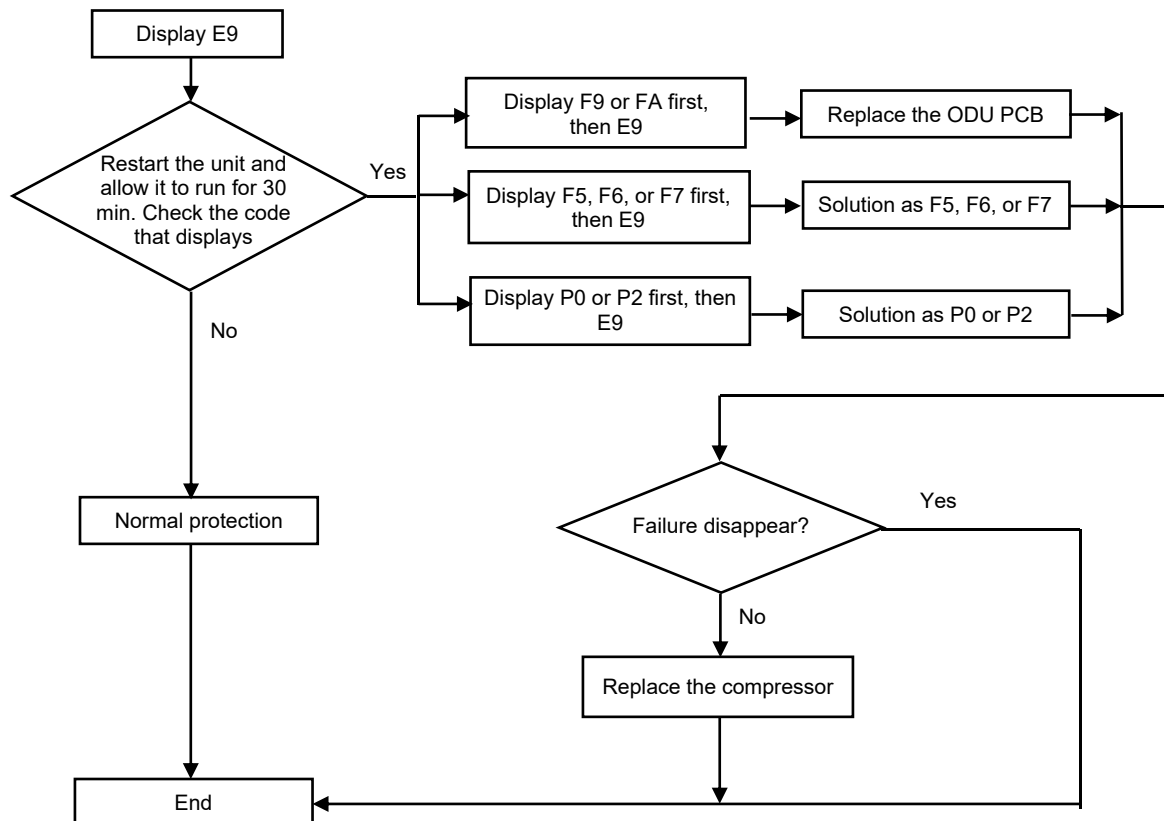

Troubleshooting

7

EA Error Code: Outdoor Unit Current Sensor Test Failure

Cause: Outdoor current sampling circuit failure or driver parameter mismatch.

Solution: Replace the outdoor unit PCB.

Eb Error Code: Main PCB / LED Display Communication Fault

Cause:

1. The communication wire is damaged.
2. Outdoor unit main board is damaged.
3. Operating board is damaged.

Solution:

1. Replace the communication wire.
2. Replace the outdoor unit main board.
3. Replace the operating board

EE Error Code: Outdoor Unit EEPROM Failure


Cause: The outdoor unit main board is damaged.

Solution: Replace the outdoor unit PCB.

Troubleshooting

7

EF Error Code: Outdoor Unit DC Fan Motor Failure

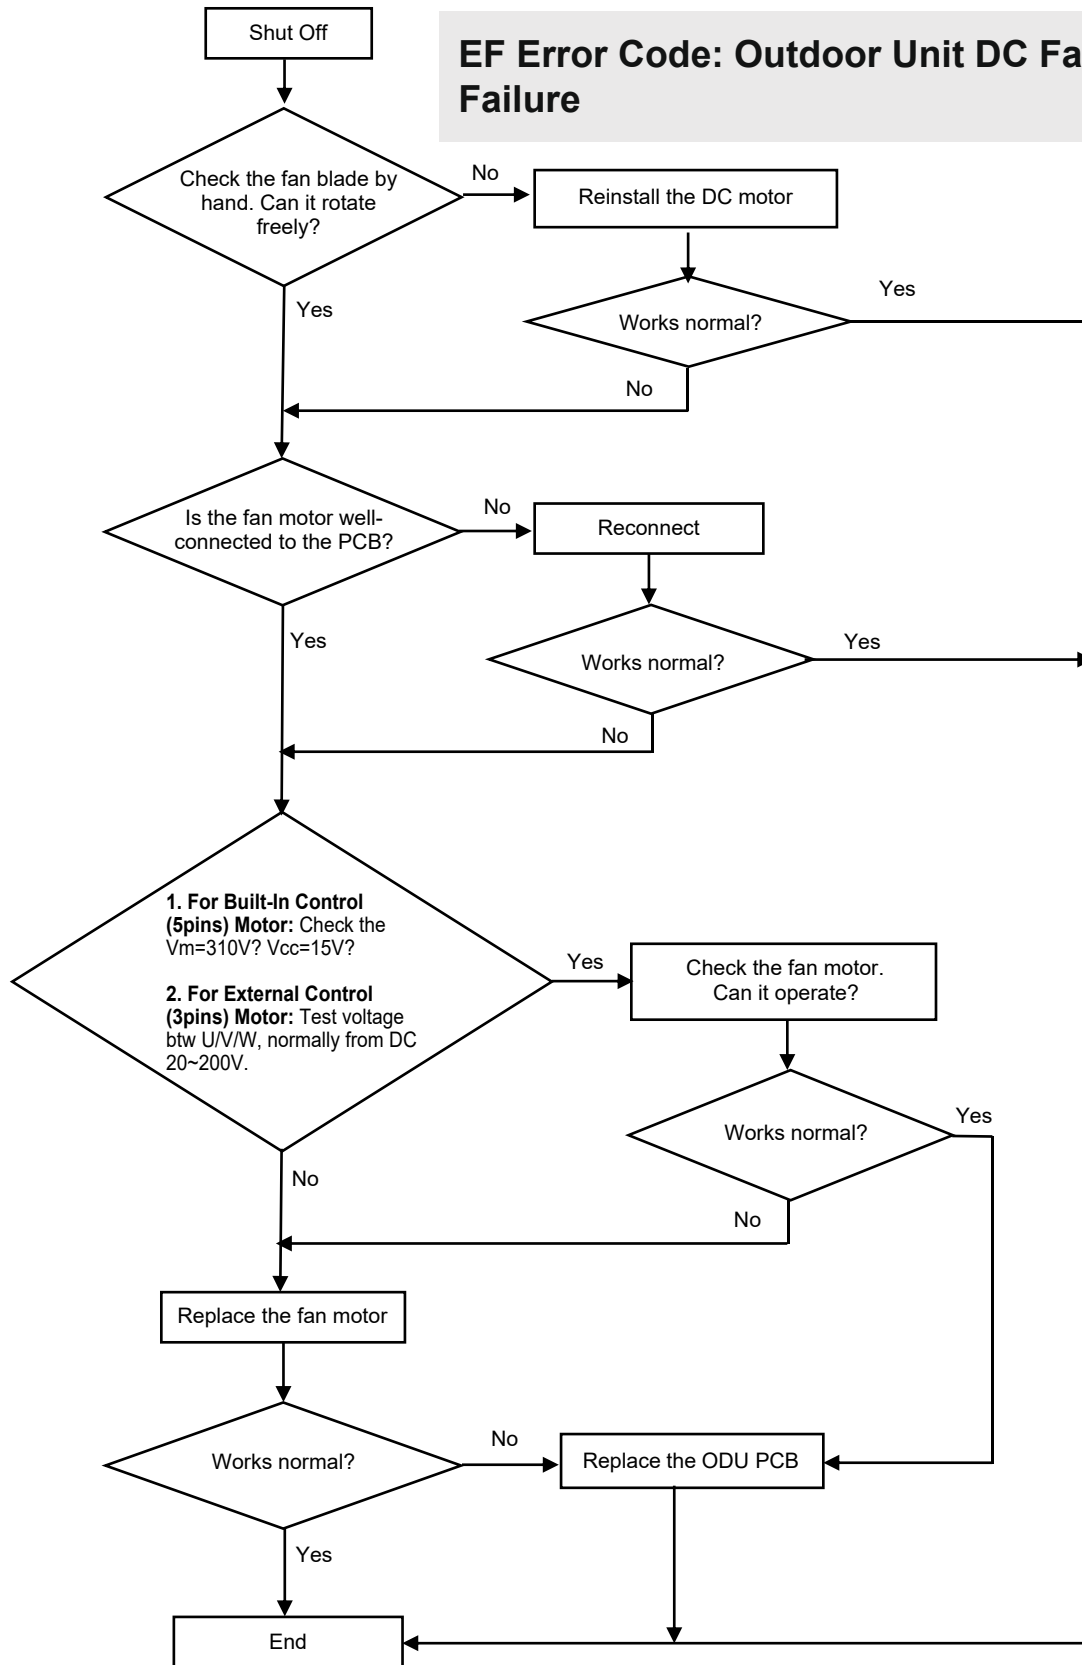


Troubleshooting

7

EU Error Code: Outdoor Unit Voltage Test Circuit Abnormality

After the power relay is energized, if the measured voltage stays below 50 V for 3 consecutive seconds, the unit displays error code "EU."

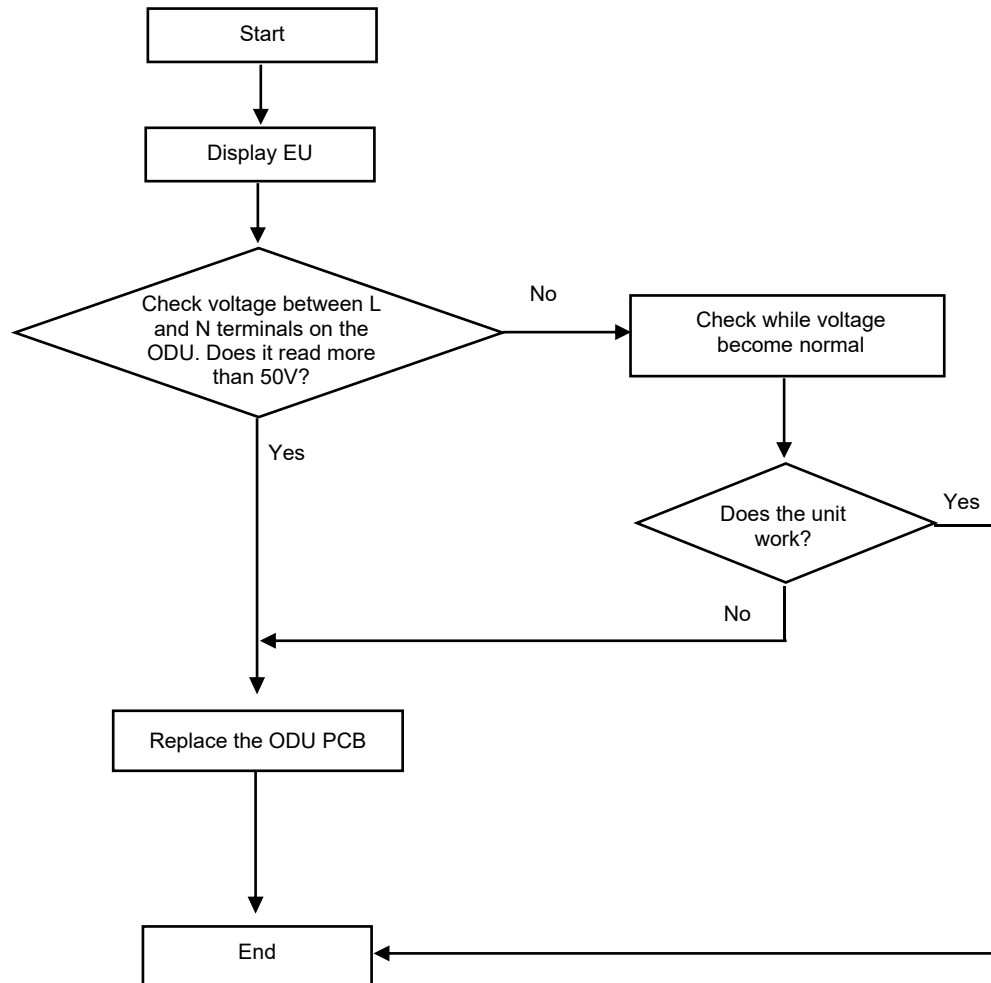


Troubleshooting

7

F4 Error Code: Cooling System Gas Flow Abnormality Protection

When the compressor starts, the unit monitors changes in the indoor coil temperature. If the 2-way or 3-way valve on the outdoor unit has not been opened during installation, refrigerant cannot flow through the system. The unit then activates refrigerant flow protection, stops, and displays error code "F4."

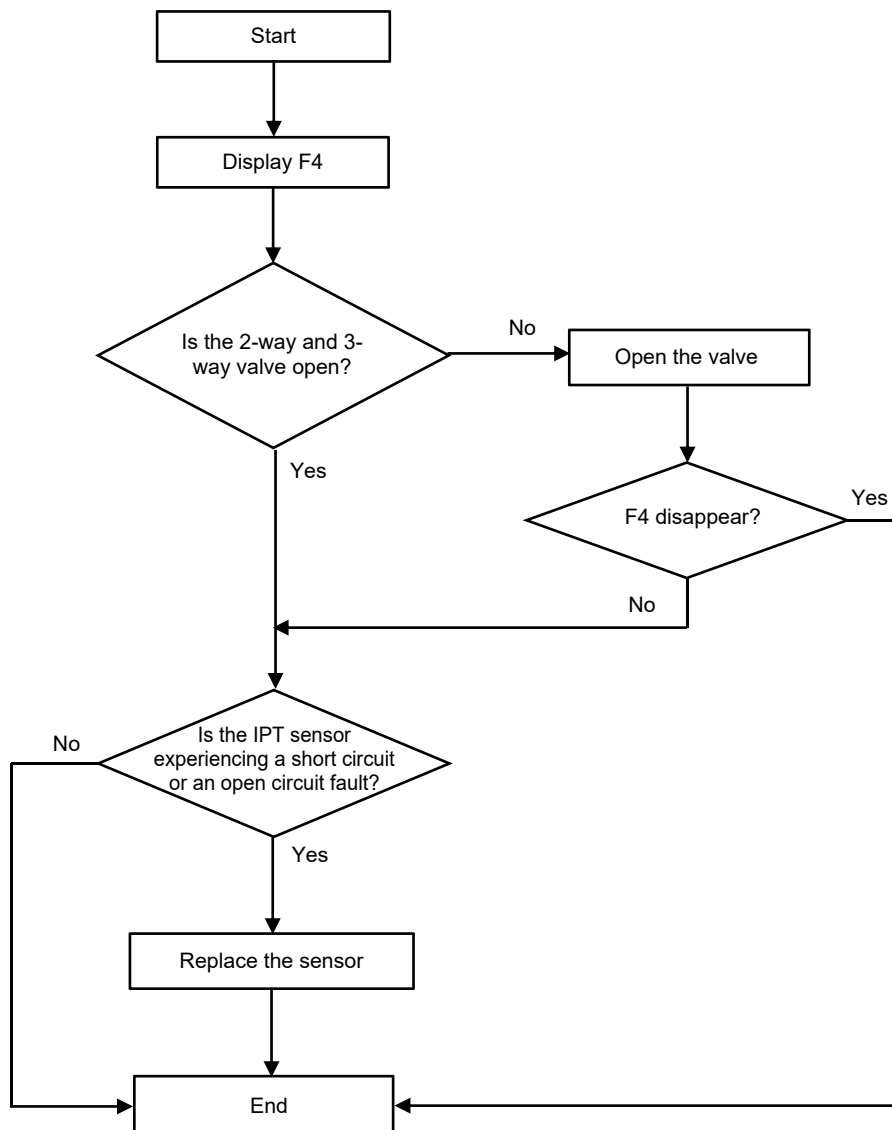


Troubleshooting

7

F5 Error Code: PFC Protection

If the system undergoes PFC protection, the unit will display the "F5" error code.

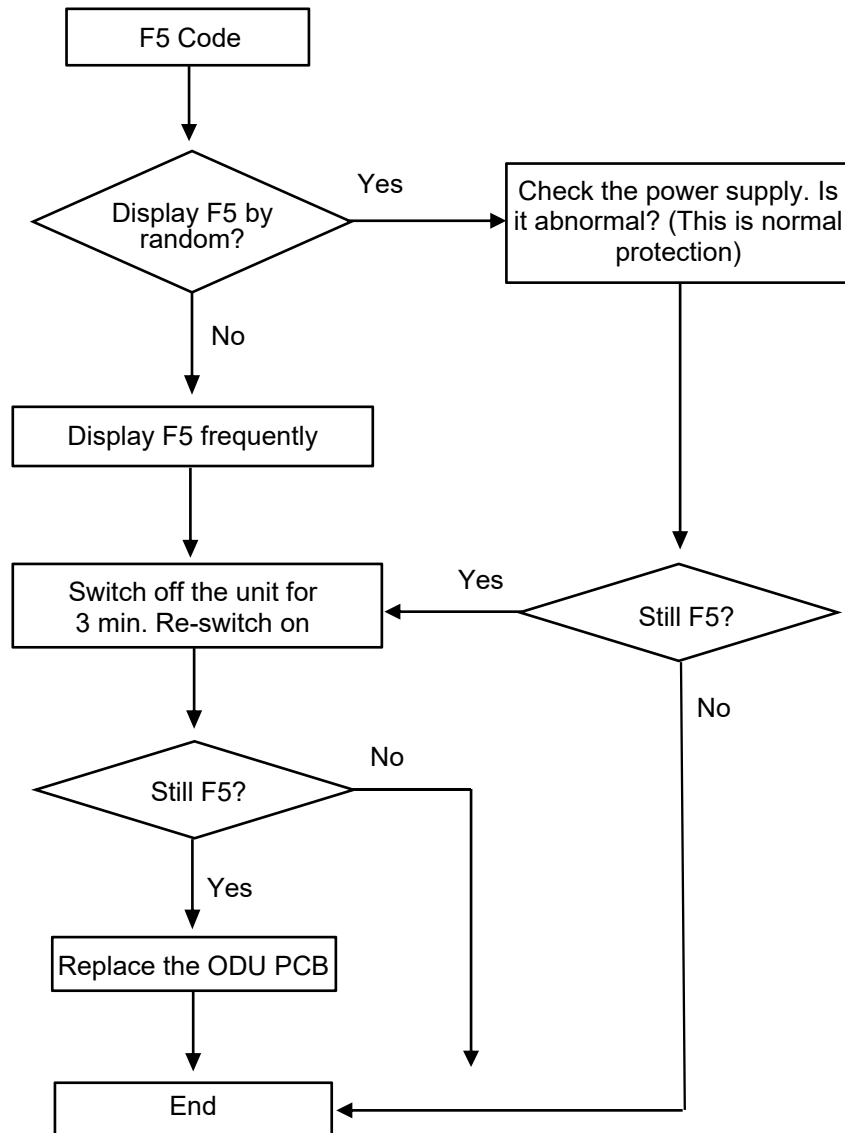


Troubleshooting

7

F6 Error Code: Compressor Phase Loss / Anti-Phase Protection

If the outdoor unit PCB cannot detect current in one or more phases of the compressor, the unit activates phase loss protection, stops, and displays error code "F6."

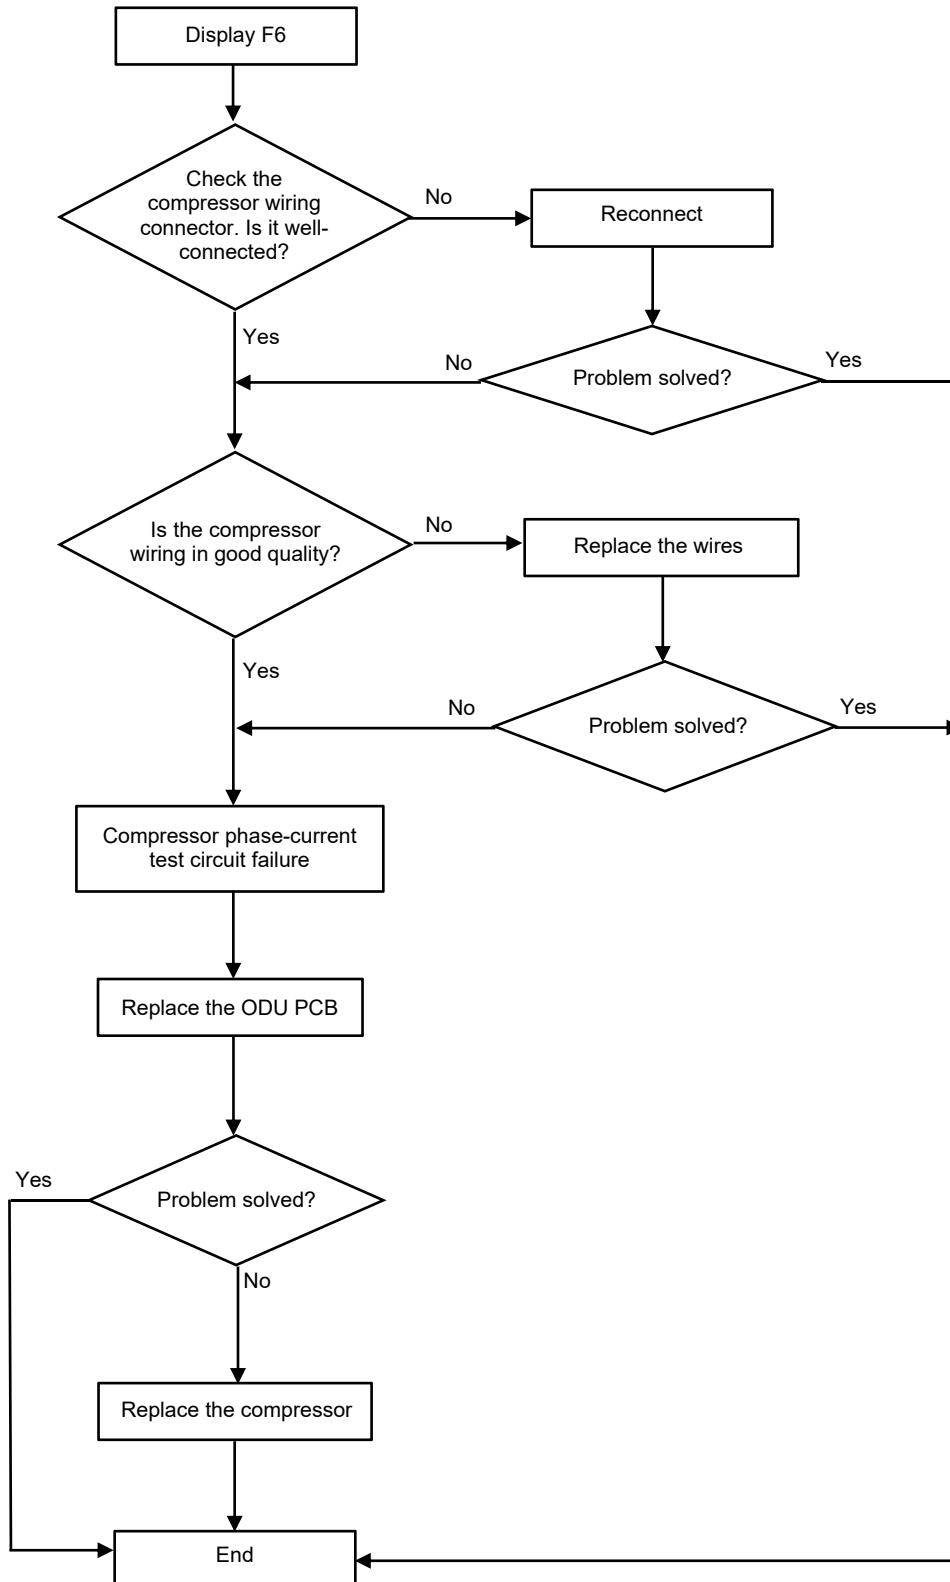

Troubleshooting


7

F7 Error Code: IPM Module Temperature Protection

If the IPM temperature rises above 203°F (95°C), the unit activates IPM overheat protection, stops, and displays error code "F7."

Troubleshooting

7

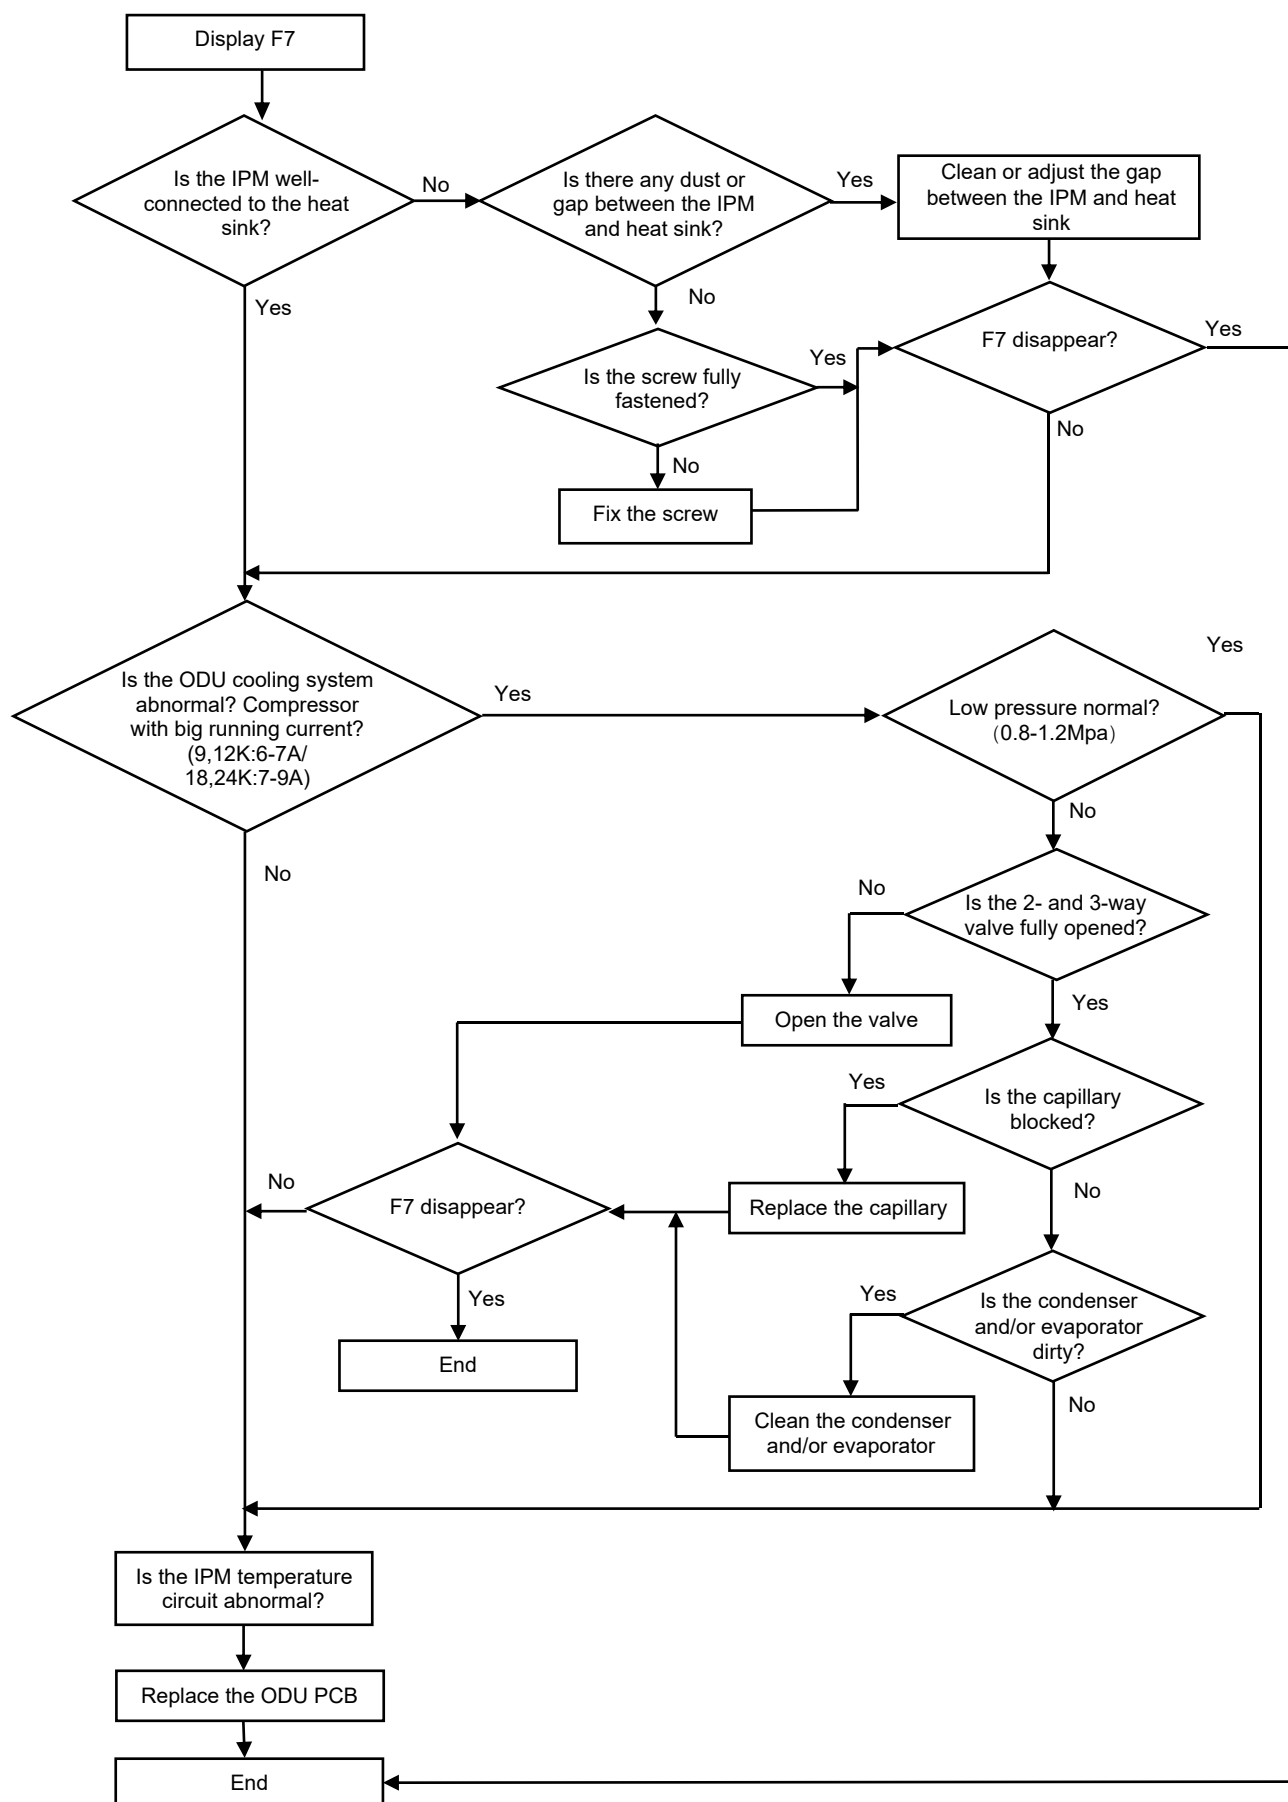


Troubleshooting

7

F8 Error Code: 4-Way Valve Reversing Abnormality Protection

In Heating mode, if the IPT is 41°F (5°C) or lower after the compressor has run for 8 minutes, the unit displays error code "F8".

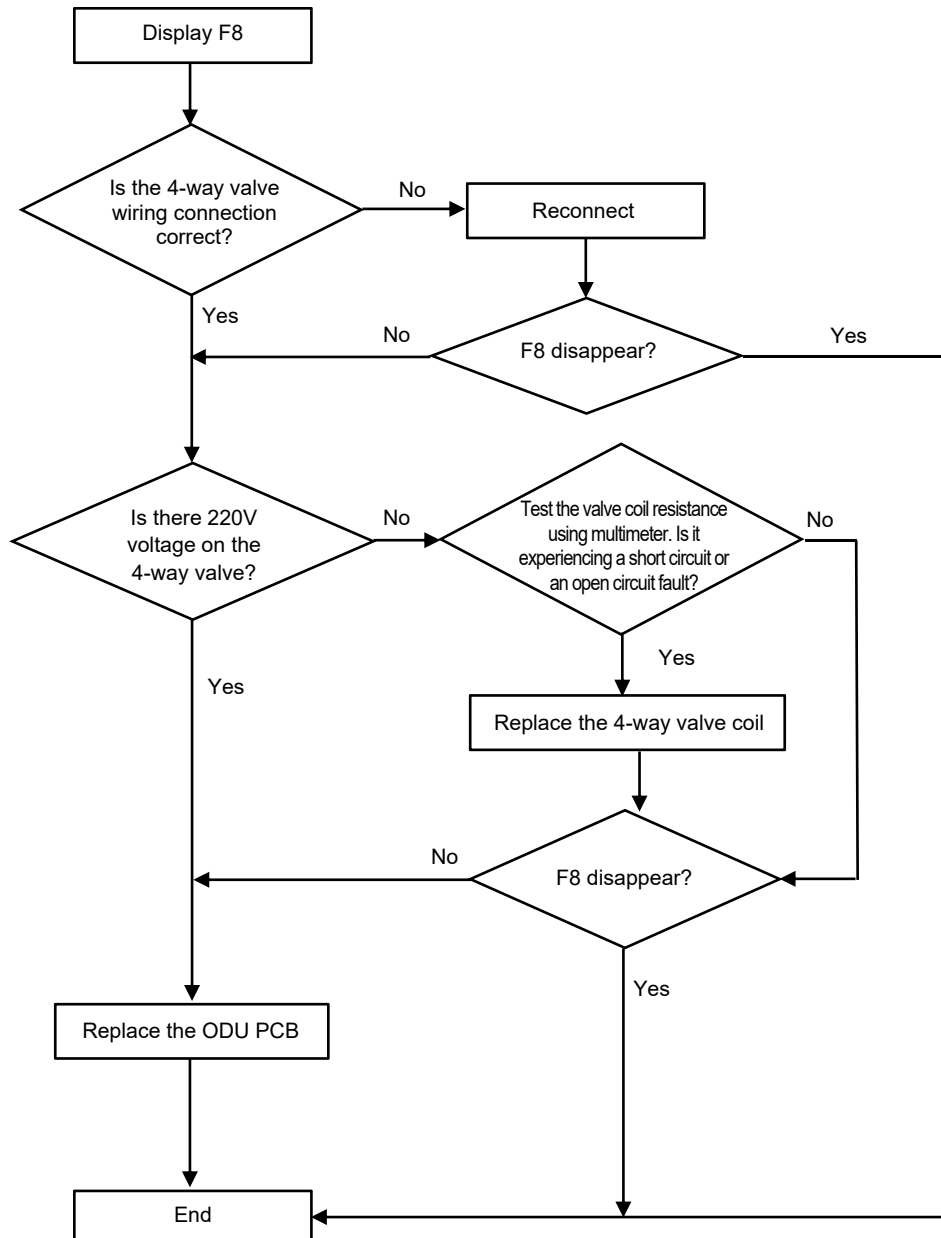

Troubleshooting

7

F9 Error Code: Module Test Circuit Temperature Failure

Reason: The IPM module temperature test circuit failure.

Season: Replace the outdoor unit PCB.

FA Error Code: Compressor Phase-Current Test Circuit Failure

Reason: The compressor phase-current test circuit failure


Season: Replace the outdoor unit PCB.

Troubleshooting

7

Fd Error Code: Refrigerant Leak Sensor Abnormal Communication Protection

If the unit detects a refrigerant leak, it displays error code "Fd." Turn off the unit immediately and contact a qualified technician to locate the leak.

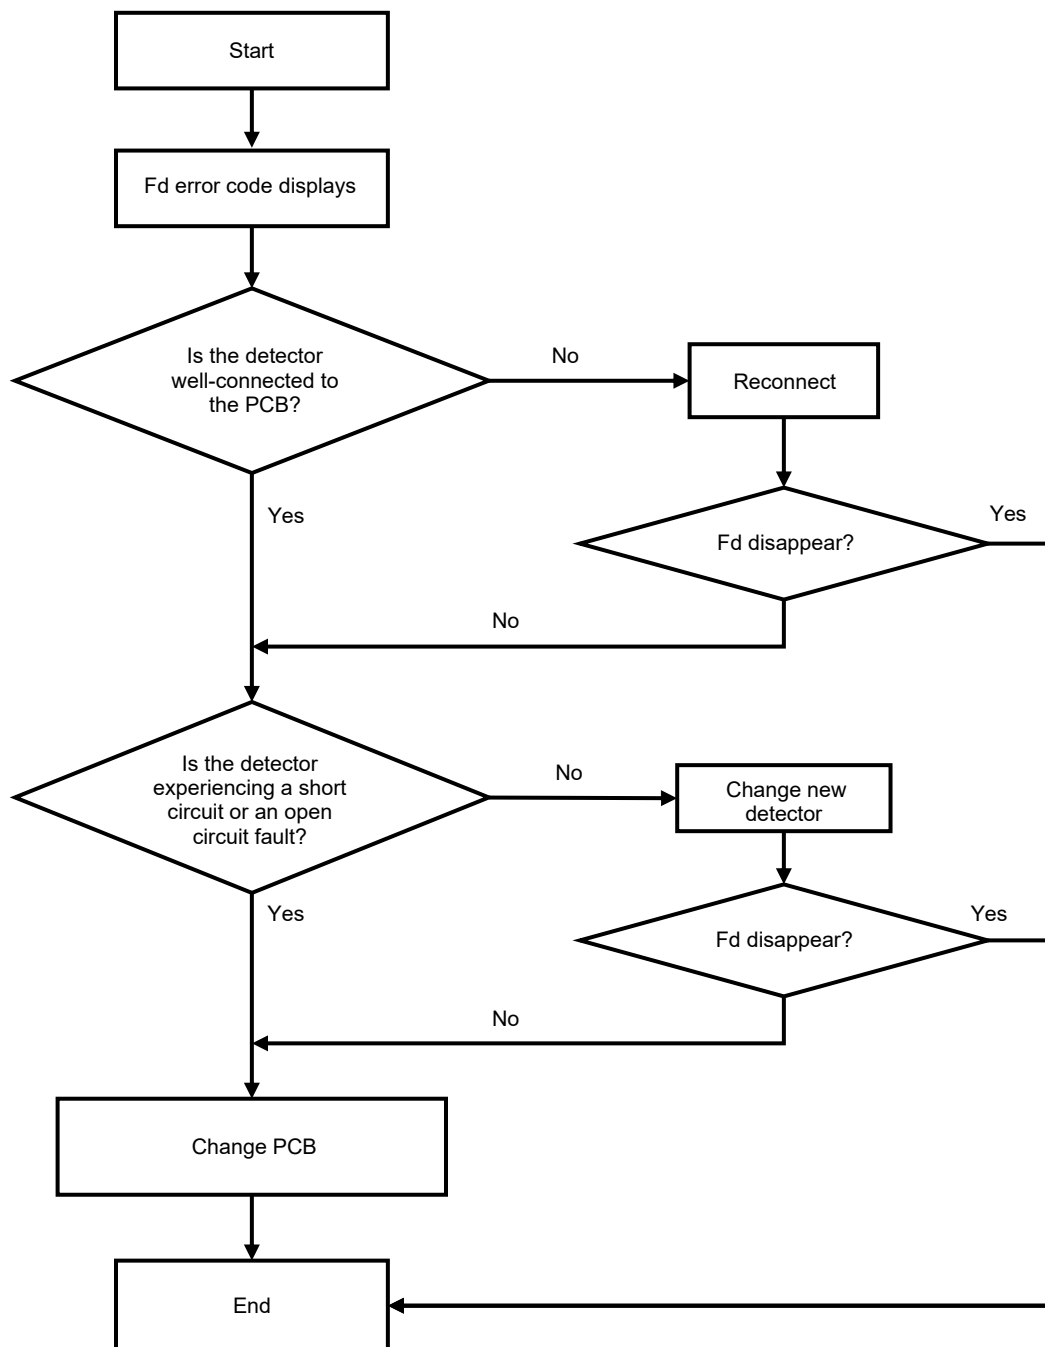


Troubleshooting

7

Fy Error Code: Refrigerant Deficiency Protection

After the compressor has run at high frequency for 9 minutes, if the indoor and outdoor coil temperatures have changed very little from their earlier readings but the compressor discharge temperature stays high, the unit displays error code "Fy."

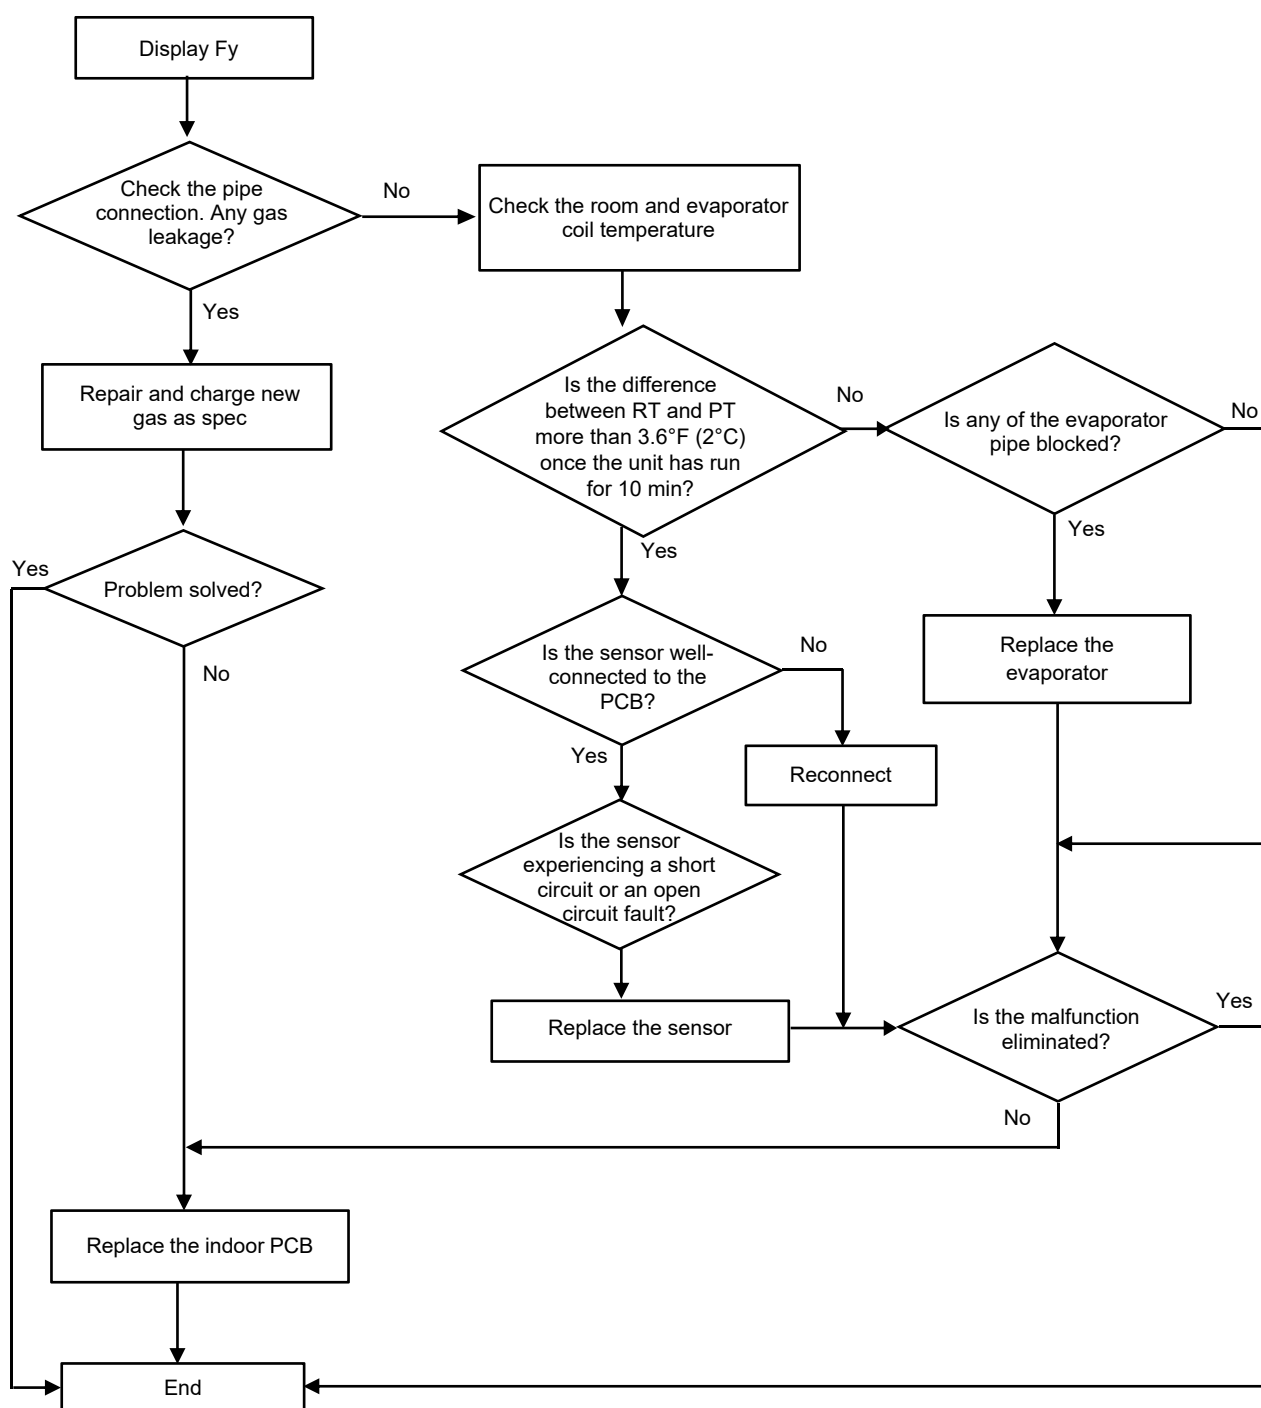


Troubleshooting

7

P0 Error Code: IPM Module Protection

If the IPM overheats or detects overcurrent, the unit displays error code "P0".

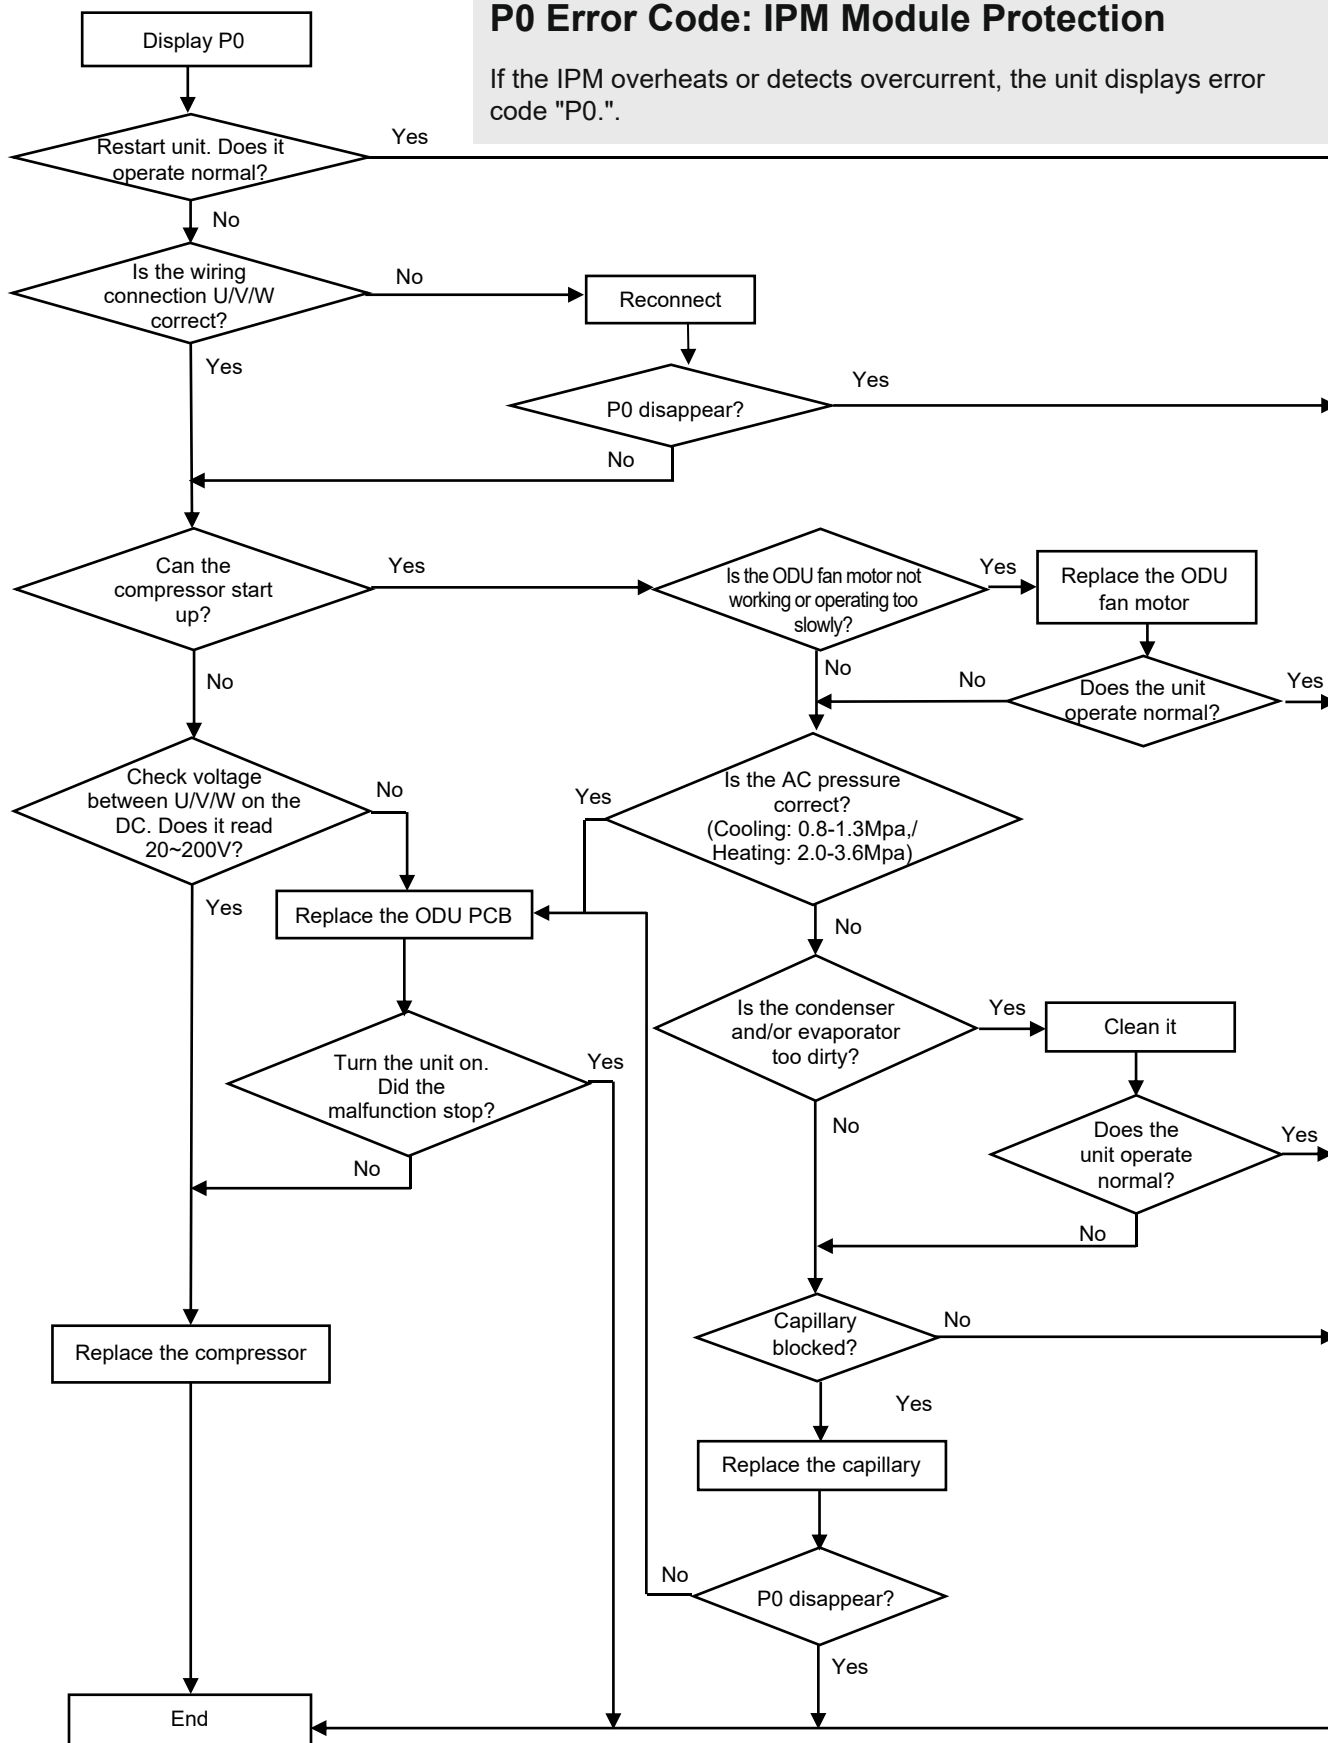


Troubleshooting

7

P1 Error Code: Over / Undervoltage Protection

1. The unit monitors the supply voltage between L and N. If the voltage rises above 260 V AC or drops below 150 V AC, the unit displays error code "P1." The unit returns to its previous operating state when the voltage rises above 155 V AC.


2. The unit monitors the DC bus voltage across the large electrolytic capacitor on the outdoor unit PCB. If the voltage rises above 420 V DC or drops below 150 V DC, the unit stops displaying error code "P1". The unit returns to its previous operating state when the voltage is between 190 V DC and 410 V DC.

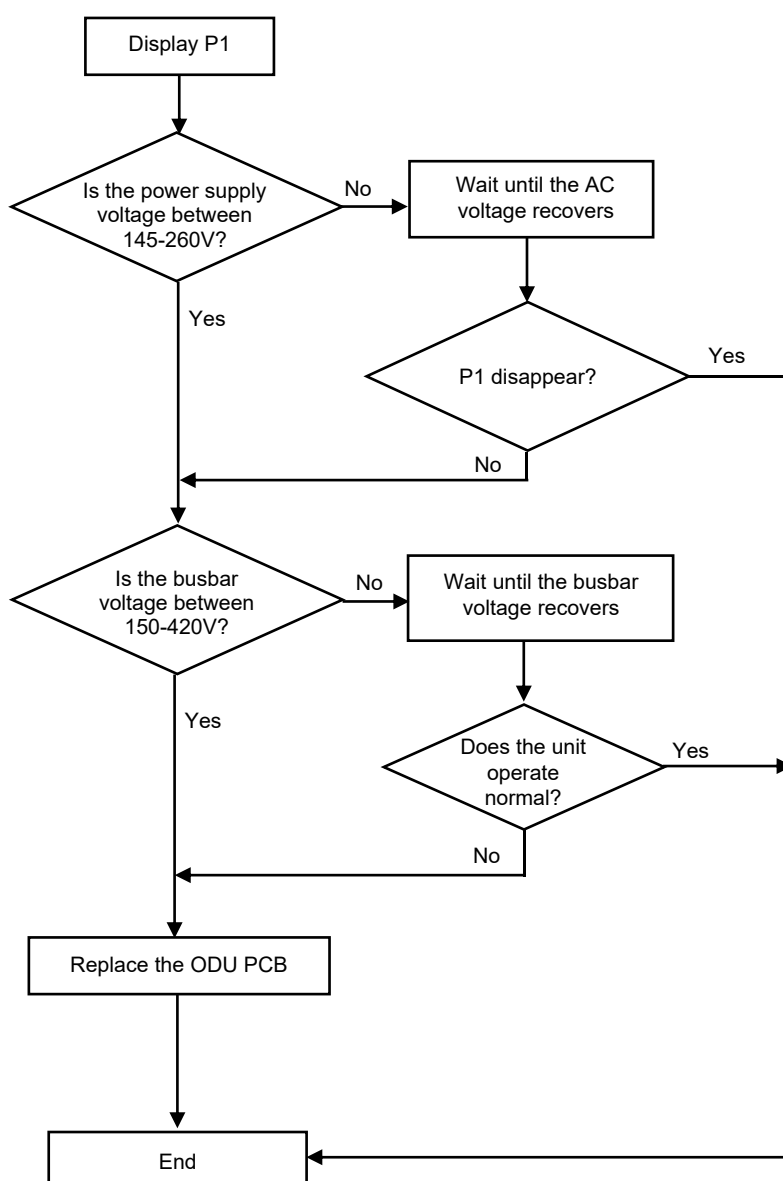

7

P2 Error Code: Overcurrent Protection

If the unit's operating current exceeds I_{max}, the unit stops and displays error code "P2." The I_{max} value varies by model.

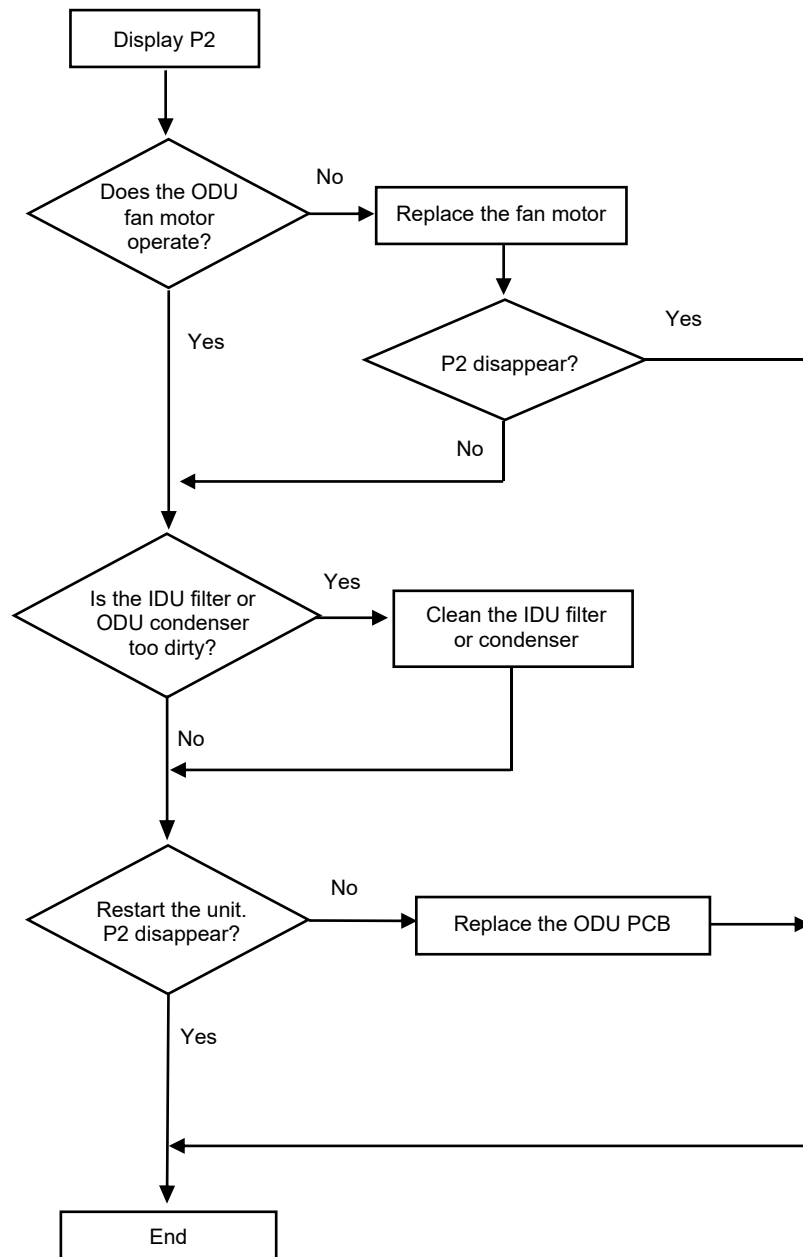


Troubleshooting

7

P4 Error Code: Excessive Outdoor Discharge Temperature Protection

Troubleshooting

7

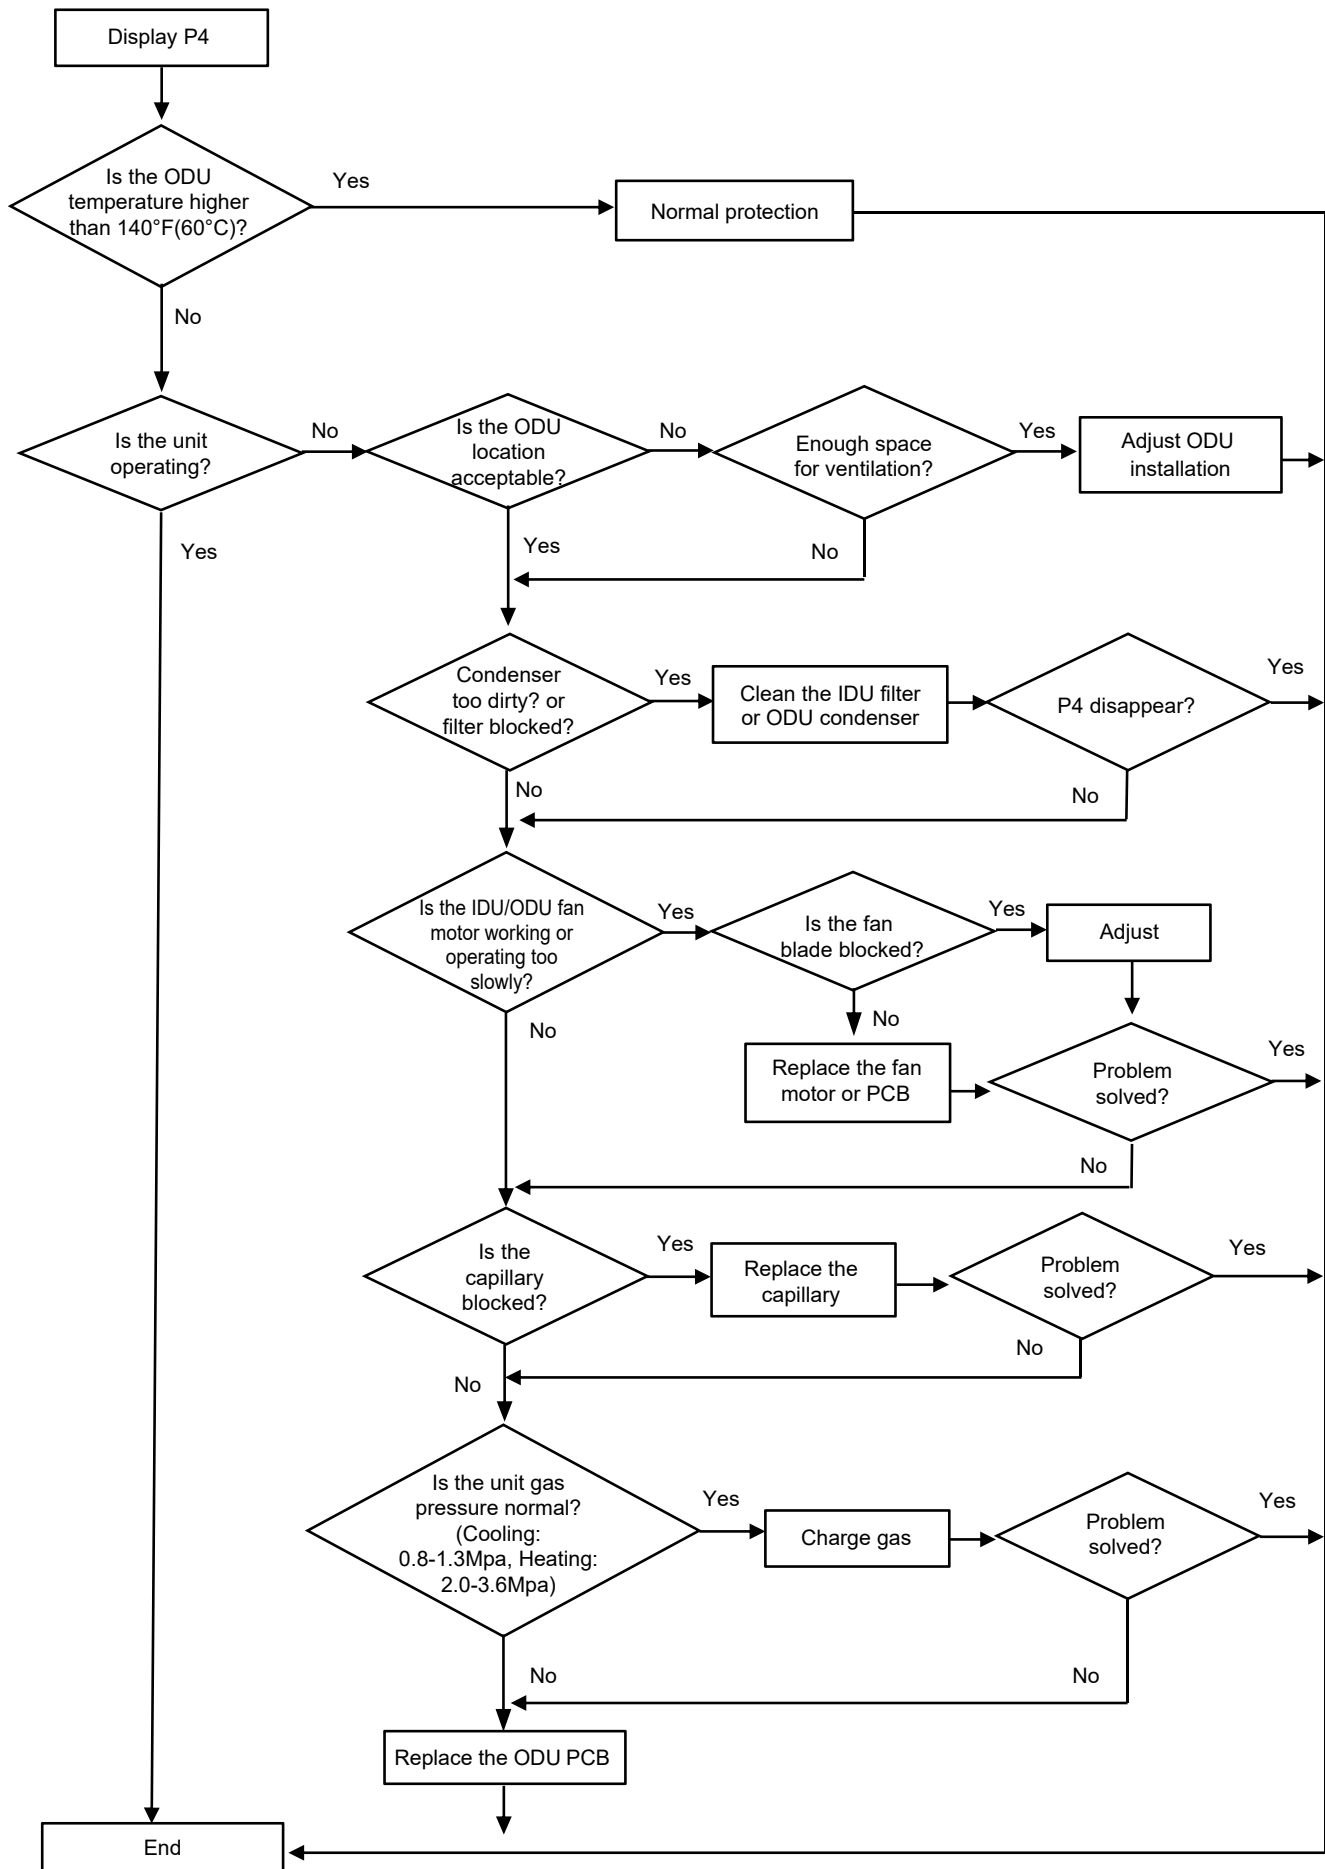


Troubleshooting

7

P5 Error Code: Cooling / Dry Mode Subcooling Preventative Protection

In Cooling or Dry mode, after the compressor has run for 6 minutes, if the IPT stays below 34°F (1°C) for 3 consecutive minutes, the outdoor unit stops and the unit displays error code "P5."

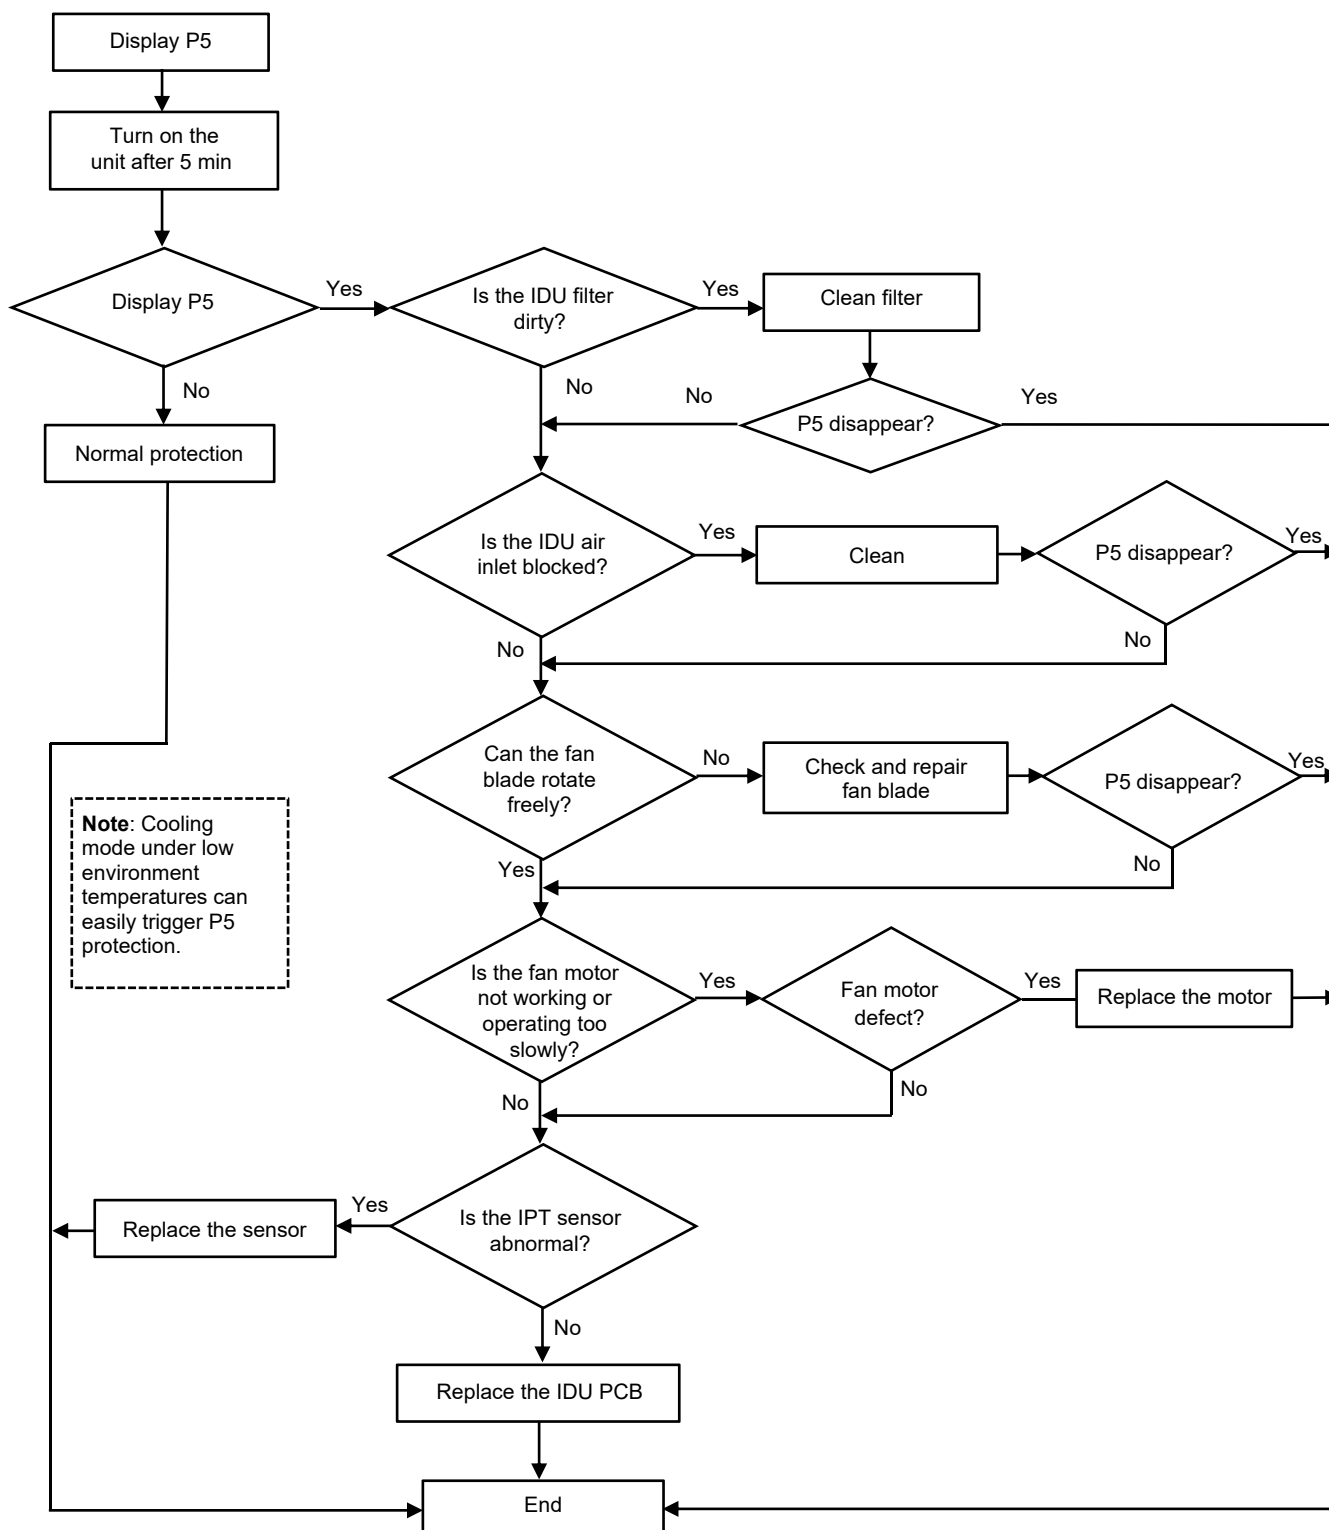


Troubleshooting

7

P6 Error Code: Cooling Mode Overheating Preventative Protection

In Cooling or Dry mode, if the outdoor coil temperature reaches 144°F (62°C) or higher, the outdoor unit stops and the unit displays error code "P6."

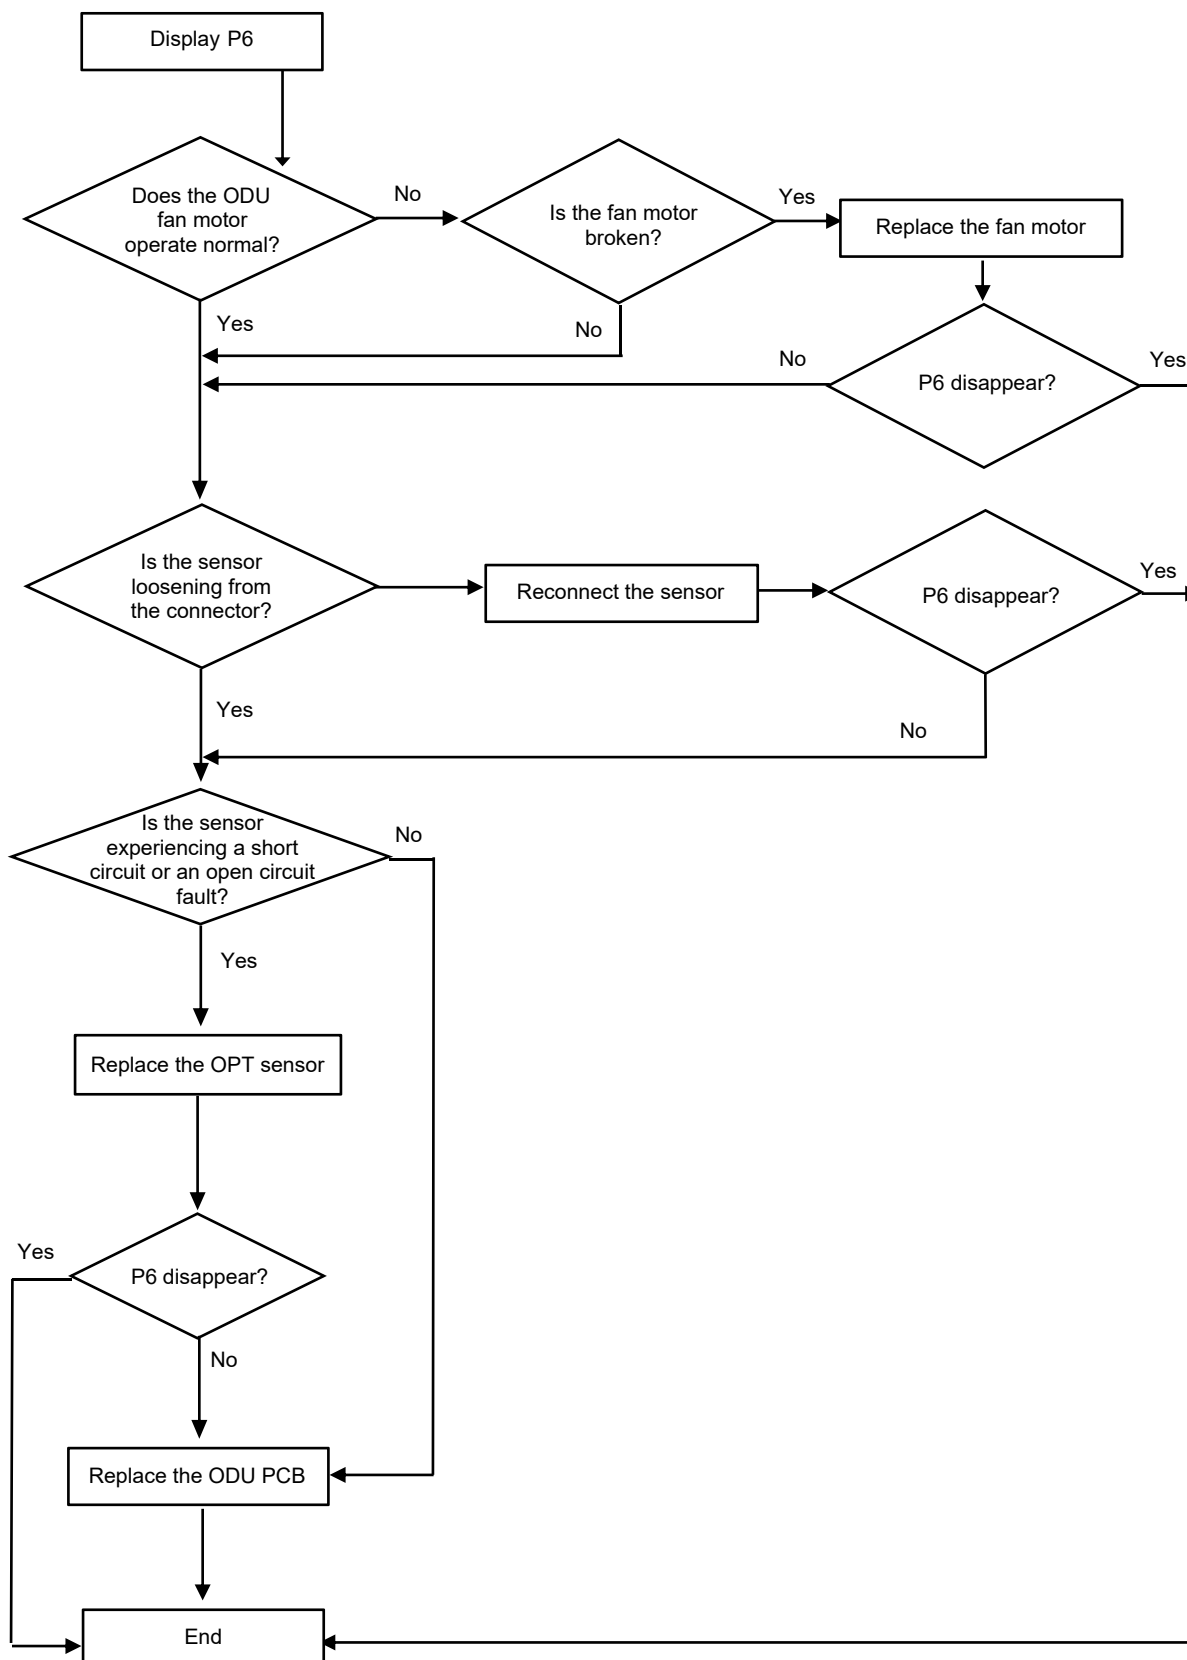


Troubleshooting

7

P7 Error Code: Heating Mode Overheating Preventative Protection

In Heating mode, if the IPT reaches 144°F (62°C) or higher, the outdoor unit stops and the unit displays error code "P7".

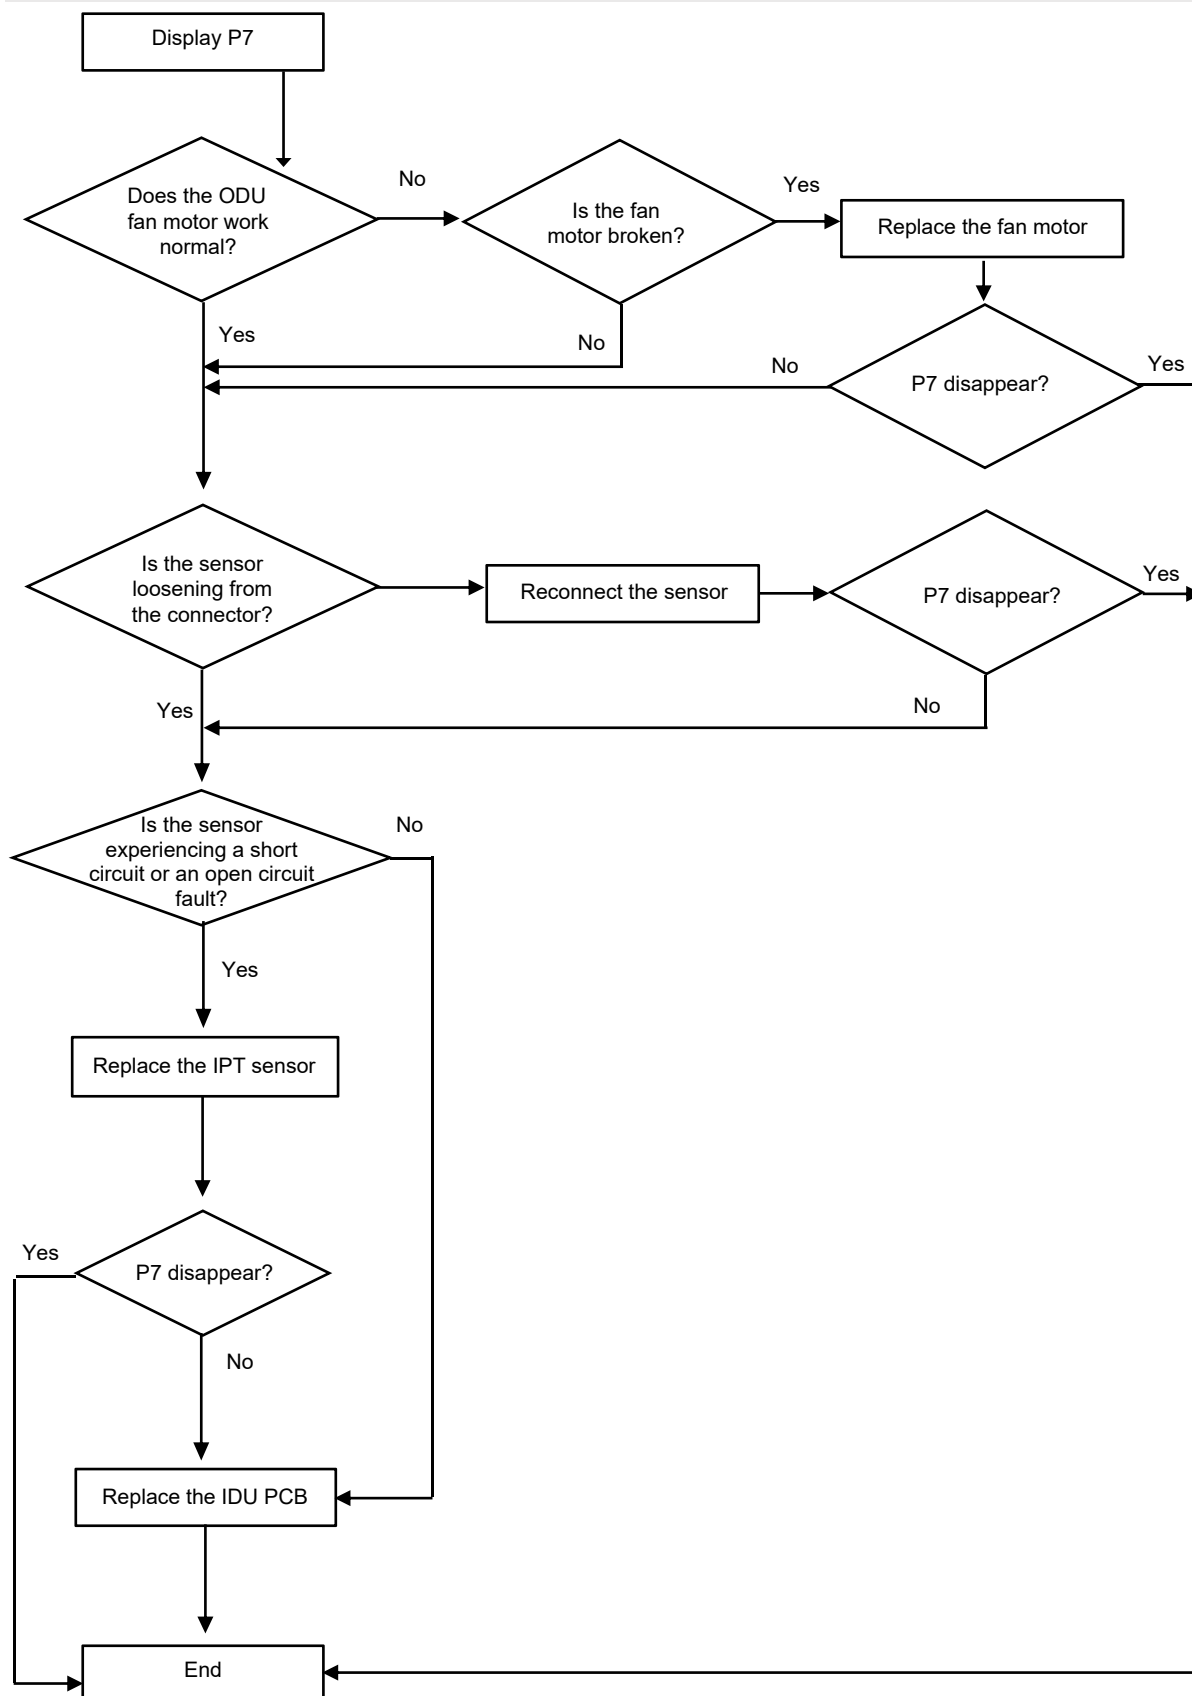

Troubleshooting

7

P8 Error Code: Outdoor Over-Temperature / Under-Temperature Protection


If the outdoor ambient temperature goes outside the following range, the compressor stops. After 200 seconds, the indoor unit displays error code "P8."

Cooling or Dry mode: Below -4°F (-20°C) or above 145°F (63°C).

Heating Mode:

A. $OAT \geq 104^{\circ}\text{F}$ (40°C)

B. 86°F (30°C) $< OAT \leq 104^{\circ}\text{F}$ (40°C) and $RT > 95^{\circ}\text{F}$ (35°C)

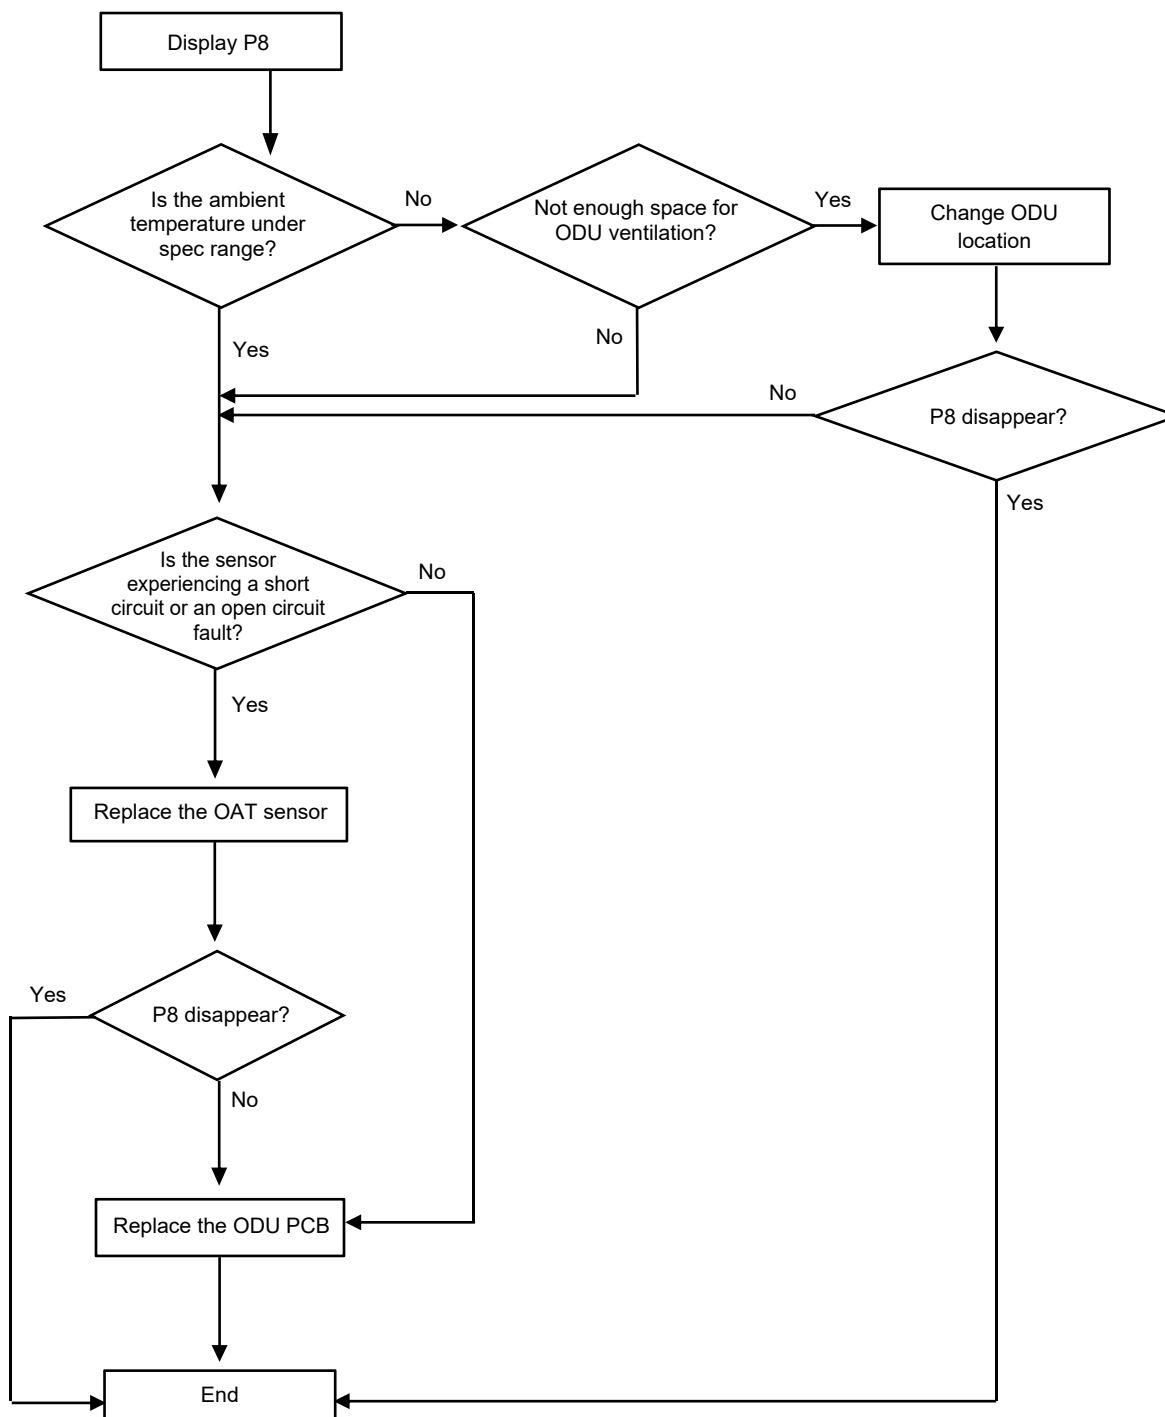

Troubleshooting


7

P9 Error Code: Compressor Drive Abnormal Load Protection

If any of the following occurs while the compressor is starting or running, the outdoor unit stops and the unit displays error code "P9":

1. The control board does not receive a feedback signal from the compressor.
2. The control board detects an abnormal signal from the compressor.
3. The compressor fails to start normally.

The unit then attempts to restart up to six times. If the compressor still does not operate normally, the unit displays error code "P9" again.

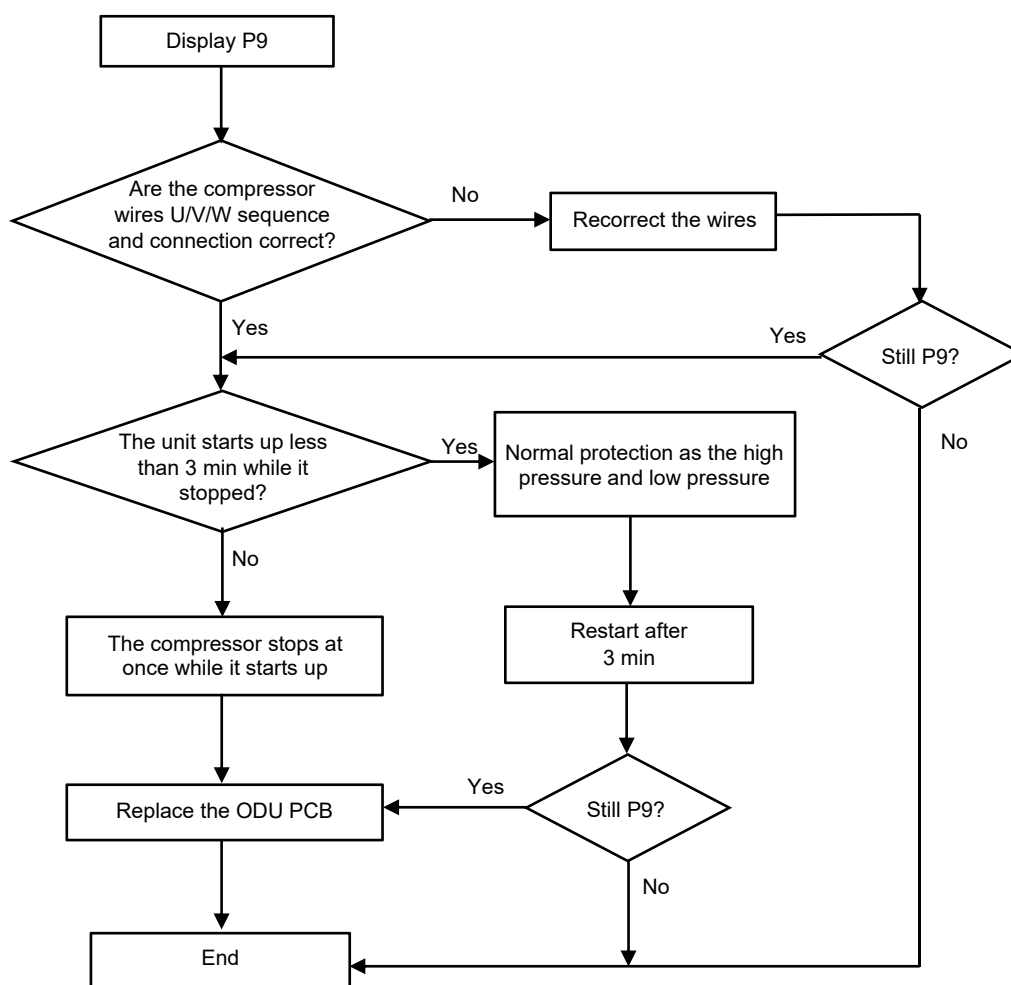

Remote Control

8

Notes


- Although button shapes and positions vary by model, their features and functions remain identical.
- The display and functional features of the remote controller may vary depending upon the specific system model.
- The unit beeps to confirm each button command.
- There may be a difference between the number of digits shown on the remote control (3) and the number on the indoor unit (2).

Remote Control

8

Remote Buttons Overview


Button	Description
	Turn the air conditioner on or off
TURBO	Activate/deactivate the Turbo feature to allow the system to rapidly reach set temperatures
MUTE	Put the system into Silent mode
MODE	Select the mode of operation (Auto, Cool, Dry, Fan, and Heat modes)
ECO	Activate/deactivate the ECO feature
	Long press to activate the 46°F “Away from Home” freeze protection setting
TIMER	Configure the automatic on/off times
^	Increase set temperature and timing, as well as navigate the functional menu
✓	Decrease set temperature and timing, as well as navigate the functional menu
FAN	Configure the fan speed (Auto, Low, Mid, and High)
	Activate/deactivate the up-down louver motor
	Activate/deactivate the left-right louver motor
DISPLAY	Turn the LED display on or off
SLEEP	Toggle the system's Sleep mode
I FEEL	Activate/deactivate the system's Follow Me mode
MEMORY	Recall saved temperature/mode/fan settings
CLEAN	Activate/deactivate Self-Clean mode
ACC	Reserved for future usage
[LOCK]	Hold MODE+TIMER for child-lock

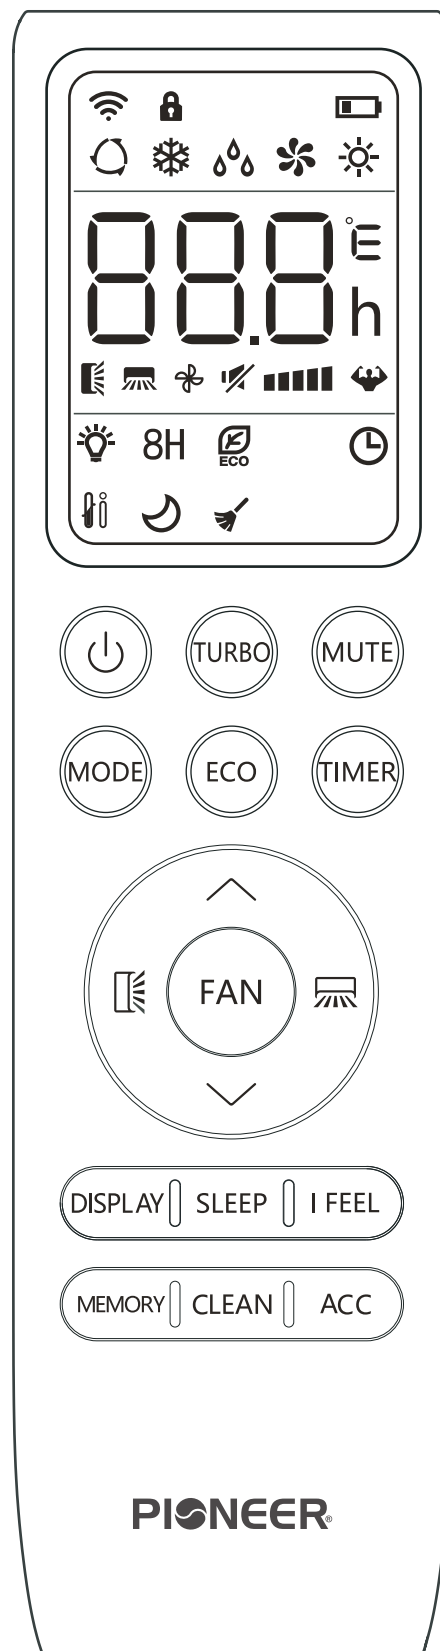

Remote Control

8

Remote Control LED Screen & Icons

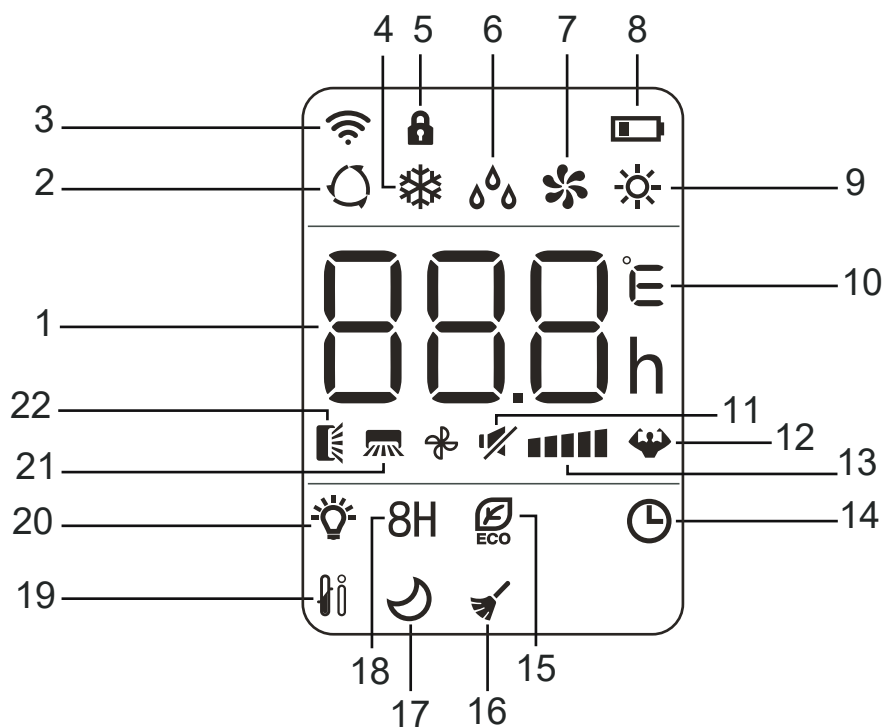

No.	Icon	Description
1	8.8	Temperature indicator
2	Auto mode icon	Auto mode
3	Signal transmit indicator	Signal transmit indicator
4	Cooling mode icon	Cooling mode
5	Child lock indicator	Child lock indicator
6	Dry mode icon	Dry mode
7	Fan Only mode icon	Fan Only mode
8	Battery level indicator	Battery level indicator
9	Heating mode icon	Heating mode
10	Unit of temperature (°C/°F)	Unit of temperature (°C/°F)
11	Mute function icon	Mute function

No.	Icon	Description
12	Turbo mode icon	Turbo mode
13	Fan speed (Auto or Fixed)	Fan speed (Auto or Fixed)
14	Timer active indicator	Timer active indicator
15	ECO mode icon	ECO mode
16	Self-Clean function icon	Self-Clean function
17	Sleep function icon	Sleep function
18	8°C (46°F) Heating function icon	8°C (46°F) Heating function
19	I Feel/Follow Me mode icon	I Feel/Follow Me mode
20	LED display on/off icon	LED display on/off
21	Left-Right swing indicator icon	Left-Right swing indicator
22	Up-Down swing indicator icon	Up-Down swing indicator

Emergency Manual Button

9


Emergency Manual Button

The emergency button on the front of the indoor unit can be used for a function test if the remote controller is malfunctioning or the batteries have lost power. Do not press the emergency switch during normal operation.

The following are available functions using the Emergency manual button:

- First press: Activates Cooling mode.
- Second press (within 3 seconds): Activates Heating mode.
- Third press: Turns the system off.

The emergency button is under the front panel, on the unit's terminal block cover.

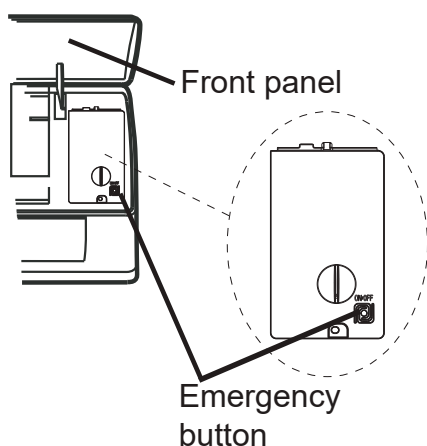

If the remote controller fails to operate the system, follow these steps:


1. Open and lift the front panel at an angle to access the emergency button.
2. Press the manual button once to start the unit in Cooling mode.
3. Press the button again within 3 seconds to start the unit in Heating mode.
4. Press the button a third time within 5 seconds to turn off the unit.

Wiring Diagrams


10

Control Board Wiring Diagrams

Indoor Units: WT009ALUI20HLE, WT009GLUI20HLE, WT012ALUI20HLE, WT012GLUI20HLE, WT018GLUI20HLE, WT024GLUI20HLE

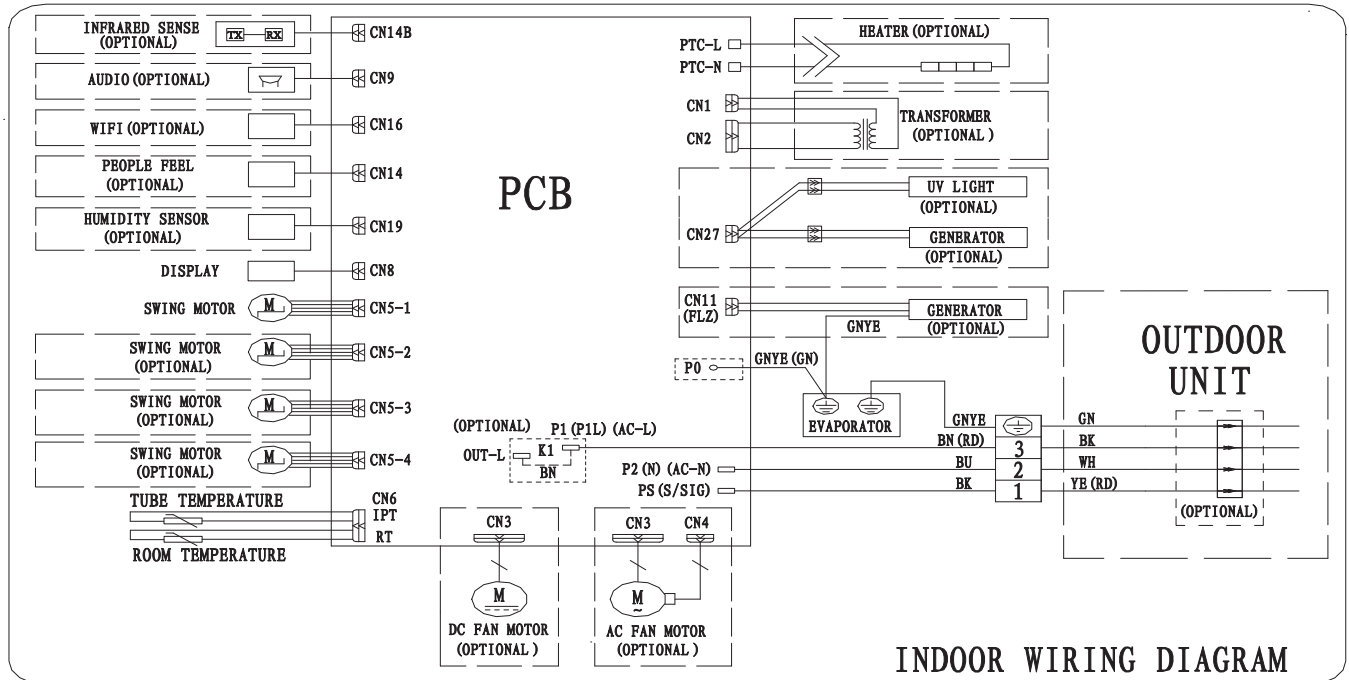


Indoor Units: WT030GLUI20HLE, WT036GLUI20HLE

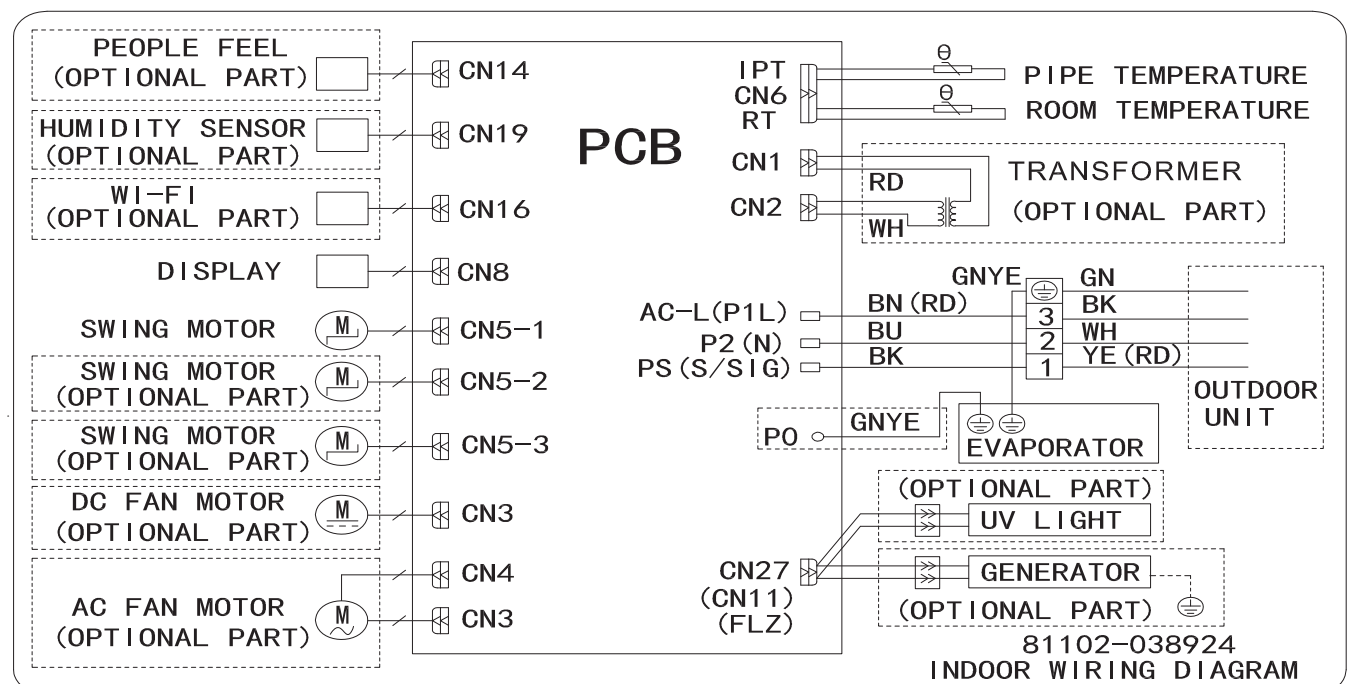


Wiring Diagrams

10

Outdoor Unit: YN009ALUI20RPE

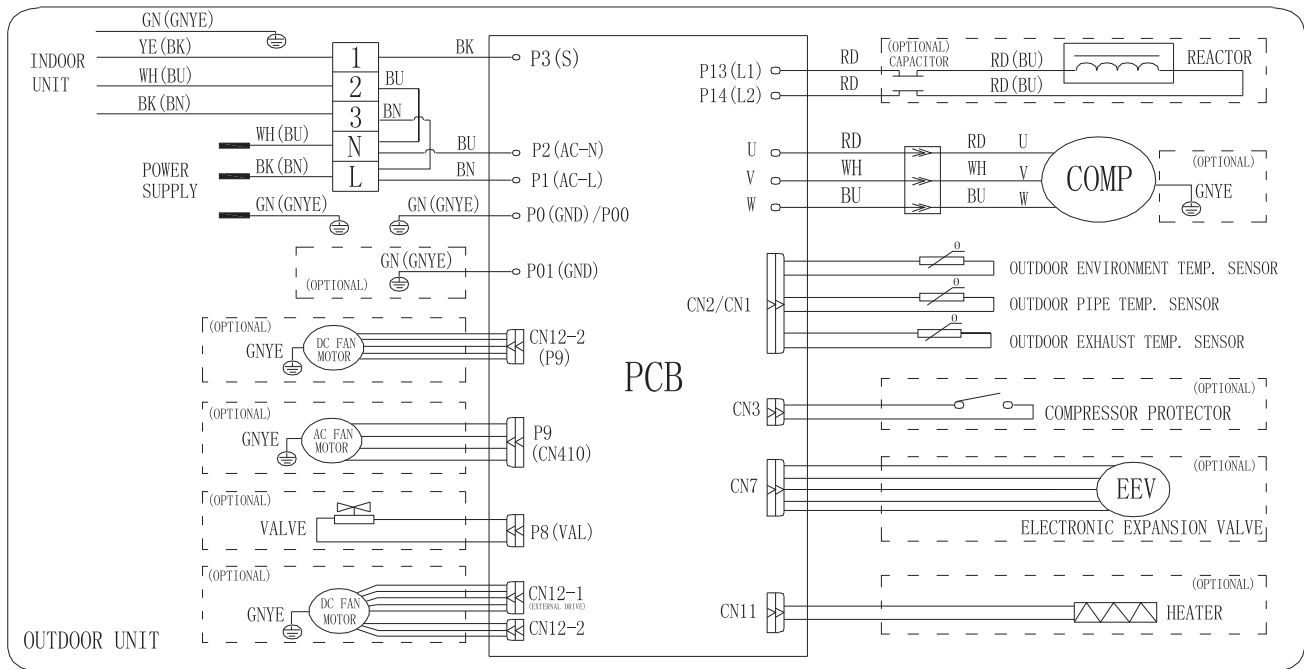


Outdoor Units: YN012ALUI20RPE

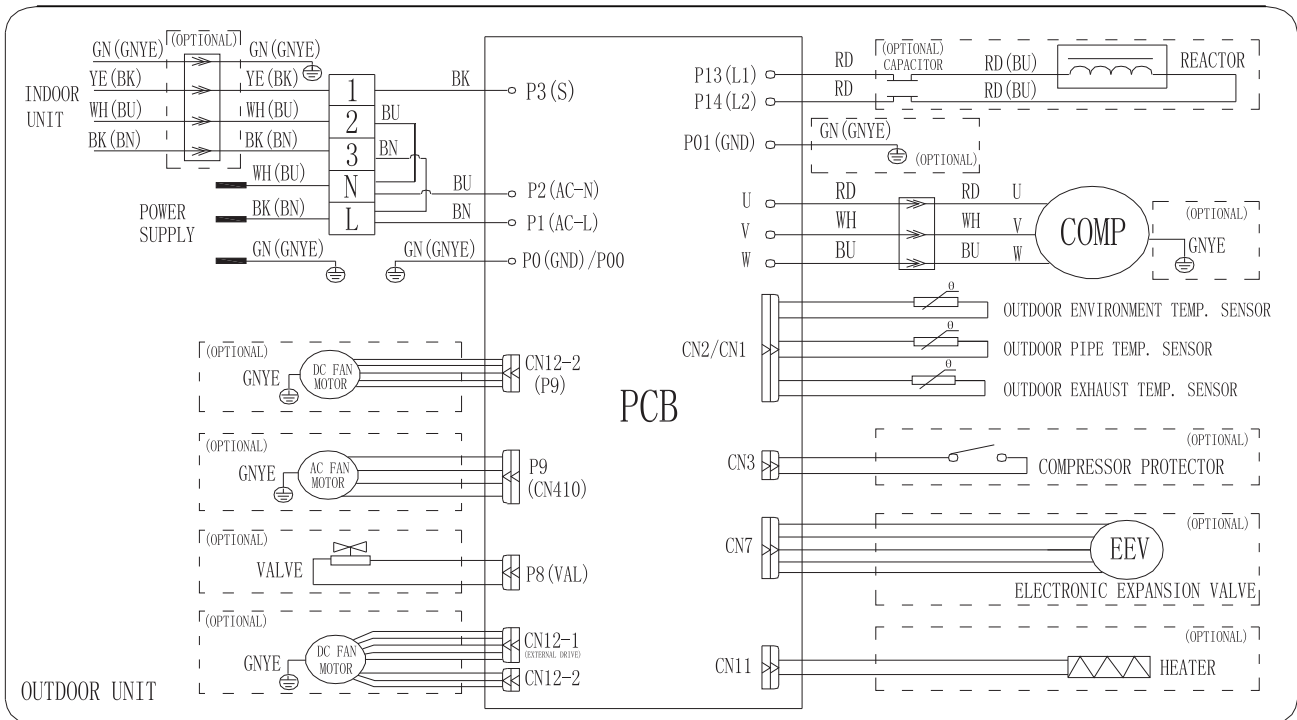

Wiring Diagrams

10


Outdoor Units: YN009GLUI20RPE, YN024GLUI20RPE, YN030GLUI20RPE, YN036GLUI20RPE

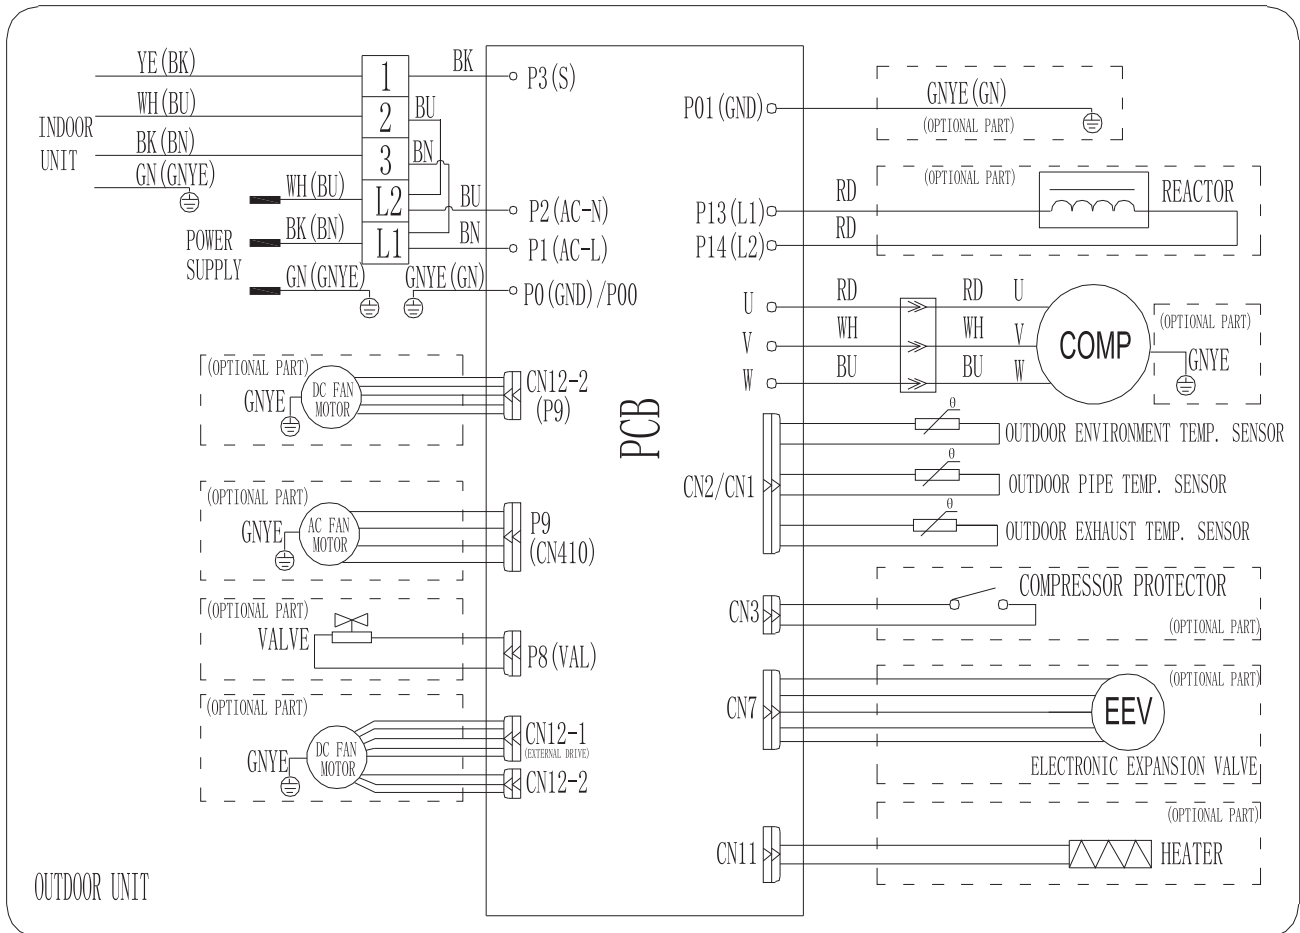

Wiring Diagrams

10

Outdoor Units: YN012GLUI20RPE, YN018GLUI20RPE

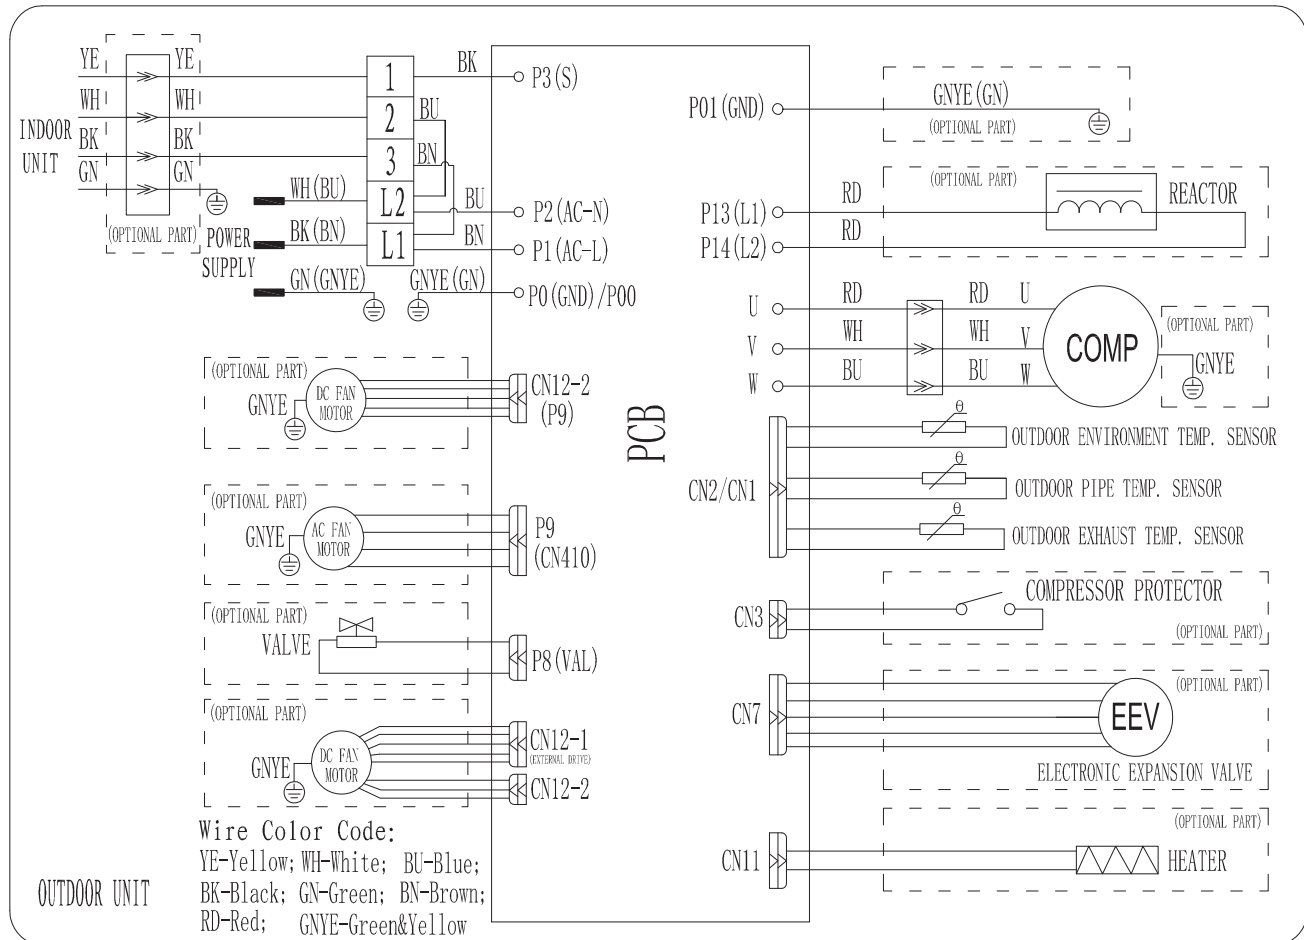

The design and specifications of this product are subject to change without prior notice as development continues. Consult with the sales agency or manufacturer for details. Refer to the equipment nameplate for all other applicable specifications.



is a registered trademark of Parker Davis HVAC International, LLC.

Parker Davis HVAC International
7290 NW 77 Court, Miami, FL 33166 - USA
Tel : (305) 513-4488
Fax : (305) 513-4499
E-mail : info@pdhvac.com
Website: www.pdhvac.com

Pioneer product line, parts, and supplies are
available online for convenient ordering at:
www.highseer.com
www.pioneerminisplit.com

Scan the below code to visit our support page
where you can find more installation materials:



Copyright 2025, Parker Davis HVAC International, LLC., All rights reserved.
