


UNDER-BENCH RV HEAT PUMP AIR CONDITIONER

PIONEER®

MODEL NO: **PYR009AZFRVBKE**

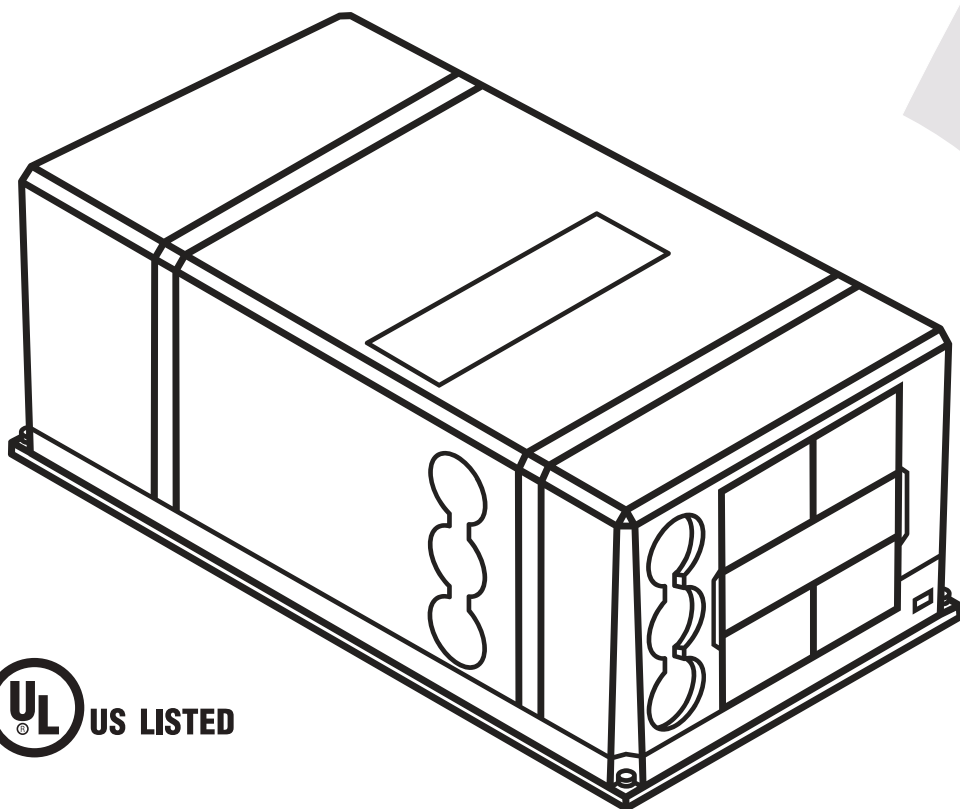

Owner's Manual

- ☒ Installation
- ☒ Operation
- ☒ Maintenance

IMPORTANT NOTICE:

Please read this manual carefully before installing or operating your new air conditioning system. Be sure to save this manual for future reference.



WiFi Ready

FCC IDENTIFIER:2ANDL-WR3



REV050423

INSTRUCTIONAL HANDBOOK

Table of Contents

I. Operational Instructions.....1

1. Safety Information.....	1
2. Scope and Purpose of This Manual.....	2
3. Model Number and Technical Details Identification.....	2
4. Description and Illustration of the Machine.....	3
5. Best Practices for Optimal Performance.....	4
6. Description of the Controls.....	5
7. Automatic Mode Operation.....	6
8. Cooling Mode Operation.....	6
9. Dehumidification Mode Operation.....	7
10. Ventilation Mode Operation.....	7
11. Heat Pump Mode Operation.....	8
12. Night Mode Operation.....	8
13. Timer On and Timer Off Mode Operation.....	9
14. Handling of the Remote Controller.....	10
15. Description of the Wall Controller.....	10
16. Routine Maintenance.....	11

II. Installation Information.....12

1. Technical Specifications.....	12
2. Getting Started	13
3. Selecting the Location of Installation.....	14
4. Preparation of Floor Openings and Unit Fastening.....	15
5. Securing the System to the Floor.....	16
6. (Optional) Creating a Side Cutout for Optimal Efficiency.....	17
7. Fastening the System Into Place.....	18
8. Placement of the Wall Thermostat.....	19
9. Recirculation Air Compartment Opening.....	20
10. Air Ducting.....	20
10. Electrical Hookup.....	21
11. Simplified Wiring Diagram.....	21

III. Troubleshooting, Maintenance, Recycling.....22

1. Troubleshooting and Diagnosis.....	22
2. European Disposal Guidelines.....	23

OPERATIONAL INSTRUCTIONS

Safety Information


⚠ CAUTION - Read Before You Proceed

Read and Understand All Safety Precautions Prior to Installation

For safe operation, it is imperative that the following rules are obeyed:

- This appliance can only be used by children aged 8 years and above, or by persons with reduced physical, sensory, or mental capabilities, or persons with lack of experience and knowledge, if they have been given supervision or instructions concerning usage of the appliance in a safe way and understand the potential hazards involved.
- Children shall not play with this appliance. Proper cleaning and user maintenance shall not be done by children without supervision.
- If supply cord is damaged, it must be replaced by the manufacturer, a certified service agent, or other qualified persons to avoid hazard.
- The appliance shall have a full disconnect switch in the hardwire configuration in accordance with the national electrical standards.

Electrical Danger

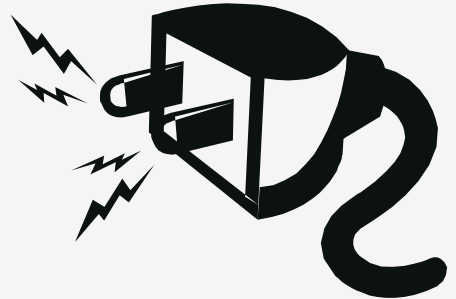

Failure to abide by the manufacturer cautions can result in property damage, personal injury and/or death.

⚠ WARNING - The Manufacturer Is Not Liable For the Following:

- Units that have sustained damage due to improper installation or have been connected with an incorrect voltage. Abide by the installation instructions fully and completely to prevent unexpected malfunctions.
- Products that have had extra modifications, where written consent was not provided by the manufacturer.
- Product usage in a way that is not the intended purpose as described in this operational instruction manual.
- Any sort of collateral damage to property or injuring to nearby persons caused by failure of the product.
- Improperly grounded products. The product must be properly grounded at the time of installation, else electrical shock may occur.
- Incorrect configuration of drainage. Install drainage channels according to the instructions in this manual. Improper drainage may cause water damage to your vehicle and property.

🔧 Note about Fluorinated Gasses and Operation of the System

1. This air-conditioning unit contains fluorinated gasses. For specific information on the type of gas and the amount, please refer to the relevant label on the unit itself.
2. Installation, service, maintenance, and repair of this unit must be performed by a certified HVAC technician, or qualified personnel familiar with the risks of handling refrigerant and regulations of air conditioner systems.
3. Product uninstallation and recycling must be performed by a certified HVAC technician.
4. Do not use the system near combustible objects or flammable fluids. Keep a distance of at least 2 feet from other nearby appliances. If a fire occurs, a proper extinguishing agent, rather than water, must be used.
5. When the unit is being checked for leaks, proper logging and record-keeping of all checks by certified personnel is strongly recommended. Refrigerant must never be released into the air, a proper recovery device should be used.
6. The system and/or its internal moving parts should not be touched, poked, or prodded during operation.




OPERATIONAL INSTRUCTIONS

Scope and Purpose of This Manual

This manual has been specifically compiled by the manufacturer and is an essential component of the machine. The information contained within can guarantee proper usage of the machine, if observed and followed carefully.

Sections **I** and **III** are intended to provide helpful instructions and knowledge to the end user. Section **II** is intended to instruct the installer, who should be a person that possesses expert knowledge and experience in this field of work.

Where applicable, some portions of text may be accompanied by certain symbols, that of which can be understood by referencing the below table:

-  This symbol indicates a potential source of danger.
-  This symbol indicates useful information or a helpful tip.
-  This symbol indicates information on being environmentally friendly.

Model Number and Technical Details Identification

Interpreting the Rating Label:




Technical Specifications

PIONEER UNDER-BENCH RV AIR CONDITIONER

POWER: 115V/60Hz/1Ph
COOLING CAPACITY(BTU/h): 9000
HEATING CAPACITY(BTU/h): 9000
REFRIGERANT R410A(oz.): 19.4
RATE COOLING AMP: 8.29
RATE HEATING AMP: 6.8
DESIGN PRESSURE HIGH: 525PSIG
DESIGN PRESSURE LOW: 236PSIG

MODEL NO.: PYR009AZFRVBKE
SERIAL NUMBER: See Barcode.
PARKER DAVIS HVAC INTERNATIONAL, INC.
Miami, FL - www.pdhvac.com - (800)-675-7410

 **US LISTED**
ROOM AIR CONDITIONER
3TY1

ASSEMBLED IN CHINA

**Model
Number**

**Supplier
Information**

OPERATIONAL INSTRUCTIONS

Description and Illustration of the Machine

The purpose of this machine is to provide greater control of the air temperature within the vehicle that it is installed (such as motor homes, caravans, recreational vehicles, etc.). When the ambient outdoor temperature is hot and humid, it can supply the vehicle with cool and dehumidified air via the refrigeration cycle.

It can also run this process in reverse, to supply heated air into the vehicle, whether as a supplement, or replacement for the vehicle's original heating system. In both instances, the setting of the desired air temperature is configurable by the user.

The system is composed of: **(A) Compressor, (B) Condenser, (D) Evaporator, (F) 4-Way Valve and Pressurized Refrigerant R410a.**

❶ Cooling Mode - Description of Operation

By changing physical state from liquid to gas, the refrigerant heats or cools the components through which it passes. The air that is drawn into the system (the "return air") by the fan blower (C) flows through the evaporator which has been made significantly cold. The air then comes out cooled and removed of humidity (the "supply air").


This process repeated continuously over a long period of time leads to a reduction in the air temperature and humidity levels inside the vehicle.

❷ Heating Mode - Description of Operation

The method of heating is quite similar to that of cooling, however the process occurs in reverse.





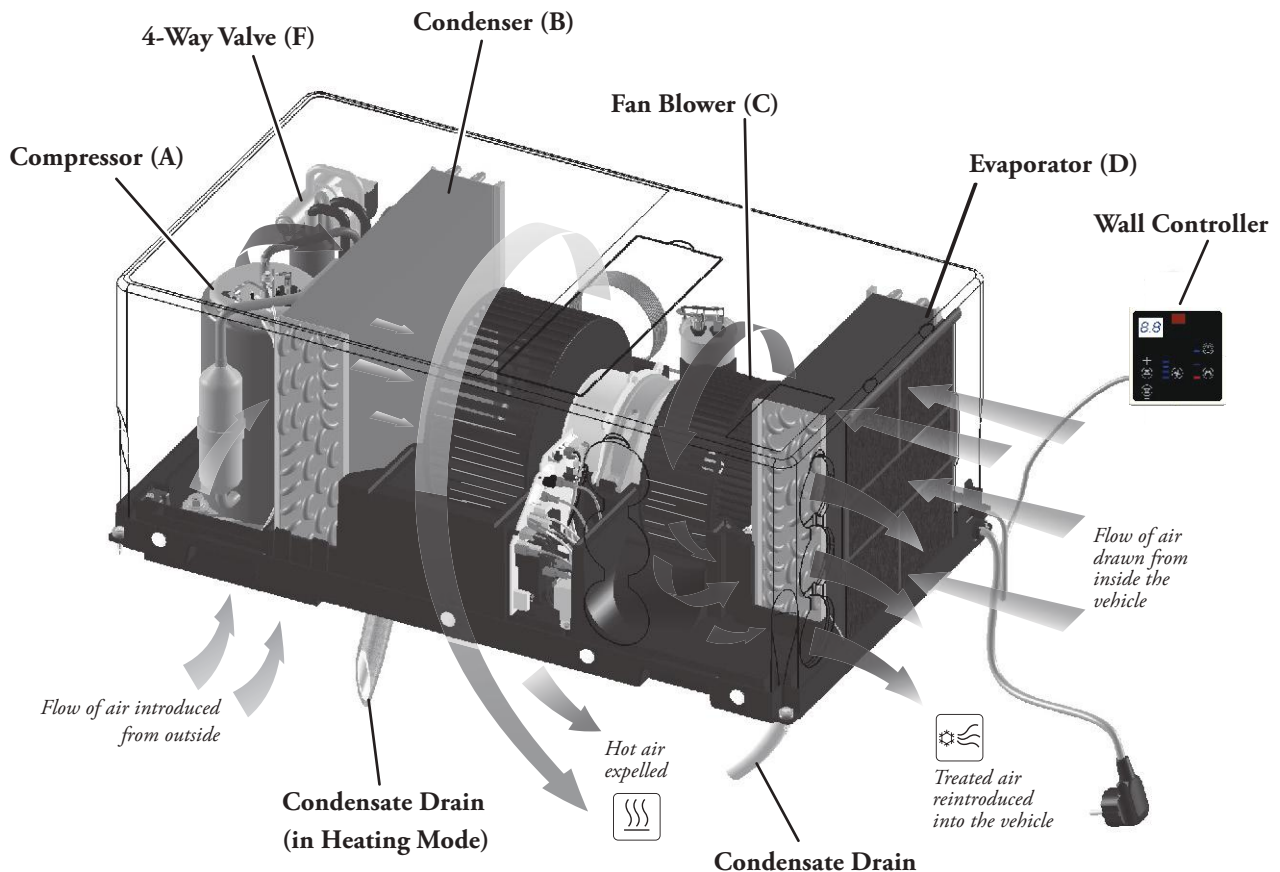





The refrigeration cycle is reversed by the 4-way valve switching over (F). The internal coil becomes the condenser rather than the evaporator, thereby heating the air that passes through it.

This process takes more standby time as the internal coil spends a few minutes heating up to begin working, in addition to periodic defrost cycles from the machine.



OPERATIONAL INSTRUCTIONS

Best Practices for Optimal Performance

-  *For best results, the following tips are given in order to improve the output and efficiency of the machine:*
-  Increase the vehicle's insulation amount by sealing off openings and covering glass surfaces with reflective or blackout curtains.
 -  When running the machine, select the desired temperature and fan speed and ensure that the air vents are oriented in a suitable and proper direction.
 -  Avoid the frequent opening of doors and/or windows when not necessary.
-  *To prevent mechanical malfunctions and minimize risk of personal injury, ensure that the following precautions are abided by:*
-  Avoid obstruction of the ventiled air inlet. Do not cover with cloth, paper, etc.
 -  Do not put hands or insert fingers into any of the machine's openings.
 -  Do not spray water into or onto the surface of the machine.
 -  Keep flammable substances and objects 3 feet or more away from the machine.
 -  Clean the machine's air filters periodically.


OPERATIONAL INSTRUCTIONS

Description of the Controls

❶ Selecting the Functional Mode:

Press the **MODE** button to cycle between the available states on the machine. After two seconds have elapsed, the system will confirm the selection with an audible beep from the machine's speaker. Always point the remote controller toward the wall pad when sending commands to ensure the best reception.

NOTE: When first switching on the system, the machine will stay in standby mode for a few minutes before the compressor begins operating.

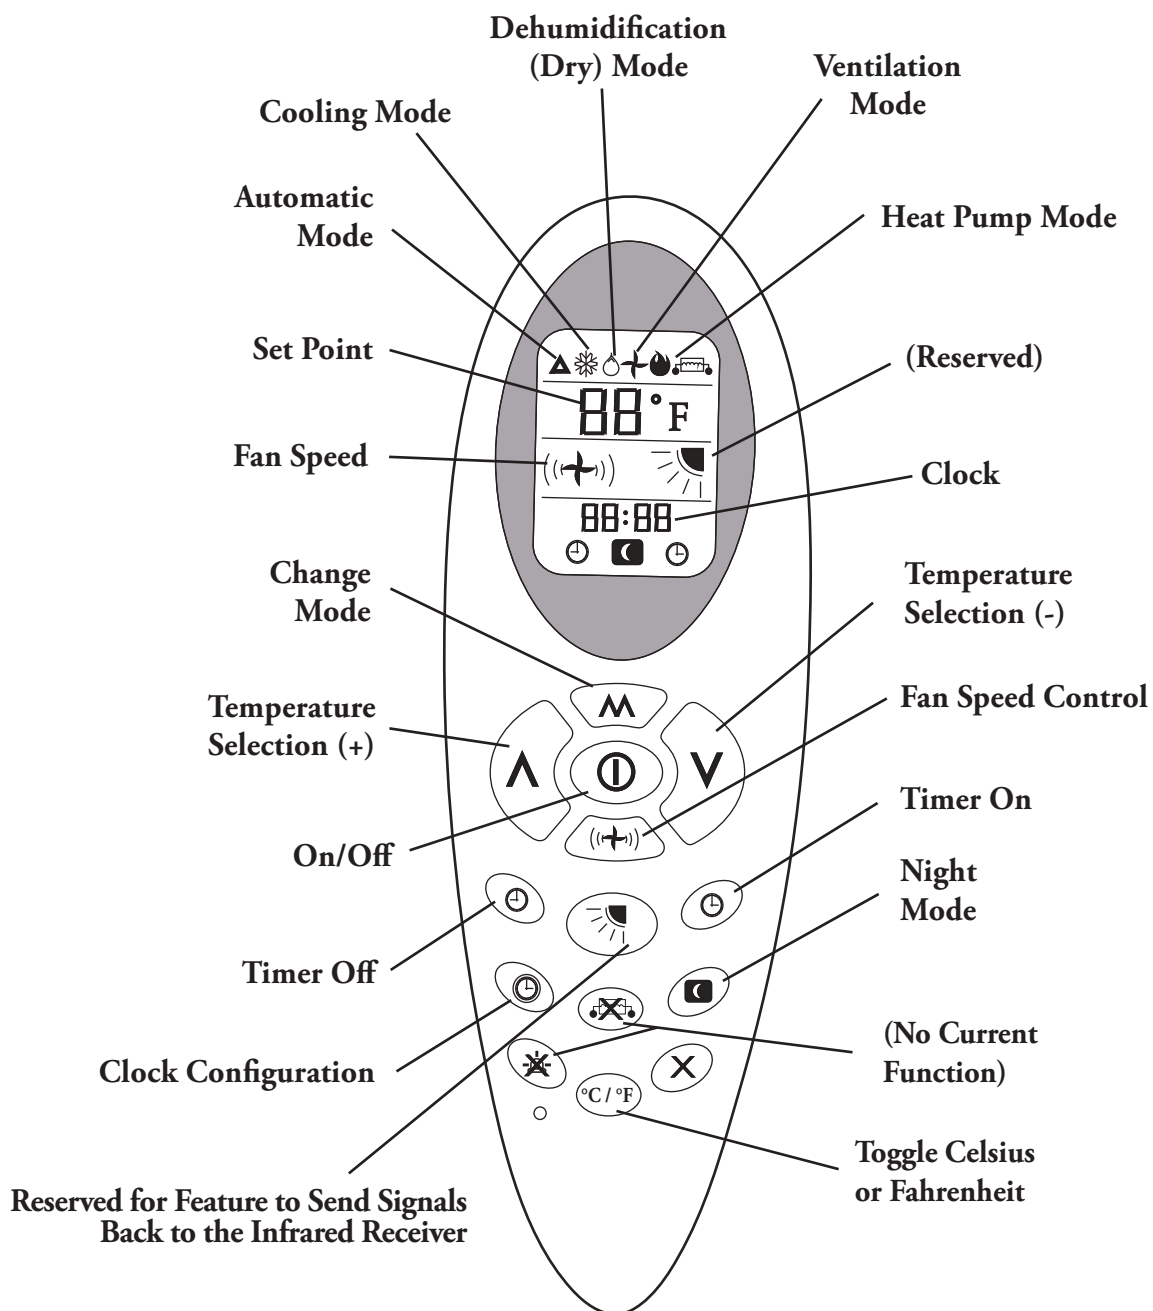

X = Reserved/No Current Function

OPERATIONAL INSTRUCTIONS





Automatic Mode Operation


In **AUTO** mode, the system manages the compressor, heat pump, and fan speeds entirely autonomously by comparing the set temperature with the current internal temperature as given in the following table:

Internal Temperature	$T \leq 68^{\circ}\text{F}$	$68^{\circ}\text{F} < T < 77^{\circ}\text{F}$	$T \geq 77^{\circ}\text{F}$
Operating Mode	Heating, Ventilation	Dehumidification, Ventilation	Cooling
Set Point	68°F	72°F	77°F

On the **AUTO** speed setting the ventilation speed is set according to the difference in temperature between the set point and the current ambient temperature.

Automatic Mode Button Control:

	Press the On/Off button to switch the machine on or off
	Press the Change Mode button to select AUTO mode
	The temperature selection buttons are disabled in this mode
	Press the fan speed button to select low, medium, high, or automatic fan speed

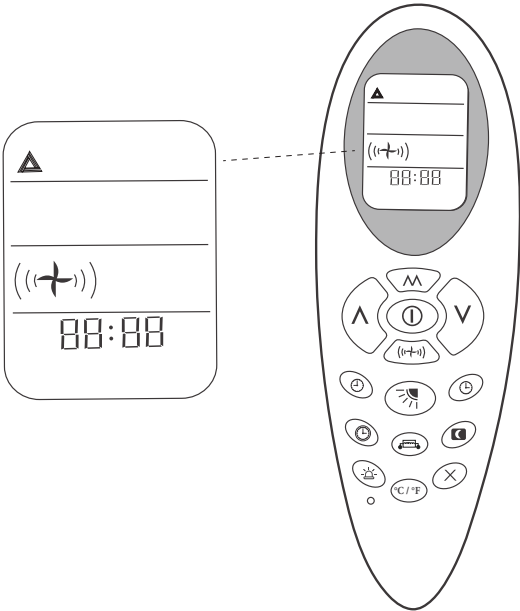





☞ Set temperature is selected based on the conditions given in the set point table on this page.


☞ The selected configuration will be retained in the system's memory when it is switched on again next.

Cooling Mode Operation

Cooling Mode Button Control:

See page 3 for an explanation of Cooling Mode functionality.

	Press the On/Off button to switch the machine on or off
	Press the Change Mode button to select COOL mode
	Use the temperature selection buttons to select a set point between 64 and 86°F.
	Press the fan speed button to select low, medium, high, or automatic fan speed

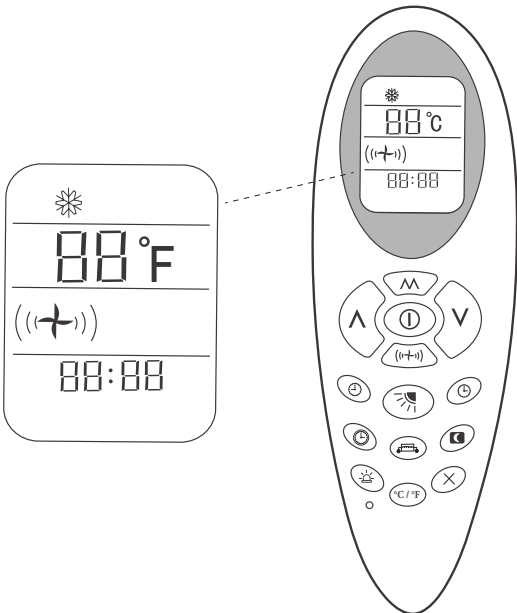

☞ The selected configuration will be retained in the system's memory when it is switched on again next.

OPERATIONAL INSTRUCTIONS


Dehumidification Mode Operation

Dehumidification Mode Button Control:

Dehumidification mode is a limited function that can help reduce the humidity/moisture of the room. However, this system is not intended for use as a dedicated dehumidifier and so this mode should not be left running for very long periods of time.

	Press the On/Off button to switch the machine on or off
	Press the Change Mode button to select DEHUMIDIFICATION mode
	Use the temperature selection buttons to select a set point between 64 and 86°F.
	Fan speed selection button is disabled in this mode.

The selected configuration will be retained in the system's memory when it is switched on again next.

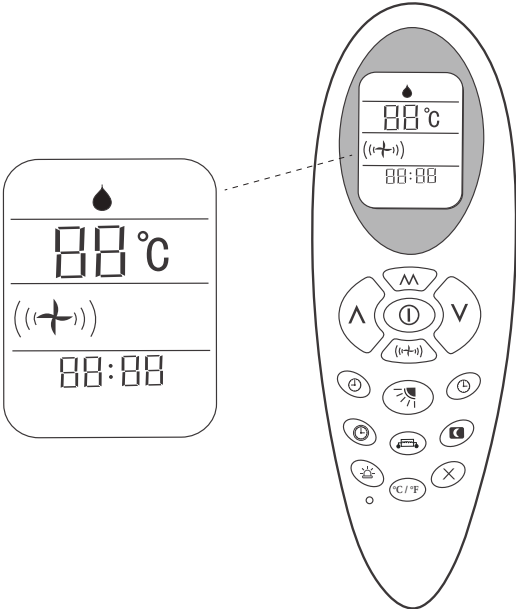


Ventilation Mode Operation

Ventilation Mode Button Control:

Fan-only mode is used to set the system to use only air ventilation and no heating or cooling.

	Press the On/Off button to switch the machine on or off
	Press the Change Mode button to select VENTILATION mode
	Use the temperature selection buttons to select a set point between 64 and 86°F.
	Press the fan speed button to select low, medium, high, or automatic fan speed

The selected configuration will be retained in the system's memory when it is switched on again next.

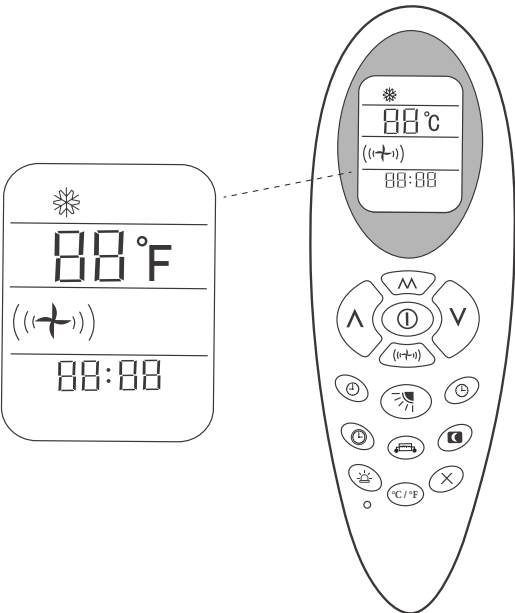

OPERATIONAL INSTRUCTIONS


Heat Pump Mode

❶ Heating Mode Button Control:

See page 3 for an explanation of Heating Mode functionality.

	Press the On/Off button to switch the machine on or off
	Press the Change Mode button to select HEAT PUMP mode
	Use the temperature selection buttons to select a set point between 64 and 86°F
	Press the fan speed button to select low, medium, high, or automatic speed

☞ The selected configuration will be retained in the system's memory when it is switched on again next.

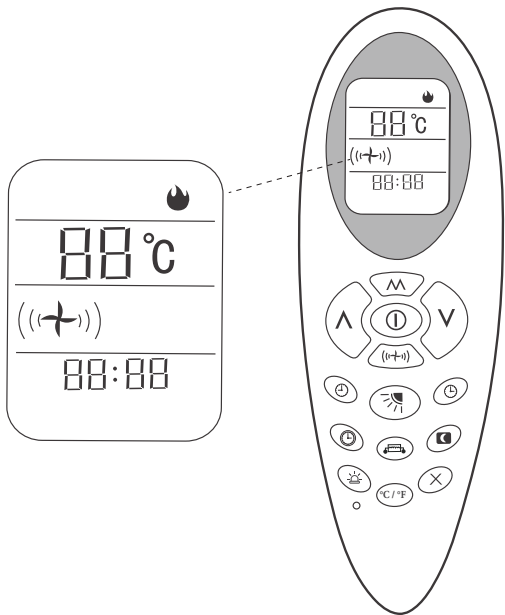


Night Mode Operation

❶ Night Mode Button Control:

Night mode is generally meant for periods of lower cooling requirements, such as during typical sleeping hours. This mode will result in decreased energy use, and can only be activated via remote control.

	Press the On/Off button to switch the machine on or off
	Press the Change Mode button to select the desired operation mode
	Press the night mode button to turn this feature on or off
	Use the temperature selection buttons to select a set point between 64 and 86°F.
	The system automatically keeps the fan speed to low when using this mode



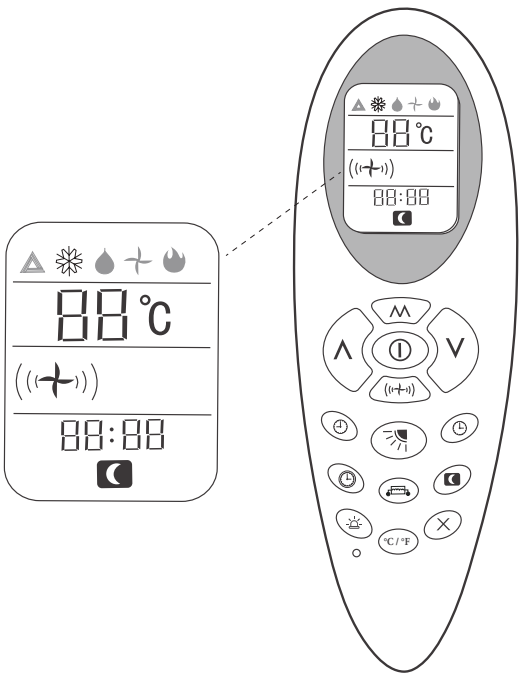





☞ The selected configuration will be retained in the system's memory when it is switched on again next.




OPERATIONAL INSTRUCTIONS

Timer On and Timer Off Mode Operation



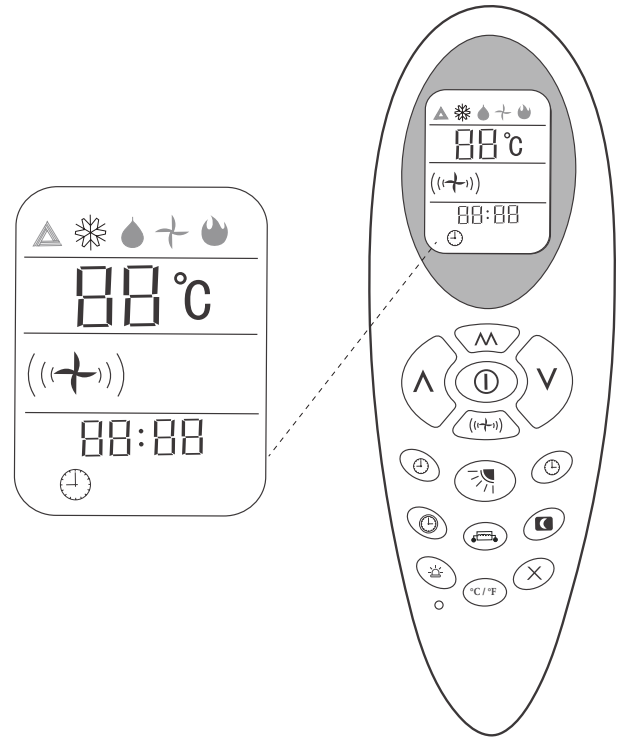


❗ How to Configure the Timer Off Feature:


	Press the On/Off button to switch the machine on
	Press the Change Mode button to select the desired operation mode
	Use the temperature selection buttons to select a set point between 64 and 86°F.
	Press the fan speed button to select low, medium, high, or automatic fan speed
	Press the Timer Off button to set the time at which the system turns itself off
	Use the temperature selection buttons to modify the time value selection
	Press the Timer Off button to confirm the selections entered
	Pressing the Timer Off button once more will deactivate the feature



☞ When the Timer Off button is first pressed, the symbol on the display will be flashing to signify the switch-off feature is being set. Pressing it once more will confirm the data entered, and the icon will remain solid to indicate that Timer Off is set. Pressing it a third time deactivates the Timer Off function.

❗ How to Configure the Timer On Feature:

	The system must currently be off to configure the Timer On function
	Press the Timer On button to set the time at which the system will come on
	Use the temperature selection buttons to modify the time value selection
	Press the Timer On button once more to confirm the selections entered
	Pressing the Timer On button for a third time will deactivate the feature

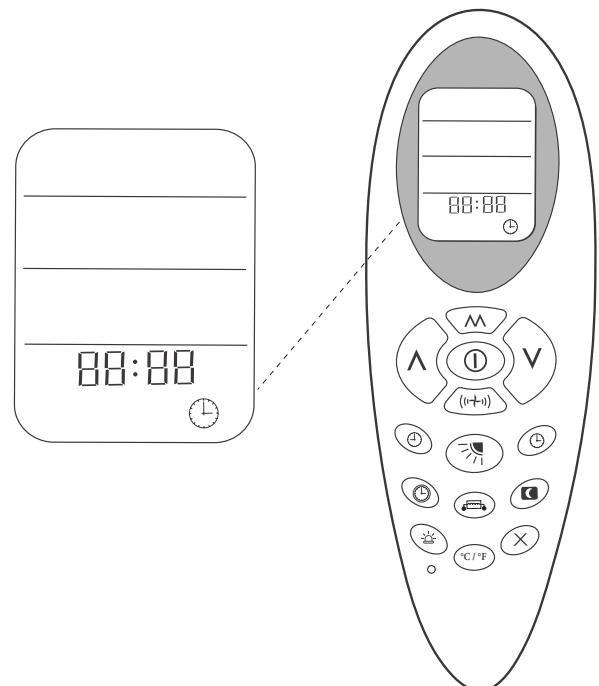

☞ When the Timer Off button is first pressed, the symbol on the display will be flashing to signify the switch-off feature is being set. Pressing it once more will confirm the data entered, and the icon will remain solid to indicate that Timer Off is set. Pressing it a third time deactivates the Timer Off function.


☞ The system starts in AUTO mode at time of Timer On activation.

OPERATIONAL INSTRUCTIONS

Handling the Remote Controller

❶ Installing/Changing the Remote Controller Batteries:

1. Remove the rear battery cover
2. If there are already batteries installed, remove them and insert two fresh AAA size batteries, ensuring to pay attention to the direction of their polarities (+/-).
3. Slide the rear battery cover of the remote back into place.
4. Check that the remote works properly by pressing the ON button. If on pressing the ON button no icon appears on the display, re-install the batteries and confirm that they are new and have been placed in the correct orientation
5. The system is now ready to be controlled.

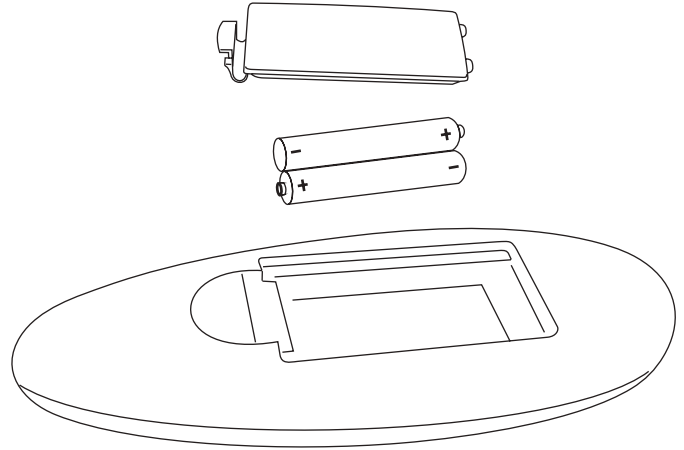


Description of the Wall Controller

❶ Introduction to the Wall Controller Buttons:

1. **Signal Receiver** - Aim the remote at this location for best results.
2. **ON/OFF Button** - Use this button to switch the system On or Off. It will start using the memory of the previous settings.
3. **MODE Button** - Use this button to change the operating mode of the system.
4. **FAN Button** - Use this button to select the desired fan speed.
5. **Up/Down Buttons** - Use these two buttons to configure the desired temperature.
6. **Functional LED Display** - This will tell you the current set point temperature setting.

After 10 seconds have elapsed, this will begin showing the current room temperature. Once 1 minute has elapsed, the display will turn off.
7. **WiFi Pairing** - Used for making first pairing to smartphone to allow for control from app.

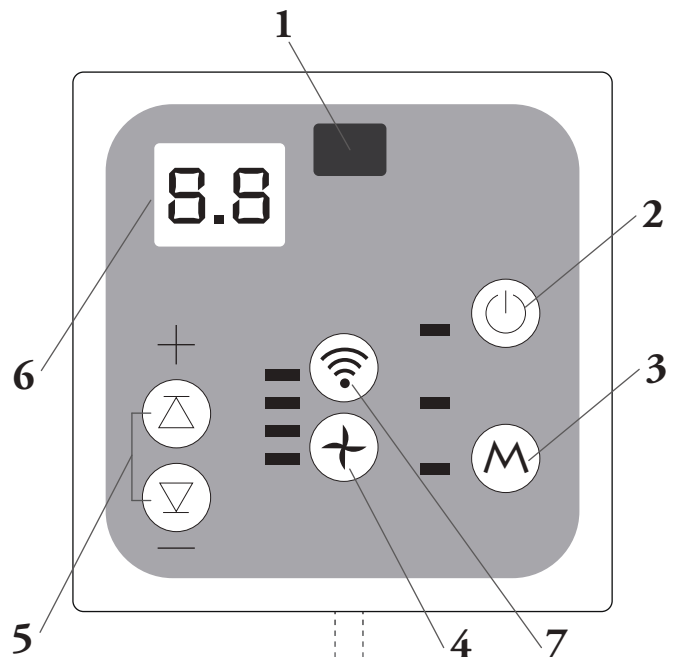

Download iOS App



Download Android App



Or, search for "Pioneer Airlink" in your smartphone's app marketplace...

OPERATIONAL INSTRUCTIONS




Routine Maintenance

❶ Periodic Cleaning Methods:

Using a soft and moist cloth, wipe down the surface area of the machine periodically in order to remove dust. Use clean water or a non-aggressive detergent if necessary. Do not use petrol or solvents to clean the machine. Repeat this process every season.

Remove the air filters and wash gently by hand with a detergent solution, allowing it to dry before inserting back into place. Repeat this process every 30-45 days.

If an optional active carbon filter is installed, it is advised to replace them yearly.

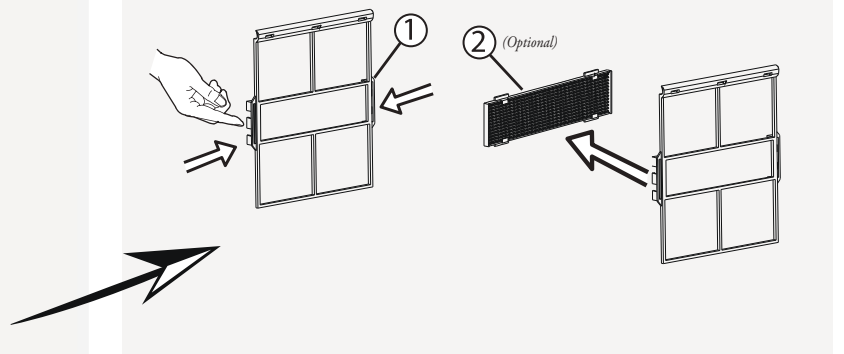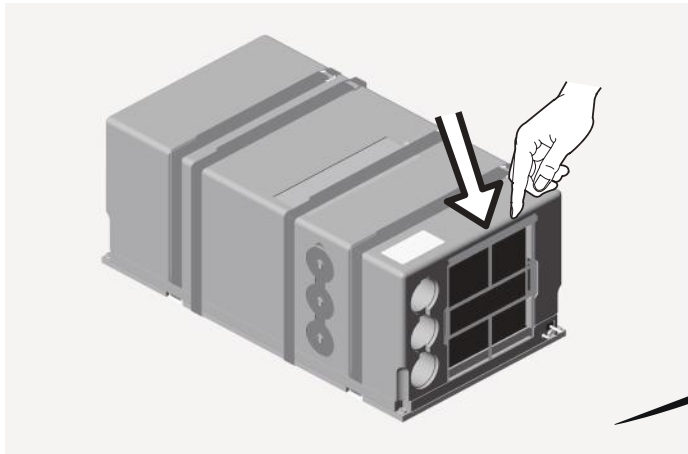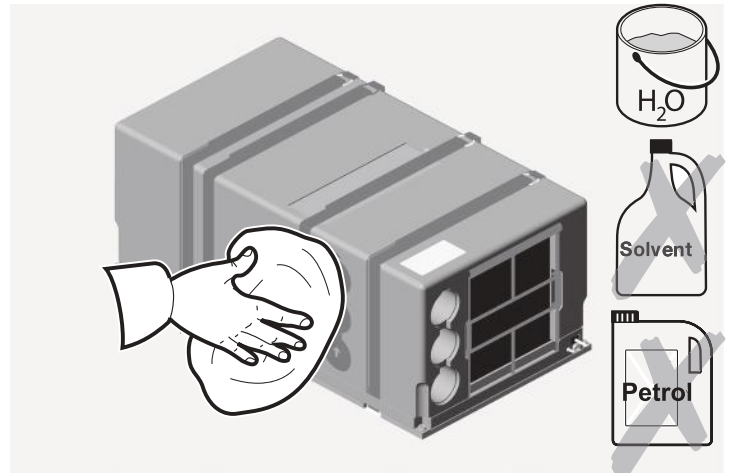


❷ Checking Best Practices:

Periodically inspect the system, particularly the points of drainage, as well as the air intake points.

Ensure that the system is able to drain successfully. If there are any sort of clogs, clear the blockage before continuing to operate the system.


Confirm that there are no obstructions in the floor openings. For best performance, it is important that the condenser-side return air can enter and exit the system without any restrictions.

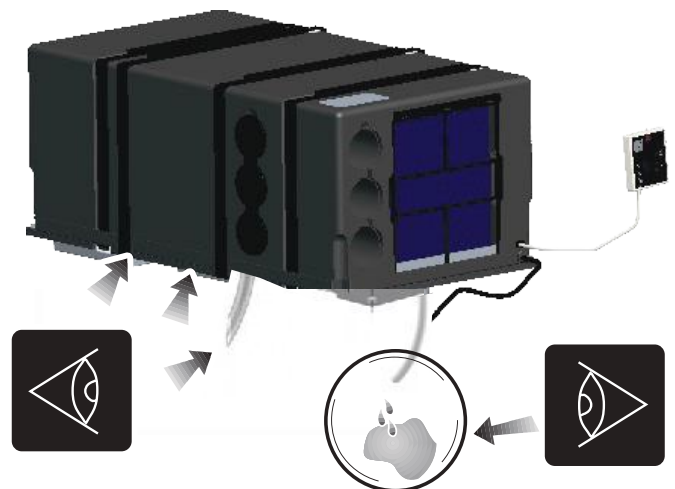

INSTALLATION INSTRUCTIONS

Technical Specifications

**All measurements in inches*

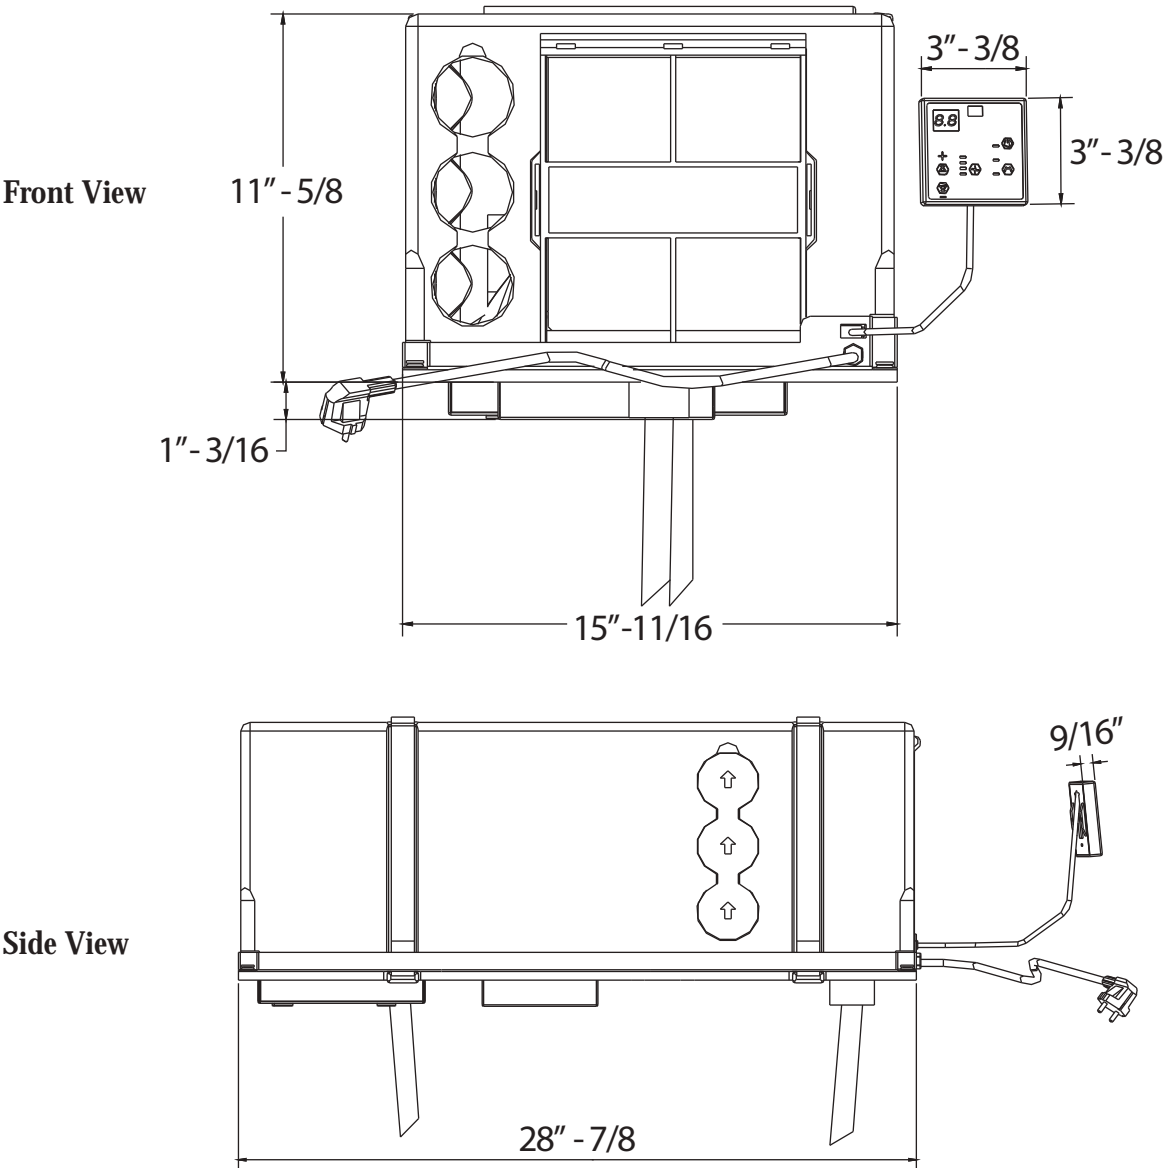

Description	Unit of Measurement	Model Number
		PYR009AZFRVBKE
Refrigerant Type/Amount	See System Nameplate	
Cooling Capacity	BTU/hour	9000
Heating Capacity	BTU/hour	9000
Cooling Operational Consumption	Amps - Watts	8.8 - 995
Heating Operational Consumption	Amps - Watts	7.2 - 810
Breakaway Current	Amps	20 (150ms)
Additional Heating Element	Watts	/
Electricity Supply	Volts - Hertz	115 - 60
Protection Class	IP	X5
Maximum Treated Air Volume	CFM	206
Maximum Volume (Recommended with Insulated Walls)	ft ³	1060
Weight	lbs	61.29
E.E.R.	-	2.5
C.O.P.	-	2.6
Ventilation	Speed No.	3
Operating Temperature	°F	19.4 - 104


INSTALLATION INSTRUCTIONS

Getting Started


Installation should only be performed by those with sufficient technical knowledge. In addition, the proper tools and equipment should be used for the installation process, to ensure the safety of themselves and those nearby.

📌 Unpacking and Handling the System:


Observe and follow any special instructions or warnings present on the outer packaging before attempting to handle the system.

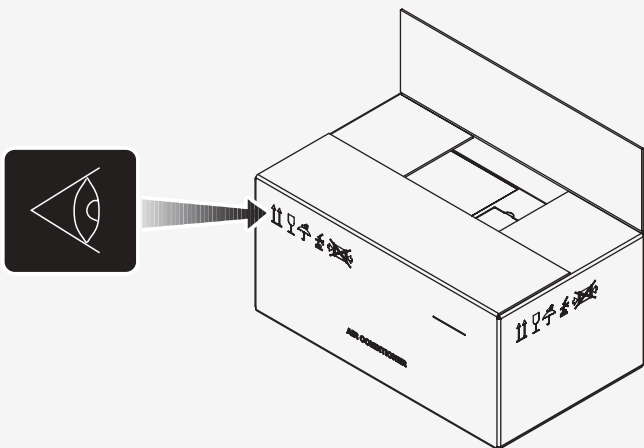


Using equal force on both sides, lift the machine out of the box.

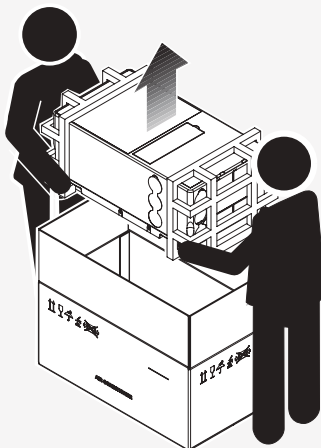


Lift the machine by using only the handles or the belts on the base.

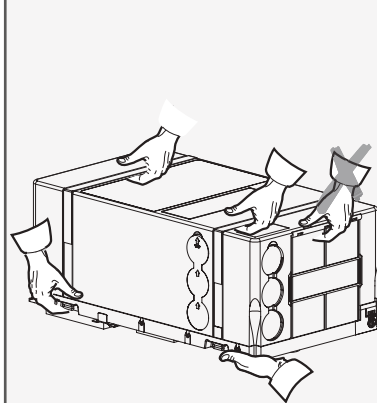

When resting the system on a surface, assure to distribute the weight of the machine by supporting it on both sides equally.

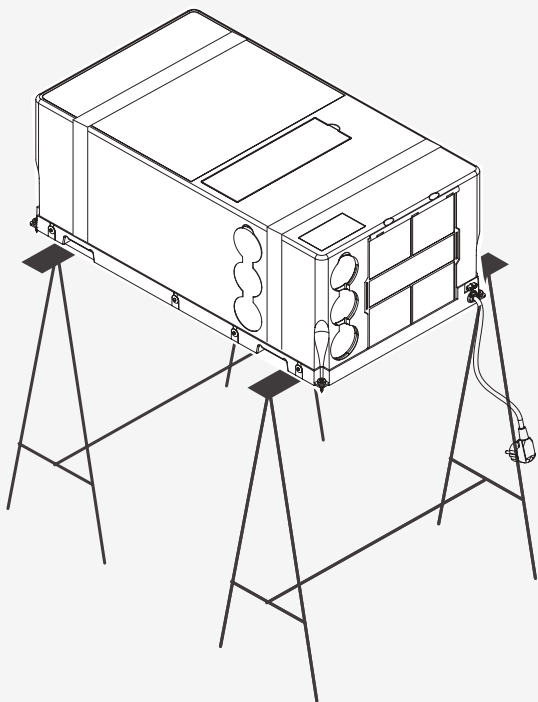



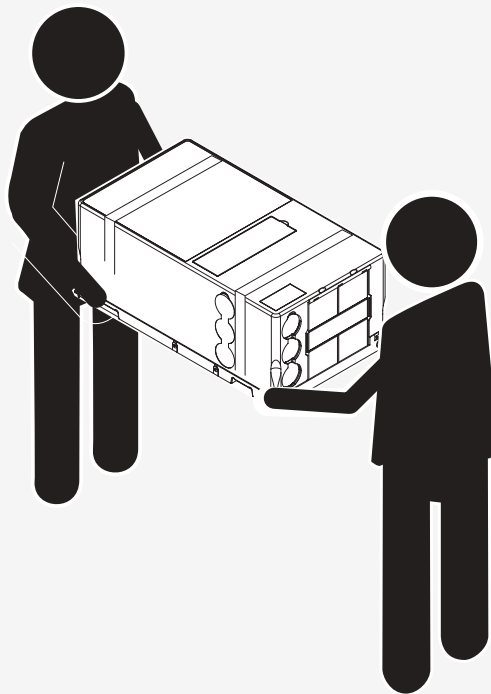




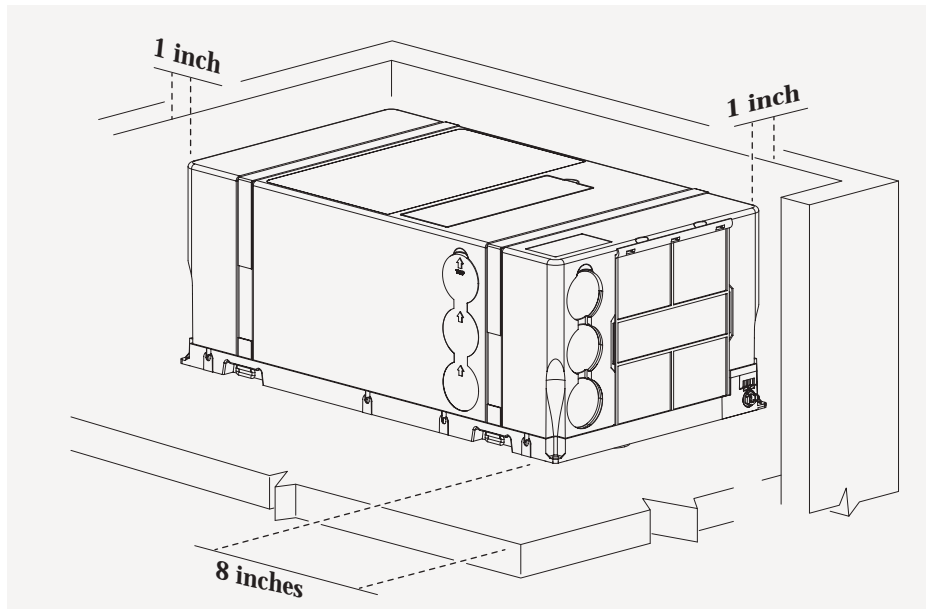
Seek the help of an additional person to assist in transferring the system to the final place of installation, being sure to do so slowly and carefully.





INSTALLATION INSTRUCTIONS

Selecting the Location of Installation

-  *In order for the machine to properly provide uniform climate control in the vehicle, it should be installed as close to the center as possible, inside a housing/compartment.*
-  Position the machine so as to ensure ease of access, and facilitation of both installation and disassembly.
-  Place the template used for assembly within the compartment intended for installation and verify the available space for the needed openings in the floor.
-  Avoid the frequent opening of doors and/or windows when not necessary.
-  *In order to minimize transmission of noise and/or vibration during operation, the machine must have a minimum clearance of 1 inch away from walls and fittings on either side.*
-  The machine must be installed on the floor, and as horizontally level as possible.
-  To allow for ease of filter replacement, keep a distance of 8 inches from the front of the machine and the interior wall of the compartment.



-  If incorporating any external compartments (such as false bottoms), the air that is to be treated must be drawn in from the vehicle's passenger compartment.
-  Drawing in air from outside can negatively impact the performance of the system significantly.

INSTALLATION INSTRUCTIONS

Preparation of Floor Openings and Unit Fastening


❗ Clearances and Procedure for Securing the System:

Installation of the machine involves creating openings in the floor. These openings must not be covered or obstructed by parts of the chassis frame or similar fixtures. It is also important to block the openings from splashes coming from the wheels, using a splash guard or something similar if necessary.

Take special care to ensure a gap of at least 1 inch is left between the machine and its adjacent walls. Use the provided kit to secure the machine to the interior floor.


Bottom View

*All measurements
in inches

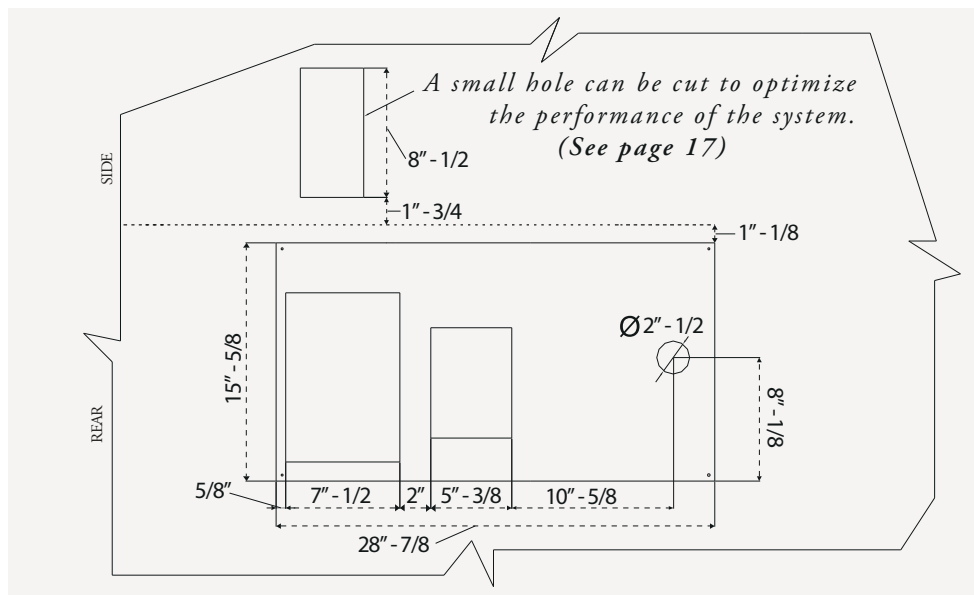

- ⚠ The machine must be installed completely level. There is a maximum angle of 10° to prevent condensation leakage.
- ⚠ Prior to cutting the holes, verify that there are no cables, gas pipes, or parts of the chassis frame or similar fixtures underneath or hidden below.
- ❗ Seal the machined surfaces of the floor openings with water-repellant solutions.


*The provided kit is used
to secure the machine to
the interior floor.*

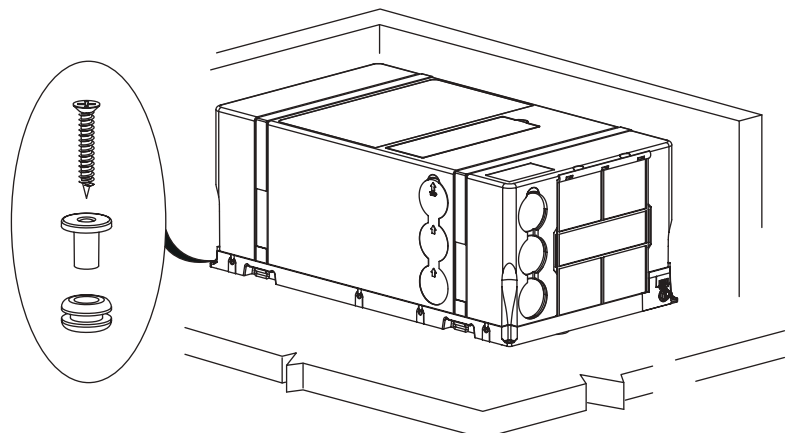

INSTALLATION INSTRUCTIONS


Securing the System to the Floor

The following pieces of hardware (included) will be used to fix the system to the floor:

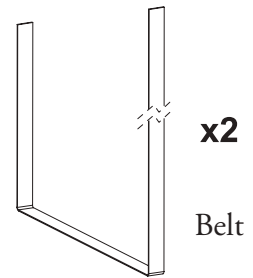

There are three different methods of fixing the system to the floor using different combinations of the above hardware, depending on preference, explained later.

❶ Preparing the Bottom Openings (Top View):

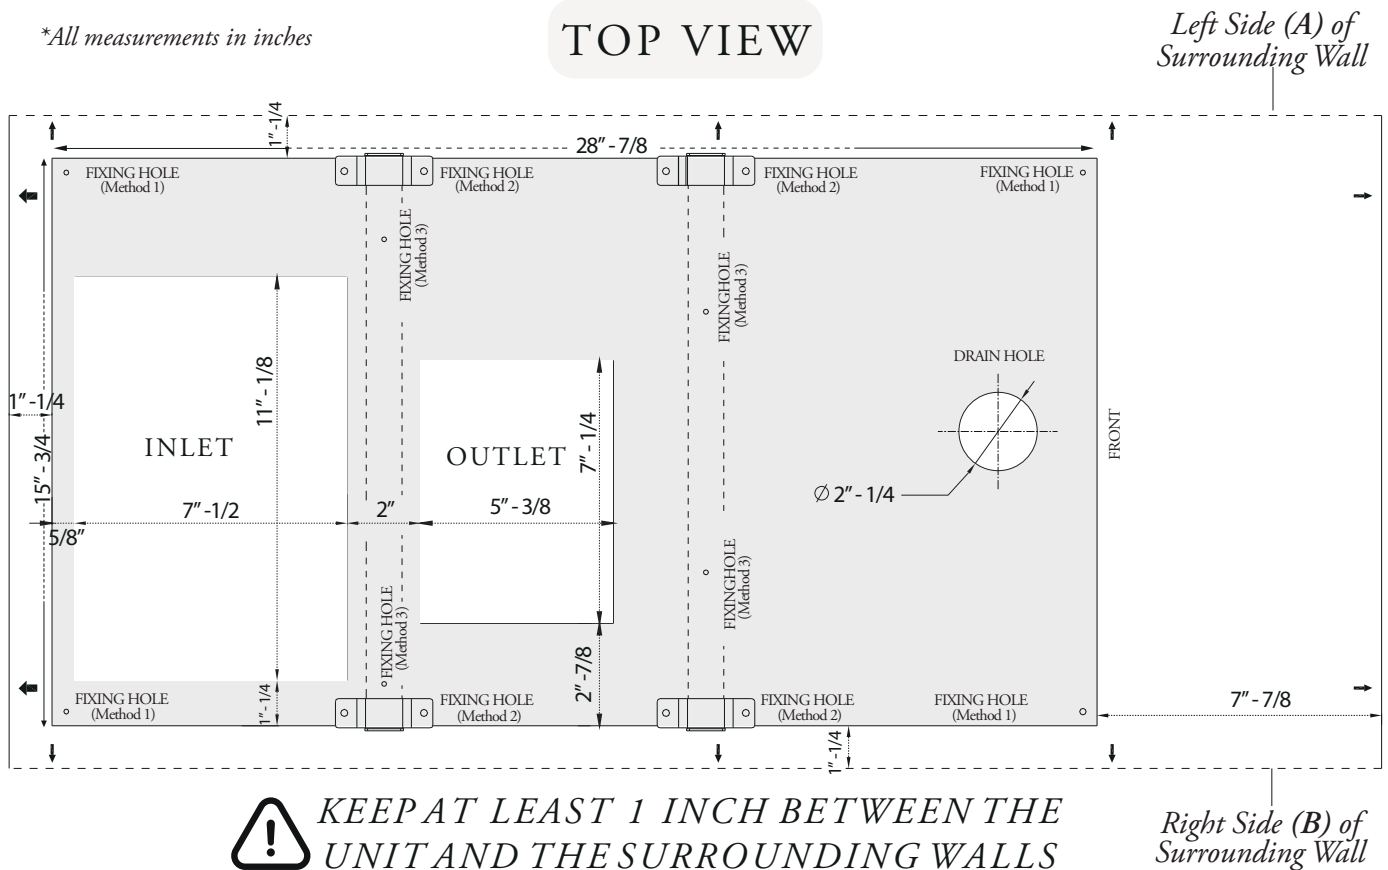

1. Use the included template as depicted above to mark the locations of the openings.
2. Carefully cut out the openings at the bottom using a reciprocating saw or other cutting tool.
3. Drill out the necessary 2" - 1/4 diameter condensate drainage hole using a hole saw.
4. Mark the locations of the fastening screws and the brackets using the above template after selecting the desired method of fixing the system to the floor.

INSTALLATION INSTRUCTIONS

(Optional) Creating a Side Cutout for Optimal Efficiency

If possible, create an additional cutout on the side of the housing/compartments as depicted below, in order to increase the efficiency at which the system operates. This process is recommended but is not necessary/required.

❶ Installation of the Side Cutout Opening:

**All measurements in inches*



LEFT SIDE (A) VIEW

Skip to next page if this side cutout is not feasible.

Bottom Side/Corner of Housing

Remove the side cover EPP cap, and prepare the air outlet by using adhesive foam to insulate around in preparation for sealing.

❶

❷

Cut out the side hole using the given measurements above at the proper location using a reciprocating saw or other cutter.

Fix the grille into place on the newly made side cutout.

❸


The newly made cutout is ready for system installation.

❹

INSTALLATION INSTRUCTIONS

Fastening the System Into Place

❶ Three Methods Are Available for Fastening:

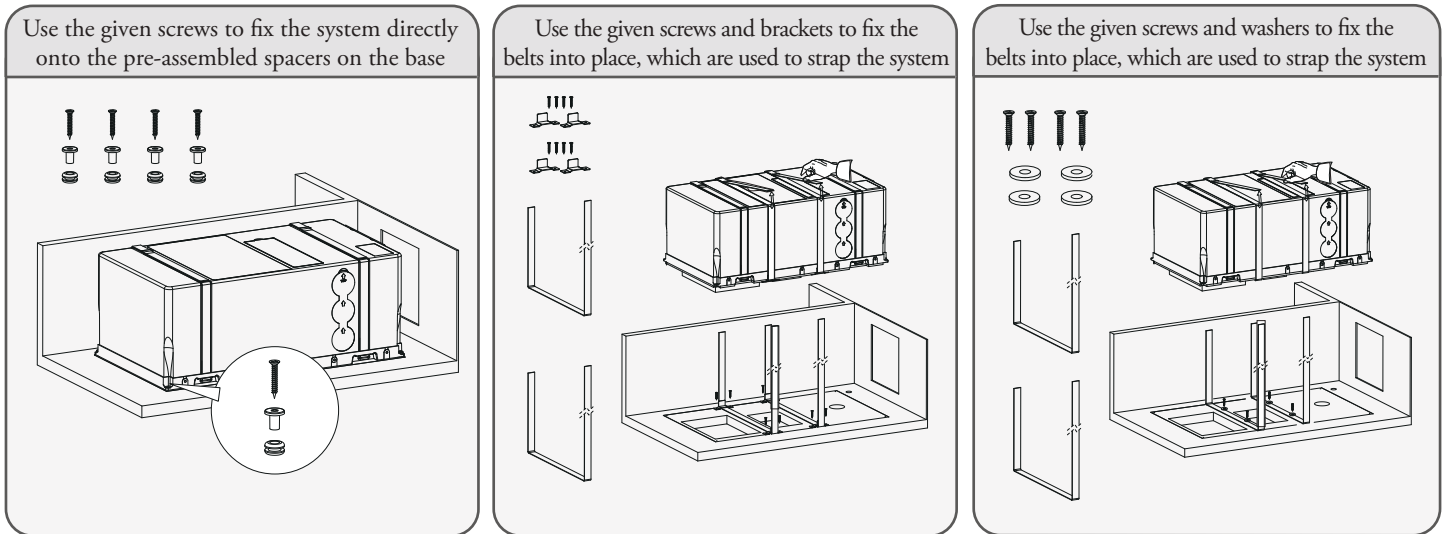


Select the method that works best for the installation and proceed.

- Use the given screws to fix the system directly onto the pre-assembled spacers on the base.




OR

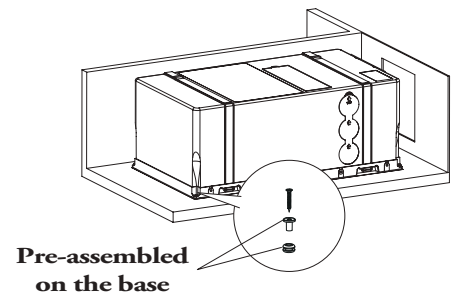


- Use the given screws and brackets to fix the belts into place, which are used to strap the system.



x2

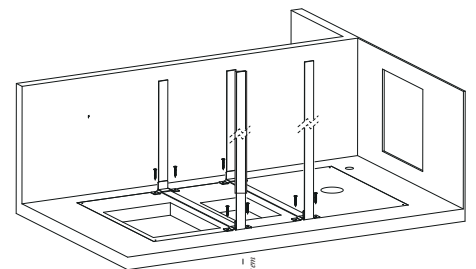


OR

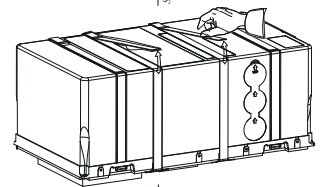

- Use the given screws and washers to fix the belts into place, which are used to strap the system.



x2

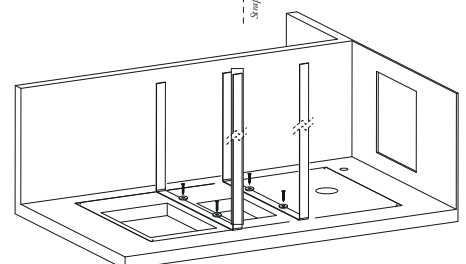

INSTALLATION INSTRUCTIONS

Placement of the Wall Thermostat

Locate the wall thermostat, handheld remote controller, batteries, thermostat support bracket, and extension cable.




These items are typically found within the hidden compartment on top of the system itself during first installation.

A $3/4"$ size hole must be drilled in order to pass the cables through. The wall thermostat cable will pass through this hole from behind.

To locate where to make the hole, first find the needed **X** value by placing the $3"-3/8"$ square wall thermostat against the wall. The length from the side edge of the thermostat to the side edge of the wall is **X**. The same applies for finding **Y** on the vertical axis.

The center of the hole will be $X+1"-3/4"$ inward from the side, and $Y+1"-1/8"$ inward from the top.

Using two wood screws to fix the bracket of the thermostat to the wall, connect the extension cable to the wall thermostat and place the thermostat onto the support bracket.

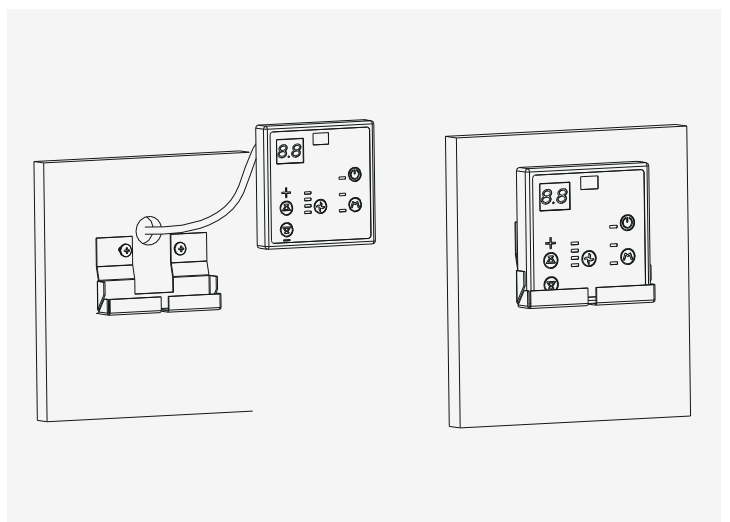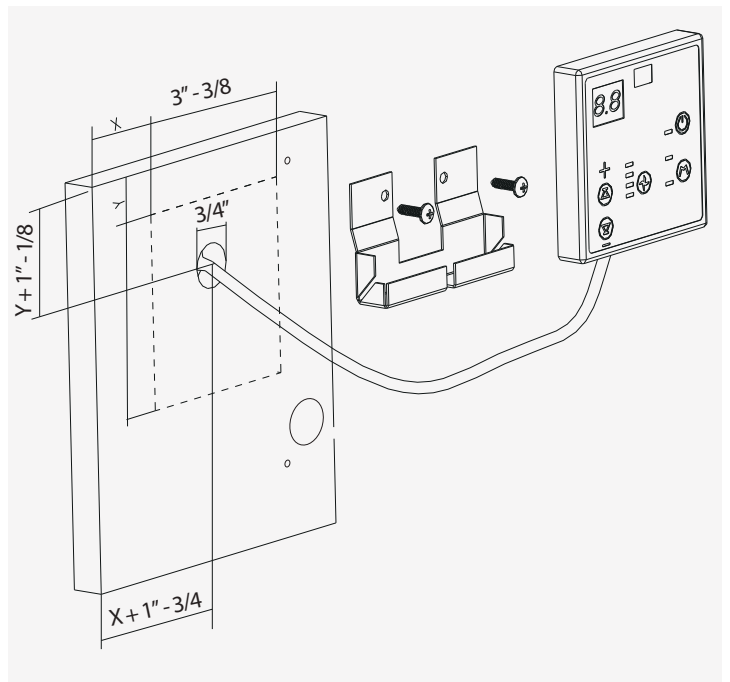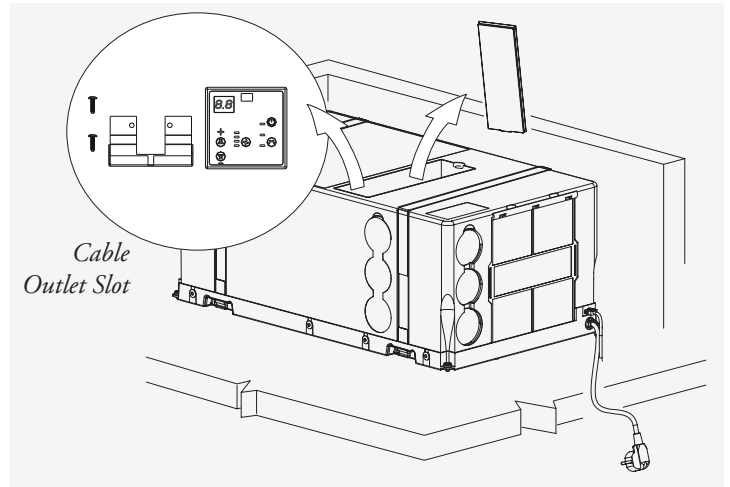

INSTALLATION INSTRUCTIONS

Recirculation Air Compartment Opening

❶ Final Cutout Opening for Recirculation Air:


Create an additional hole in the compartment where the system is installed, in order to permit recirculation of the internal air.

It would be best to locate the cutout near to the front of the machine. If the opening cannot be made near the machine, ensure that the air flow is not obstructed by anything and create an air duct between the opening and the machine, if necessary.

The cutout should be roughly 50 in² in size, and the hole will be closed with a grille supplied.

Only allow this recirculation air to enter the compartment from within the passenger section. If the air entering this opening is from the outside, the performance of the machine would diminish.

Finally, install the condensation drain tubes provided with the system onto the bottom ports.

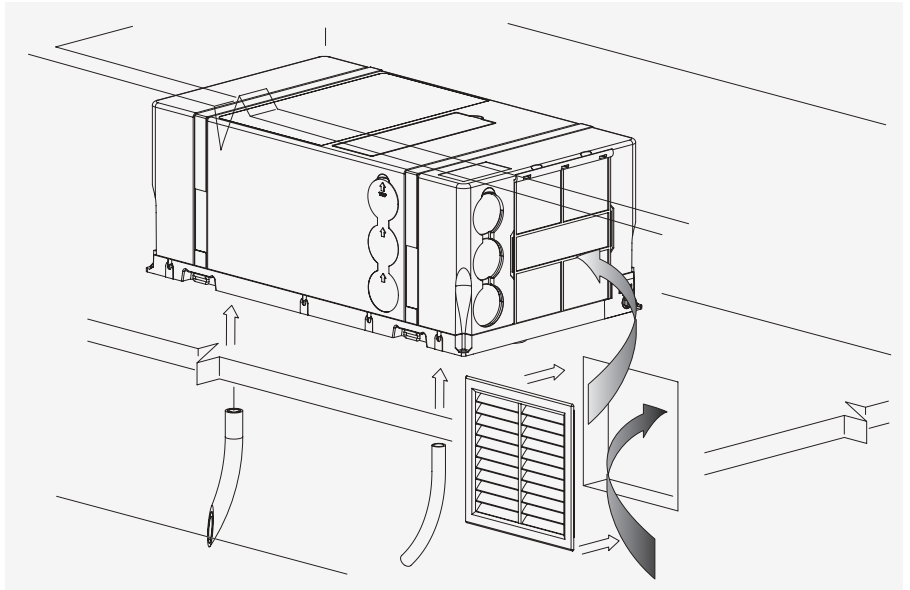

Air Ducting

❷ Ductwork Best Practices:

Craft the ducting used to distribute the air using trade parts which are **not** included with this system supply.

It is advised to use cardboard pipe for air conditioning, with an aluminum core and external PVC covering.

The nominal Inner Diameter should be sized up to 2"-3/8, and the Outer Diameter up to 2"-1/2.


The tapered hole on the air outlet allows the ventilation ducts to be joined by pressing them together.

Use either the outlet on the coil side, or the side outlet (by removing the guard and closing the front holes) to connect the ducts.

For optimal efficiency, it is advised to:

- Route the air ducts as short and flat as possible.
- Do not exceed 16 ft in duct length on a given connection.
- Do not exceed 33 ft in total combined attached duct length.
- Avoid laying the air ducts near any sources of heat.

☞ *Avoid condensation on the ducting by insulating the pipes with insulation material (sold separately).*

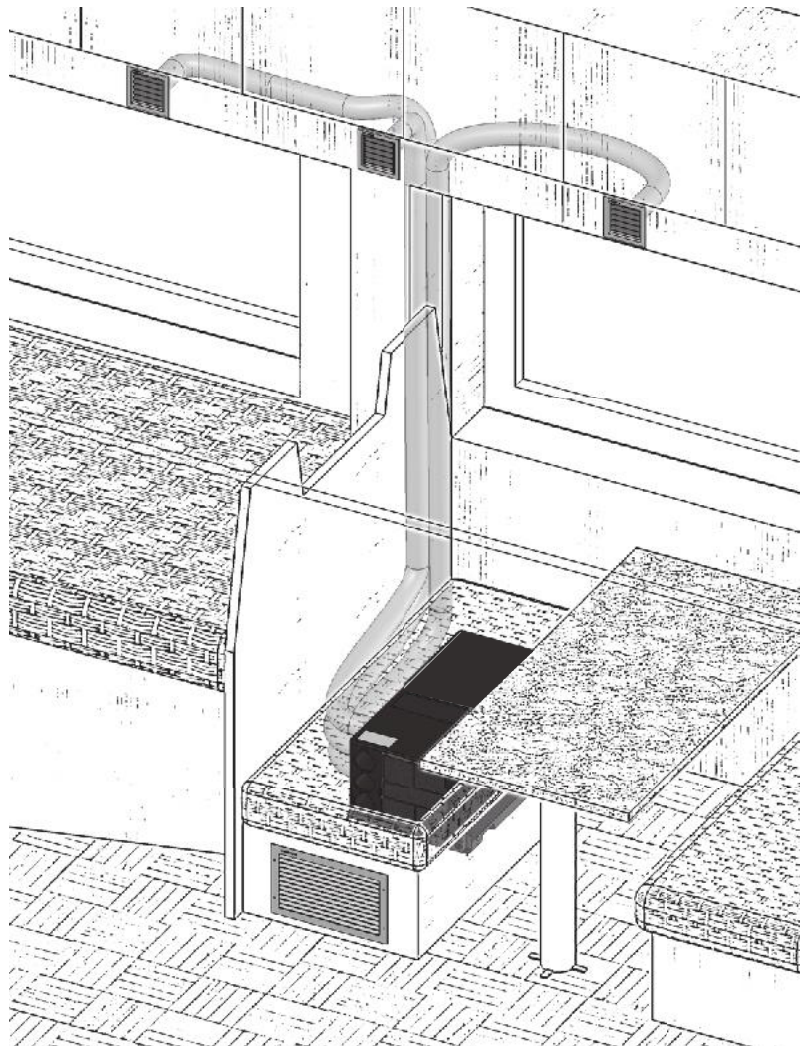

INSTALLATION INSTRUCTIONS

Electrical Hookup

❶ Connection and Powering Up of System:

Connect the receiver extension socket to the system, and power up the machine by inserting the included power plug into a 115V/60Hz outlet.


A 12 VDC connection is also connected from the vehicle's battery to supply power to the unit's PCB. Use the yellow wire next to the AC power cord to connect to the vehicle battery to facilitate power to the heat pump system's command control module.

0.5A is sufficient for the 12 VDC connection.


Before switching on, ensure that the electrical supply and the extension used are capable of withstanding the power input required by the system (*see technical data and/or nameplate*).

The installation process is now complete.

For any troubleshooting steps, please see Page 22.

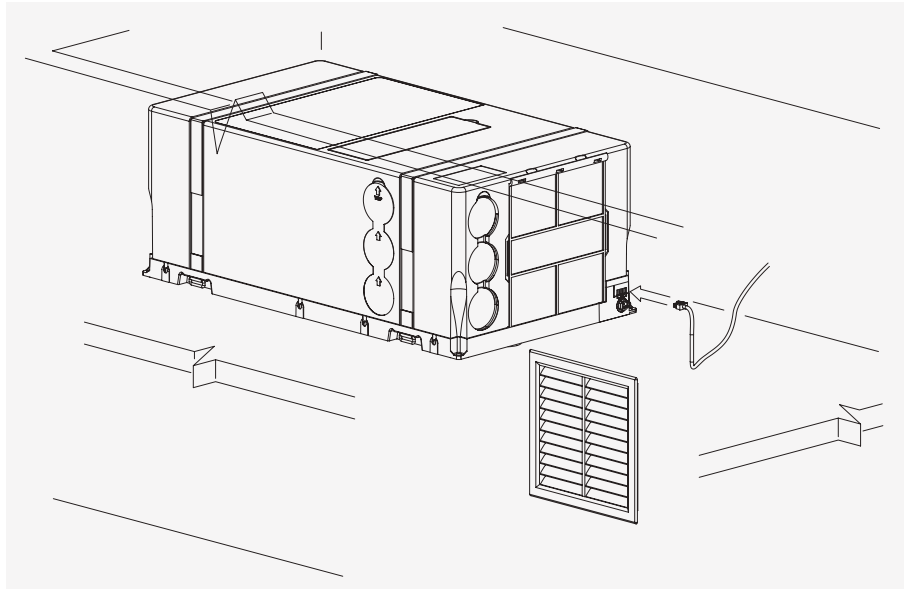

Simplified Wiring Diagram of PYR009AZFRVBKE

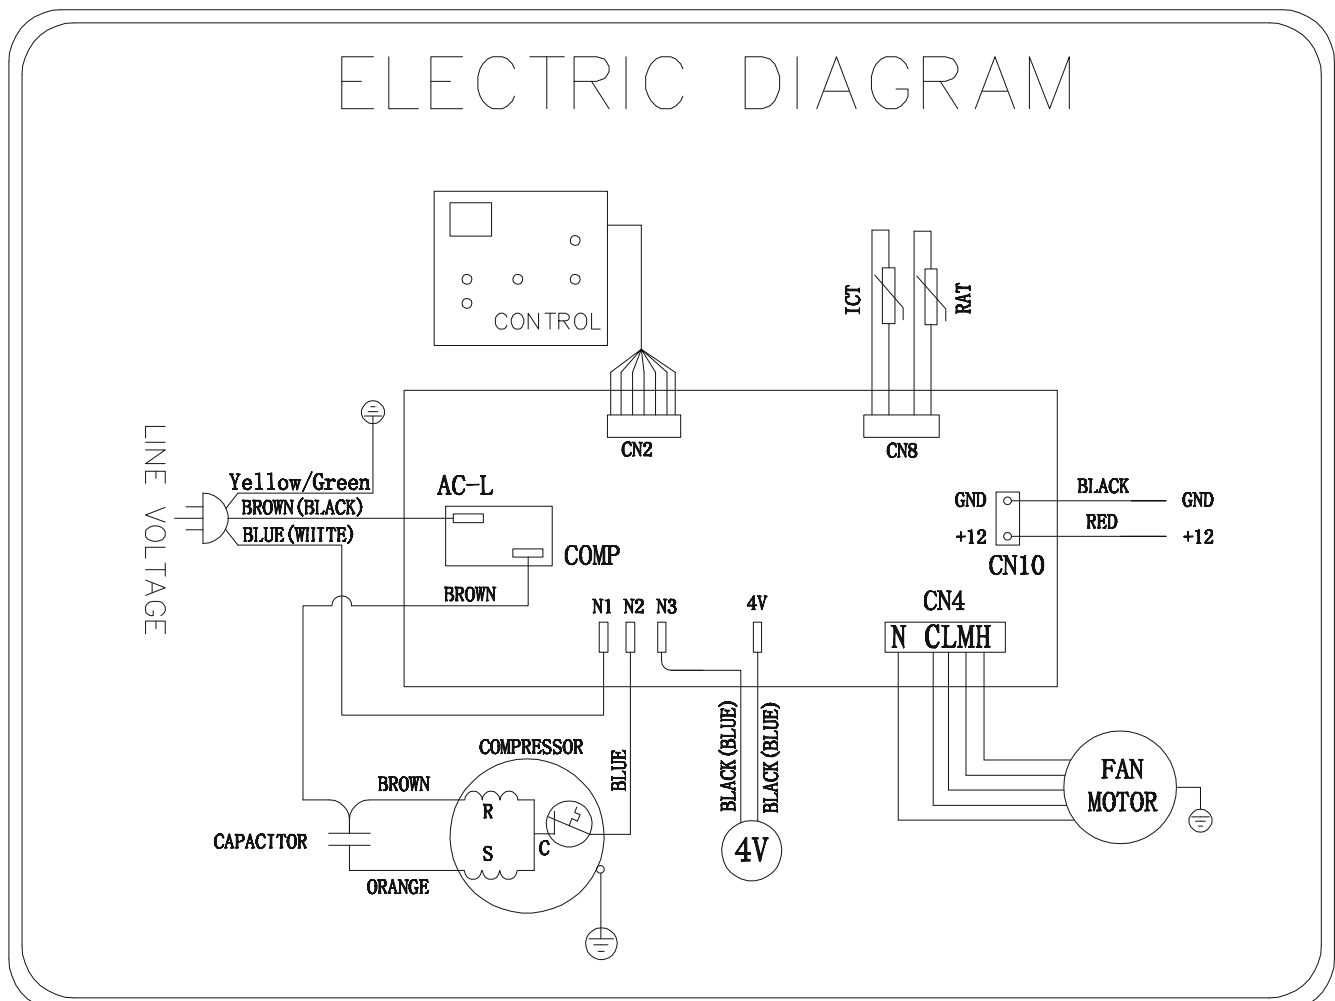

TROUBLESHOOTING, MAINTENANCE, RECYCLING

Troubleshooting and Diagnosis

MALFUNCTION	POSSIBLE CAUSES
If the appliance is not cooling...	The current temperature is lower than 64°F
	The set point temperature has been satisfied
	Defective thermistor or thermal protection
	Low refrigerant
	The compressor is damaged
	The heat exchanger coils are dirty
	The external fan is defective
	The MODE button is not in the right position
If the appliance is not heating...	The current temperature is higher than 86°F
	The set point temperature has been satisfied
	Defective thermistor or thermal protection
	Low refrigerant
	The compressor is damaged
	The heat exchanger coils are dirty
	Damaged/Stuck 4-Way Valve
	The MODE button is not in the right position
If the airflow is insufficient, or no longer circulates inside the vehicle...	The heat exchanger coils are dirty
	The internal/interior fan is malfunctioning
	The air filter is dirty/obstructed
If there is water seeping into the vehicle...	The condensate drain hose is cracked, clogged, or is not secured onto the exhaust port
If the machine does not start...	Defective thermal protection
	Damaged Compressor
	There is insufficient power going into the unit
	The voltage is too low (less than 100V)
	The electric condenser is damaged/malfunctioning
If the machine stops working...	Defective thermistor or thermal protection
	The heat exchanger coils are dirty
	The air filter is dirty/obstructed
	The external fan is defective
	The voltage is too low (less than 100V)
	The electric condenser is damaged/malfunctioning

Special Supplemental Maintenance:

For optimal efficiency, it is recommended to have your dealer/contractor perform designated cleaning prior to using, on the heat exchange coils and the condensation drain holes.

TROUBLESHOOTING, MAINTENANCE, RECYCLING

European Disposal Guidelines


This appliance contains refrigerant and other potentially hazardous materials. When disposing of this appliance, the law requires special collection and treatment. Do not dispose of this product as household waste or unsorted municipal waste.

When disposing of this appliance, you have the following options:

- Dispose of the appliance at a designated municipal electronic waste collection facility.
- When buying a new appliance, the retailer takes back the old appliance free of charge.
- The manufacturer takes back the old appliance free of charge.
- Sell the appliance to certified scrap metal dealers.

Special Notice

Disposing of this appliance improperly, or in other natural surroundings, endangers your health and is bad for the environment. Hazardous substances may leak into the ground water and enter the food chain. Please follow proper disposal protocol.

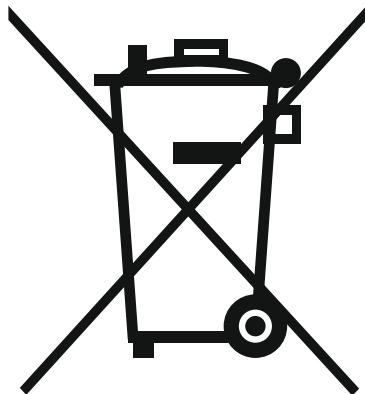

The design and specifications of this product are subject to change without prior notice as development continues. Consult with the sales agency or manufacturer for details. Refer to the equipment nameplate for all other applicable specifications.



is a registered trademark of Parker Davis HVAC International, Inc.

Parker Davis HVAC International, Inc.
3250 NW 107 Avenue, Doral, FL 33172 - USA
Tel : (305) 513-4488
Fax : (305) 513-4499
E-mail : info@pdhvac.com
Website : www.pdhvac.com

Pioneer product line, parts, and supplies are available online for convenient ordering at:
www.highseer.com
www.pioneerminisplit.com

Scan the below code to visit our support page where you can find more installation materials:

