


1. Open the front panel.




2. Take off the e-box cover screw, and take off the e-box cover.



3. Slide out the indoor PCB, until find the CN16 port, which is near the air-outlet position.

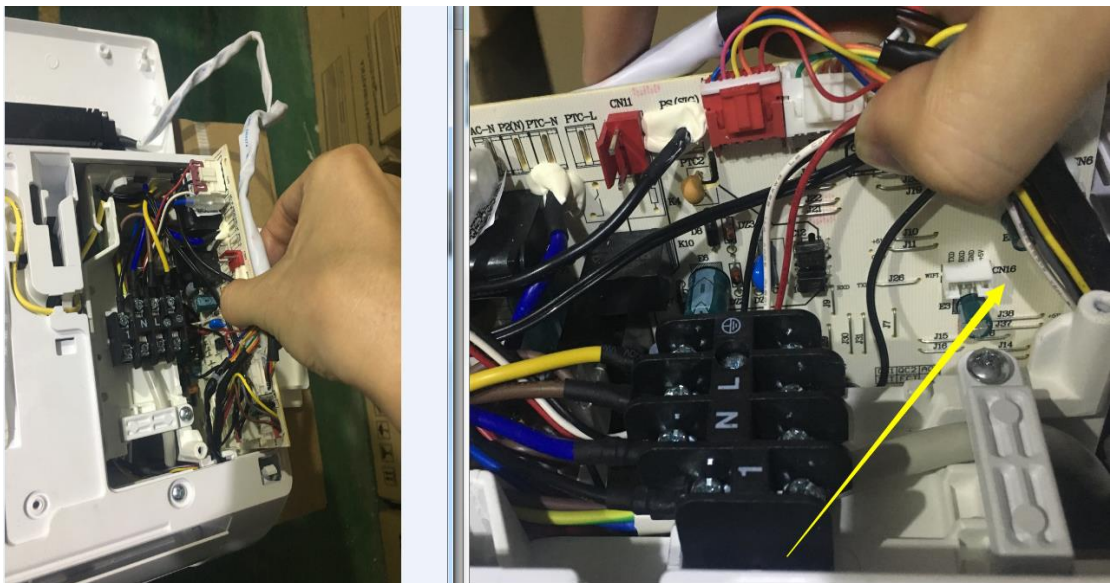

4. Plug in the wifi module to the CN16 port on the PCB. Be sure the right direction.

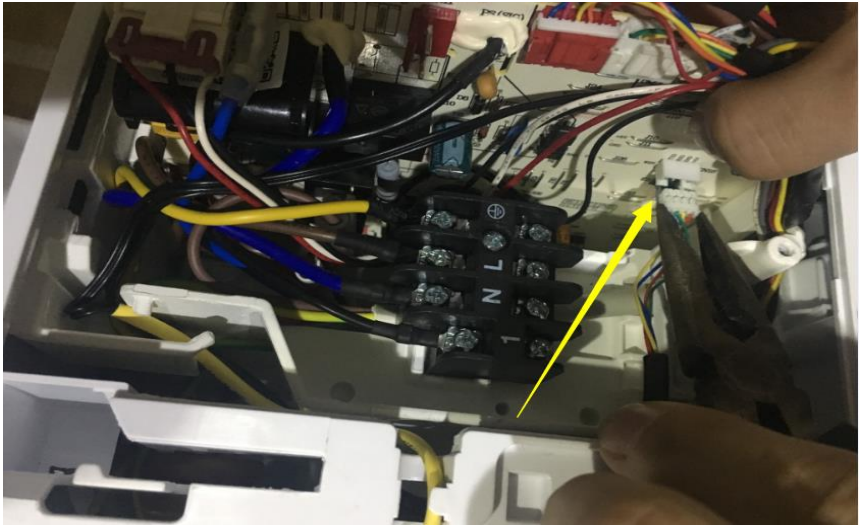

5. Put the PCB back on right place, line the cable safety.



6. Screw on and fix the e-box cover.



7. Screw on and fix the wifi module on panel frame.



8. Close the front panel.

